

[Manuals.plus](#) /

> [Intex](#) /

> Intex Dura-Beam Standard Prestige Air Mattress User Manual

Intex 64112E

Intex Dura-Beam Standard Prestige Air Mattress User Manual

Model: 64112E

INTRODUCTION

Thank you for purchasing the Intex Dura-Beam Standard Prestige Air Mattress. This manual provides essential information for the safe and efficient use, setup, operation, and maintenance of your air mattress. Please read it thoroughly before use and retain it for future reference.



Image: Three Intex Dura-Beam Standard Prestige Air Mattresses, highlighting the sleek design and integrated pump.

SAFETY INFORMATION

Important: Always refer to the packaging for specific safety warnings and instructions. Failure to follow these guidelines may result in injury or damage to the product.

- Do not overinflate the air mattress.
- Keep away from sharp objects and heat sources.
- Ensure the area is clear of debris before inflation and use.
- This product is not a toy. Keep children supervised around the air mattress.
- Do not jump on the air mattress.

SETUP AND INITIAL INFLATION

Follow these steps for proper setup and initial inflation of your Intex Dura-Beam air mattress:

1. Unpack the air mattress and lay it flat on a clean, level surface, free from sharp objects.
2. Locate the built-in USB electric pump.
3. Connect the USB pump to a 5V USB-A power source rated 2 Amp or higher (e.g., phone charger, 12V USB car charger, or portable battery). *Note: Power source is not included.*

4. Turn the pump dial to the "Inflate" position. The mattress will begin to inflate.
5. Inflate until the mattress is firm to the touch. Do not overinflate.
6. Turn the pump dial to the "Off" position once inflated.



Image: Detail of the built-in USB electric pump and its connection point.

**USB
POWERED
PUMP**



VERSATILE & CONVENIENT

Powered by 5V USB-A power source
rated **2 Amp and higher**
(Not Included)



USB Wall Charger



12V USB Car Charger



Portable USB Charger



5V/2A USB Port

Image: Examples of versatile and convenient USB power sources for the pump.

Important Note on Material Stretch: At first inflation, the material of the air mattress will stretch. This is a normal characteristic and is sometimes misinterpreted as a leak. You may sense a loss of pressure; this is simply the bed stretching. Simply re-inflate the bed again as needed. The bed will fully settle within 2-3 nights of use.

INTEX®


Relax. It's not leaking.




When you first inflate your airbed,
the material will

STRETCH

which is sometimes
misinterpreted as leaking.

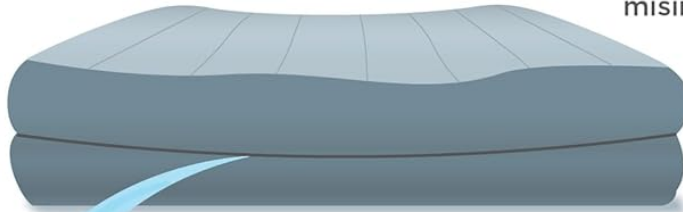

You will sense a loss of pressure,
that's just the bed stretching.

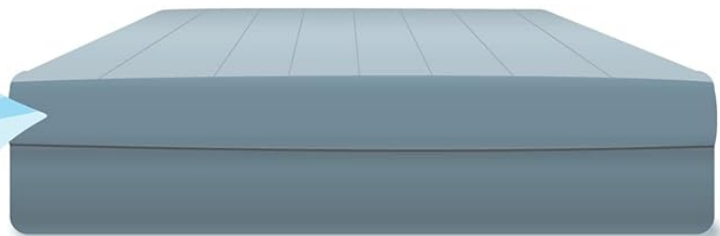

Simply re-inflate the bed again.

Do so as needed until the bed fully settles,
usually in 2-3 nights.



BEFORE RETURNING TO STORE PLEASE READ THE FOLLOWING

Image: Visual explanation of material stretching and re-inflation process.

OPERATING INSTRUCTIONS

Using your Intex Dura-Beam air mattress is straightforward:

- **Inflation:** To inflate, connect the USB pump to a power source and turn the dial to "Inflate".
- **Deflation:** To deflate, turn the pump dial to the "Deflate" position. The pump will actively remove air from the

mattress.

- **Comfort Adjustment:** You can adjust the firmness of the mattress by adding or removing small amounts of air using the pump.



Image: Illustrates the comfort and internal Fiber-Tech beam construction of the mattress.

MAINTENANCE AND STORAGE

Proper maintenance ensures the longevity of your air mattress:

- **Cleaning:** The velvety sleeping surface is easy to clean. Use a damp cloth and mild soap to wipe down the surface. Do not use harsh chemicals or abrasive cleaners.
- **Drying:** Ensure the mattress is completely dry before folding and storing to prevent mold or mildew.
- **Storage:** Deflate the mattress completely. Fold or roll it neatly and store it in a cool, dry place, away from direct sunlight and extreme temperatures. Keep it away from pets and rodents.
- **Puncture Prevention:** Avoid placing the mattress on rough or uneven surfaces. Keep sharp objects away from the mattress.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Mattress seems to be losing air / feels soft after initial inflation.	Material stretching (normal for new airbeds).	Re-inflate the mattress. The material will settle within 2-3 nights of use. This is not a leak.
Pump not working.	No power or insufficient power source.	Ensure the USB power source is 5V USB-A rated 2 Amp or higher and is properly connected. Try a different power source.
Mattress is not firm enough.	Under-inflated.	Add more air using the built-in pump until desired firmness is achieved.
Mattress is too firm.	Over-inflated.	Slightly deflate the mattress using the pump until desired comfort is achieved.

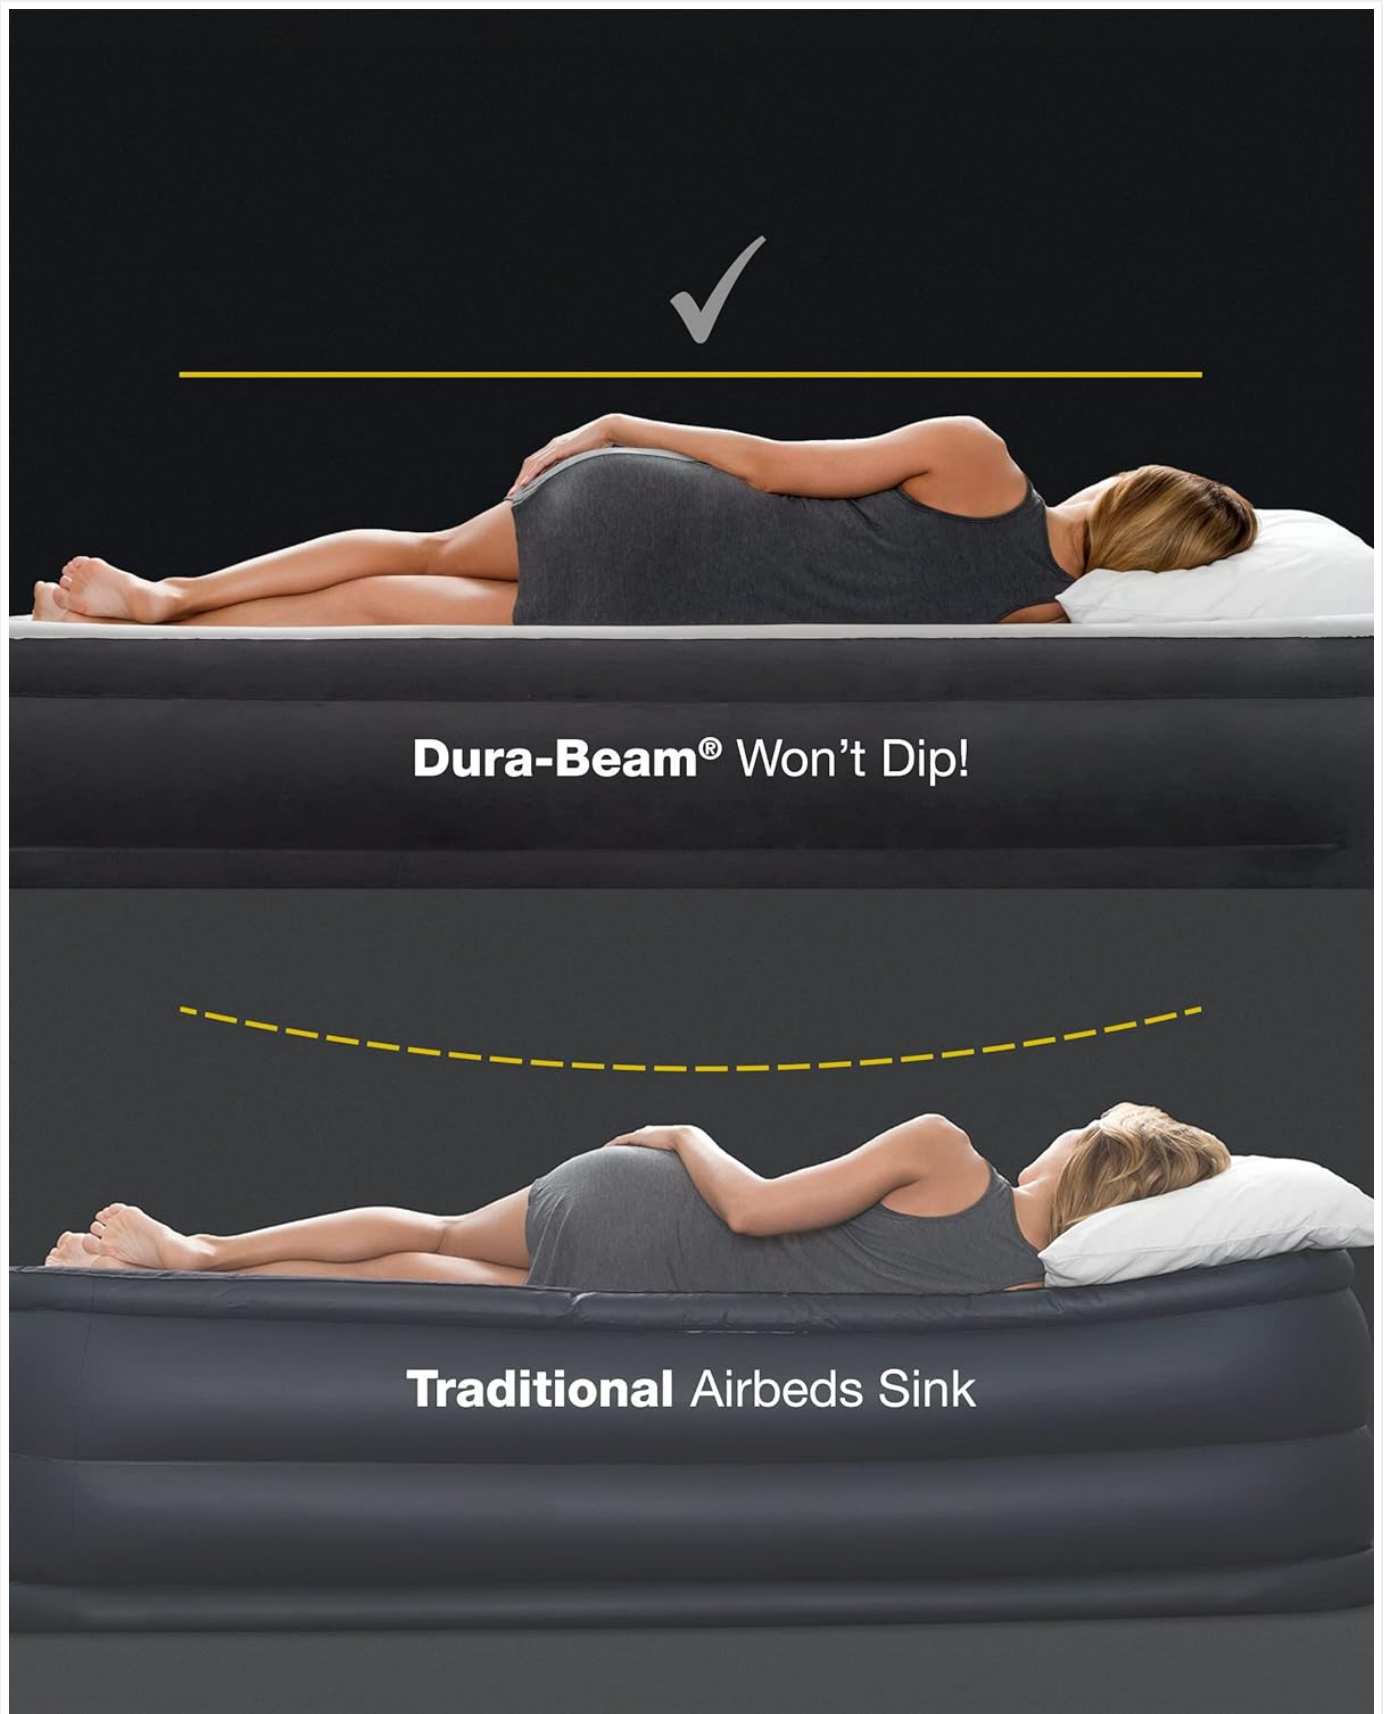 


Image: Demonstrates how Dura-Beam construction prevents sagging compared to traditional airbeds.

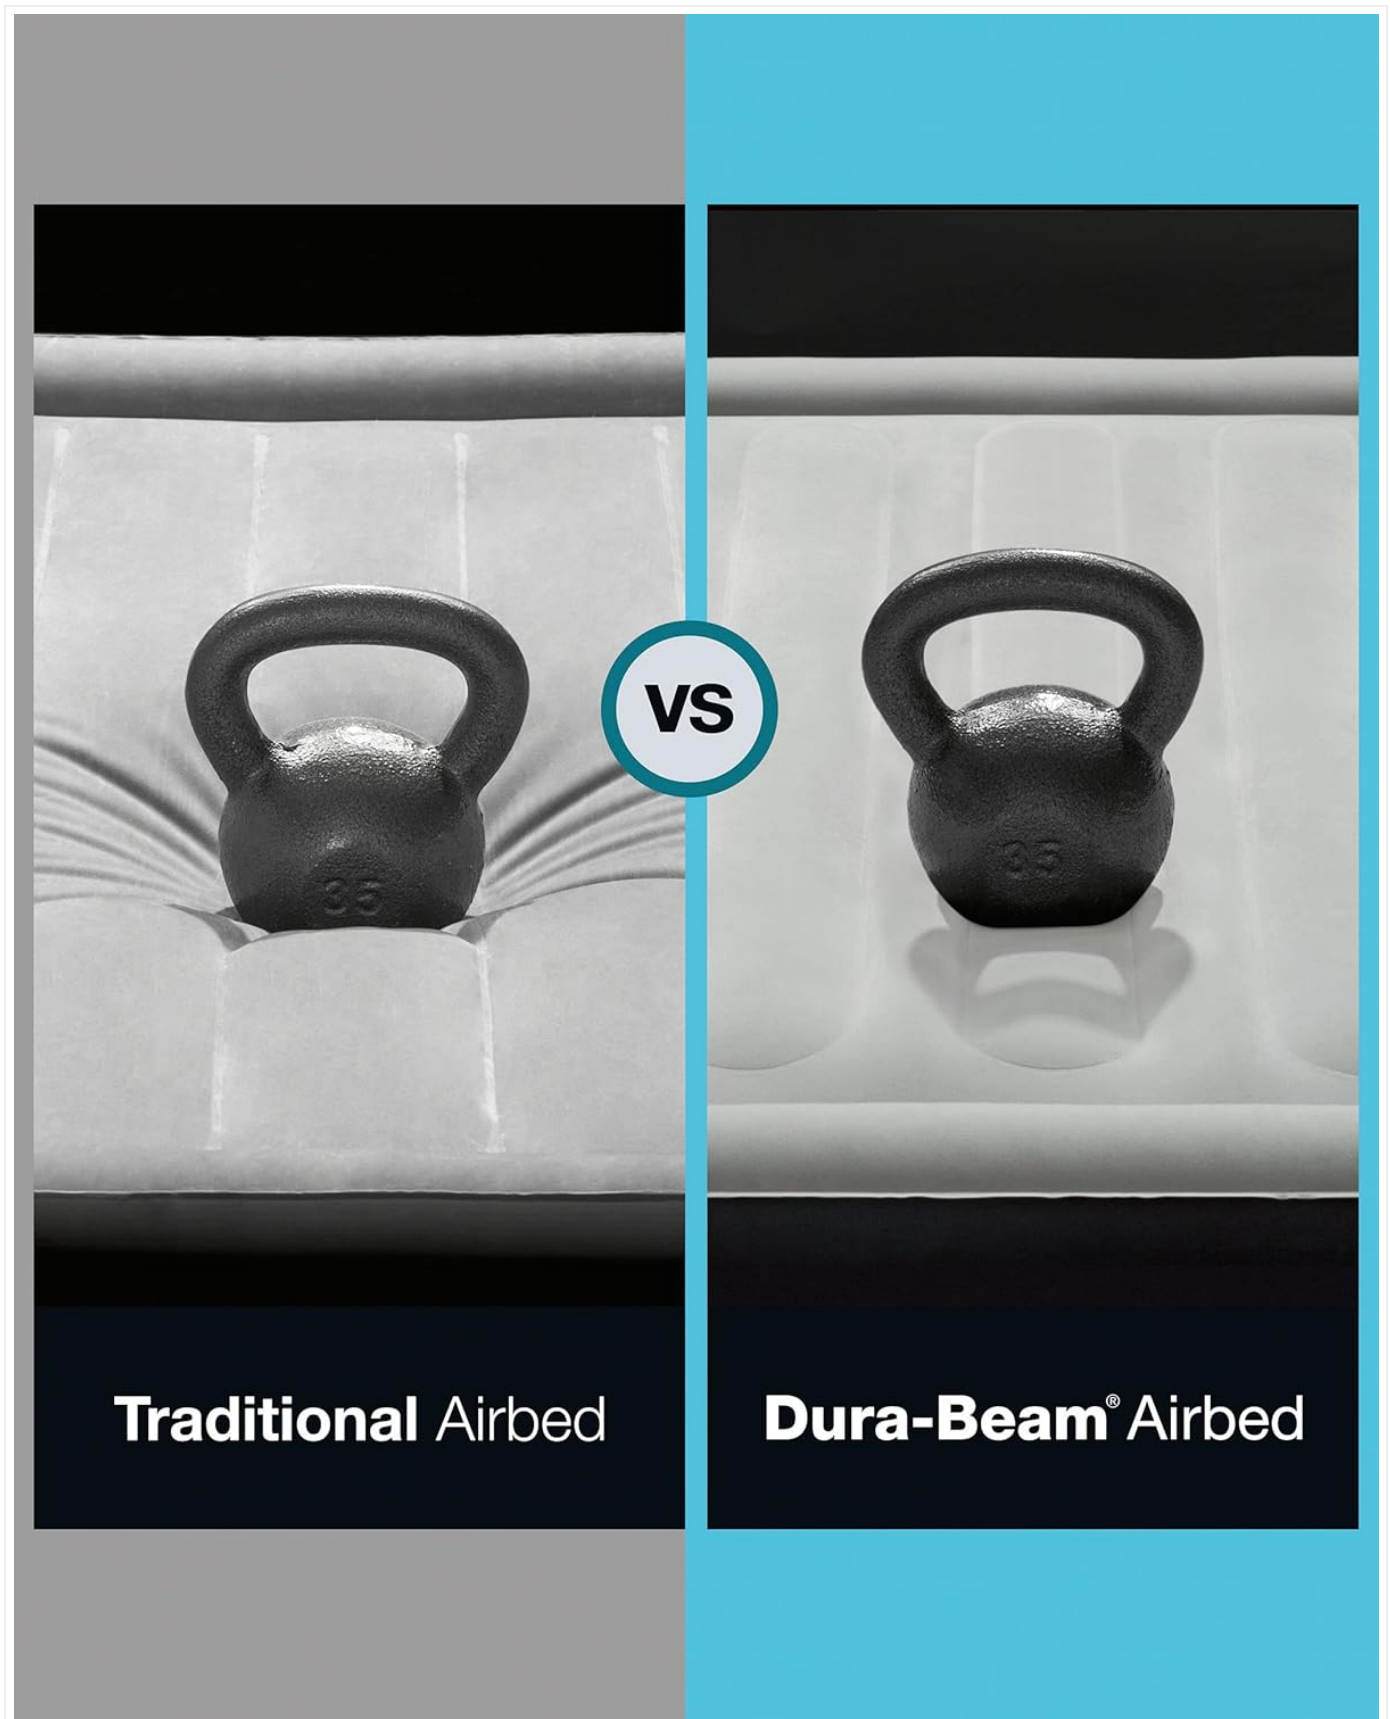 


Image: Visual comparison of weight distribution and support between traditional and Dura-Beam airbeds.

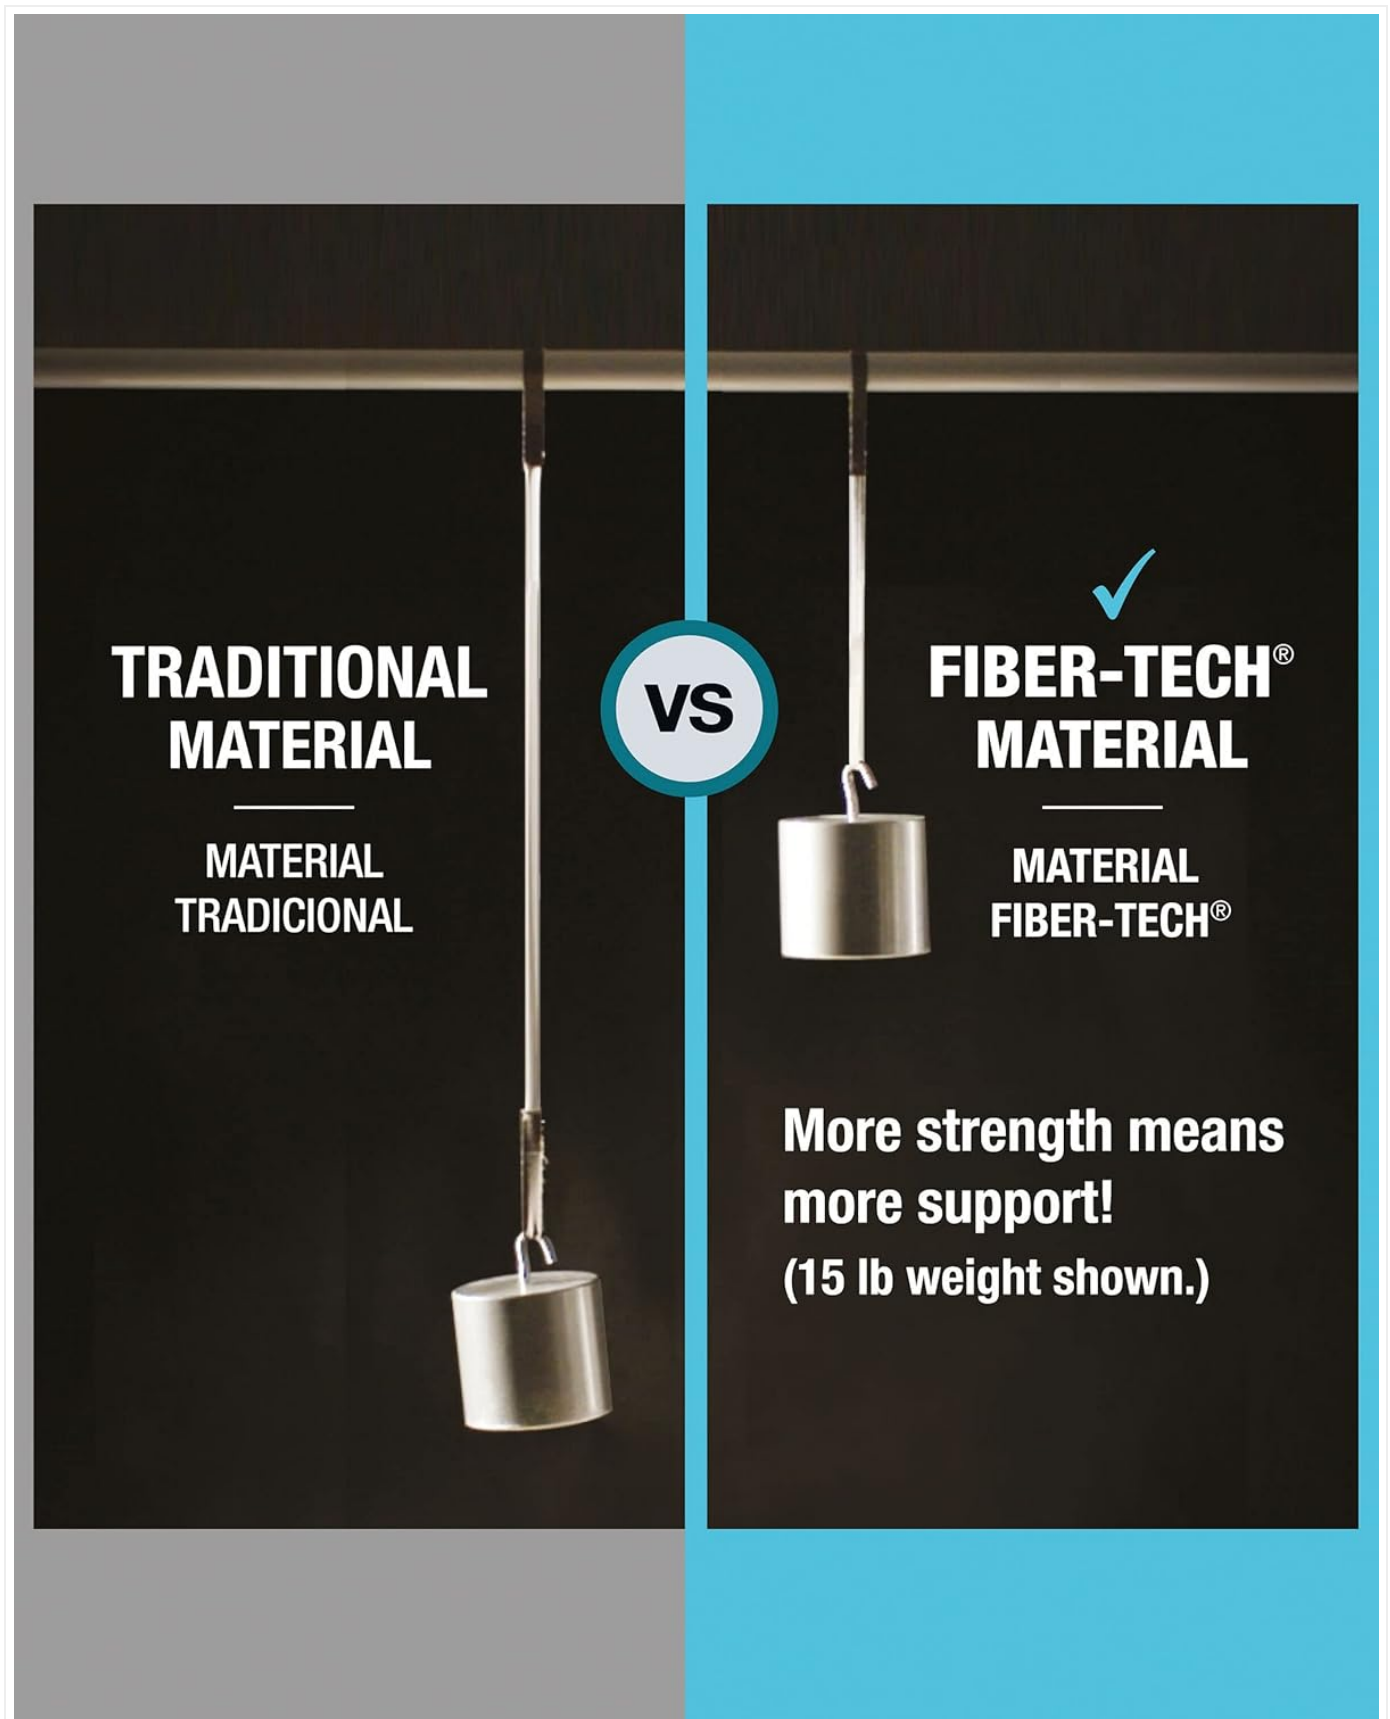 


Image: Illustrates the superior strength and support of Fiber-Tech material compared to traditional materials.

SPECIFICATIONS

Feature	Detail
Model Number	64112E

Feature	Detail
Construction	Fiber-Tech Beam Construction
Pump Type	Built-in USB Electric Pump
Power Source Requirement	5V USB-A, 2 Amp or higher (not included)
Approximate Inflation Time	3.5 minutes
Sleeping Surface	Velvety
Dimensions (LxWxH)	75 x 39 x 12 inches (Twin size)
Item Weight	10.8 Kilograms
Color	Grey
Number of Items (in pack)	3

WARRANTY AND SUPPORT

For warranty information, product support, or to inquire about replacement parts, please contact Intex customer service directly. Refer to the product packaging or the official Intex website for the most current contact details and warranty terms.

Intex Official Website: www.intexcorp.com

