

[manuals.plus](#) /

› [Hushing](#) /

› [Hushing Sound Machine Alarm Clock F4 User Manual](#)

Hushing HAC-F4

Hushing Sound Machine Alarm Clock F4 User Manual

Model: HAC-F4

1. INTRODUCTION

The Hushing Sound Machine Alarm Clock F4 is a versatile 3-in-1 device designed to enhance sleep and simplify daily routines. It combines a sound machine with 30 soothing sounds, a dual alarm clock with 15 wake-up sounds, and a night light with 12 color options. This device features a backup battery for alarm functionality during power outages, a memory function to retain settings, and adjustable display brightness.



Figure 1: Front view of the Hushing Sound Machine Alarm Clock F4.

2. PRODUCT FEATURES

- **3-in-1 Functionality:** Integrates a sound machine, dual alarm clock, and night light.
- **Sound Machine:** Offers 30 soothing sounds, including white noise, pink noise, brown noises, lullabies, and natural sounds (rain, thunderstorm, sea waves, river, campfire, water drop, singing birds).
- **Dual Alarms:** Two independent alarms for different schedules.
- **Wake-up Sounds:** 15 options, including classic beeps, light music, and ambient sounds.
- **Snooze Function:** Provides an additional 9 minutes of rest.
- **Night Light:** 12 colors with 10 adjustable brightness levels. Can be turned off independently.
- **Time Display:** 12/24-hour mode with 4 levels of adjustable brightness.
- **Volume Control:** 32 adjustable volume levels.
- **Sleep Timers:** Auto-off options for 30, 60, 90, or 120 minutes, or continuous playback.
- **Memory Function:** Retains last settings after power failure or reboot.
- **Backup Battery:** Ensures alarm functionality during power outages (device requires constant power for full operation).

3 in 1

Sound Machine

sleep better with 30 soothing sounds

Dual Alarm Clock

15 wake up sounds
backup battery for power cut

Night Light

12 colors night light



Figure 2: Overview of the 3-in-1 functionality.

30 Soothing Sounds

White Noise

Pink Noise

3 Brown Noises

7 Lullabies

18 Natural Sounds



Figure 3: Detailed list of 30 soothing sounds available.

3. SETUP

- 1. Power Connection:** Connect the device to a power source using the provided USB cable and adapter. The device requires continuous power for full operation. The internal battery serves as a backup for the alarm function only.
- 2. Initial Charge:** For optimal performance, ensure the device is fully charged before first use.
- 3. Time Setting:**
 - Press and hold the "12/24H Time Set" button to enter time setting mode.
 - Use the "+" or "-" buttons to adjust the hour.
 - Press the "Next Song" button (right arrow) to move to minute adjustment.
 - Use the "+" or "-" buttons to adjust the minutes.
 - Press the "Next Song" button again to confirm and exit time setting.
- 4. 12/24 Hour Format:** Short press the "12/24H Time Set" button to toggle between 12-hour (AM/PM) and 24-hour formats.



Figure 4: Button layout and functions for easy operation.

4. OPERATING INSTRUCTIONS

4.1. Setting Alarms

1. Set Alarm 1 or 2:

- Press and hold the "Alarm 1" or "Alarm 2" button to enter alarm setting mode.
- Use the "+" or "-" buttons to adjust the alarm hour.
- Press the "Next Song" button (right arrow) to move to minute adjustment.
- Use the "+" or "-" buttons to adjust the alarm minutes.
- Press the "Next Song" button again to select the alarm sound (15 options). Use "+" or "-" to cycle through sounds.
- Press the "Next Song" button again to adjust alarm volume. Use "+" or "-" to set the volume.
- Press the "Next Song" button again to confirm and exit alarm setting. The alarm icon will appear on the display.

2. **Turn Alarm On/Off:** Short press the "Alarm 1" or "Alarm 2" button to activate or deactivate the alarm. The alarm icon will appear/disappear on the display.

3. **Snooze:** When the alarm sounds, press the "Snooze" button to temporarily silence it for 9 minutes.

4. **Stop Alarm:** To turn off the alarm completely, press any button other than "Snooze" when the alarm is sounding.

Wake up Alarm Clock

Backup Battery **Only** for Alarm Clock

4 Level Adjustable Time Brightness

Double Alarms for More Choices

32 Adjustable Volume Levels

15 Wake up Sounds



Figure 5: Key features of the alarm clock function.

15 Wake up Sounds

There's always a wake-up sound you like



Beep Sounds



Natural Sounds



Light Music



Figure 6: Examples of wake-up sounds.

4.2. Using the Sound Machine

1. **Turn On/Off:** Press the power button (bottom center) to turn the sound machine on or off.
2. **Select Sound:** Use the "Previous Song" (left arrow) or "Next Song" (right arrow) buttons to cycle through the 30 available sounds.
3. **Adjust Volume:** Use the "+" or "-" buttons to increase or decrease the volume (32 levels).
4. **Set Sleep Timer:** Short press the "Sleep Timer" button to set an auto-off timer for 30, 60, 90, or 120 minutes. Press repeatedly to cycle through options or select continuous play (indicated by "CO").

Super Loudspeakers

32 Adjustable Volume Levels



Figure 7: Internal speaker design and volume capabilities.

4.3. Night Light Operation

1. **Turn On/Off:** Press the "RGB" button to turn the night light on or off.
2. **Change Color:** Short press the "RGB" button to cycle through 12 different colors.
3. **Adjust Brightness:** Use the "+" or "-" buttons to adjust the brightness of the night light (10 levels).



Figure 8: Night light features and benefits.

4.4. Display Brightness

1. **Adjust Display Brightness:** Short press the "Dimmer" button to cycle through 4 levels of display brightness (low, medium, high, off).



Figure 9: Adjustable time display brightness levels.

5. MAINTENANCE

- **Cleaning:** Wipe the device with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Storage:** Store in a cool, dry place when not in use for extended periods.
- **Power:** Ensure the device remains plugged into a power source for continuous functionality, especially for the sound machine and night light features. The backup battery is solely for the alarm function during power interruptions.

6. TROUBLESHOOTING

- **Device not turning on:** Ensure the device is properly plugged into a working power outlet. Check the USB cable and adapter for damage.
- **Alarm not sounding:** Verify that the alarm is set and activated (alarm icon visible on display). Check the alarm volume setting. Ensure the device is plugged in, as the backup battery only supports the alarm function for a limited time during power outages.
- **Sound quality issues:** Ensure the device is placed on a flat, stable surface. The speaker is located on the bottom of the unit, so avoid placing it on soft surfaces that might muffle the sound.
- **Display too bright/dim:** Use the "Dimmer" button to adjust the display brightness to your preference.
- **Settings not saving:** The device has a memory function. If settings are not retained, ensure the device is not completely losing power for extended periods beyond the backup battery's capacity.

7. SPECIFICATIONS

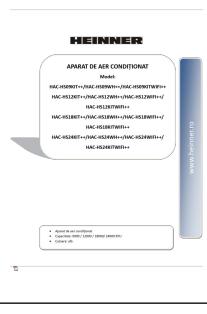
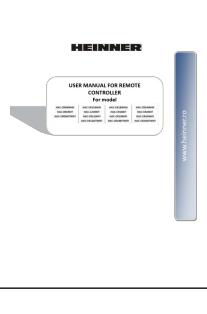
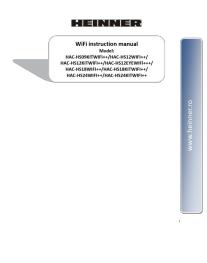
- **Product Dimensions:** 4.25 x 4.25 x 2.2 inches
- **Item Weight:** 7.68 ounces
- **Model Name:** HAC-F4

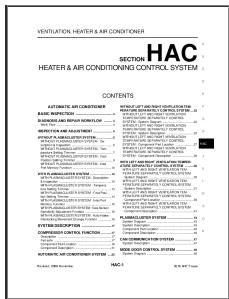
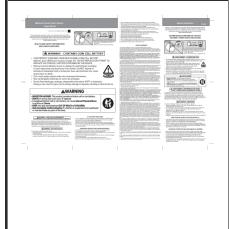
- Batteries:** 1 Lithium Polymer battery required (included, for backup alarm function)
- Manufacturer:** Hushing

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official Hushing website. Keep your purchase receipt for any warranty claims.

Related Documents - HAC-F4

	<p>Manual de Utilizare Heinner Aparat de Aer Conditionat - Modele HAC-HS</p> <p>Ghid complet pentru instalarea, utilizarea și întreținerea aparatelor de aer condiționat Heinner, modelele din seria HAC-HS. Include instrucțiuni de siguran, conținutul pachetului și detalii tehnice.</p>
	<p>HEINNER Wireless Control User and Installation Manual</p> <p>This user and installation manual provides comprehensive guidance for HEINNER wireless control devices, covering setup, app integration, and operational features. It details the installation process, network configuration, and user registration for various HEINNER models.</p>
	<p>HEINNER Remote Controller User Manual</p> <p>This user manual provides comprehensive instructions for HEINNER remote controllers, detailing operation, specifications, and features for models such as HAC-CR09WHN, HAC-CR12WHN, HAC-CR18WHN, HAC-CR24WHN, and their KIT/WIFI variants. Learn how to effectively use your HEINNER air conditioner remote for optimal climate control and comfort.</p>
	<p>HEINNER WiFi Instruction Manual for Smart Home Appliances</p> <p>Comprehensive guide for HEINNER smart home appliances with WiFi. Covers installation, setup, ConnectLife app, troubleshooting, and voice control with Alexa and Google Assistant.</p>

	<p><u>Nissan G37 Coupe 2010 Air Conditioning System Service Manual</u></p> <p>This document provides detailed inspection and adjustment procedures for the automatic air conditioning system of the 2010 Nissan G37 Coupe, including diagnosis workflows, component checks, and troubleshooting.</p>
	<p><u>Nintendo Sound Clock: Alarms™ Usage Manual</u></p> <p>This manual provides instructions and safety guidelines for the Nintendo Sound Clock: Alarms™. It covers setup, battery warnings, radio wave interference, and user agreement details.</p>