

[Manuals.plus](#) /

› [Bellemave](#) /

› Bellemave Queen Over Queen Bunk Bed with Trundle Instruction Manual

Bellemave B0FD98X5NZ

Bellemave Queen Over Queen Bunk Bed with Trundle Instruction Manual

Model: B0FD98X5NZ

1. INTRODUCTION

Thank you for choosing the Bellemave Queen Over Queen Bunk Bed with Trundle. This solid wood bunk bed is designed to provide a space-saving and comfortable sleeping solution for your home. This manual provides essential information for the safe assembly, operation, and maintenance of your new bunk bed. Please read all instructions carefully before beginning assembly and retain this manual for future reference.

2. SAFETY INFORMATION

Your safety is paramount. Please adhere to the following safety guidelines:

- Always assemble the bunk bed strictly according to the provided instructions to ensure structural stability. Improper assembly can lead to instability and potential injury.
- Be cautious of potential pinch points, especially around the bed slats and moving parts of the trundle unit, during assembly and use.
- Do not exceed the maximum weight capacity of **600 lbs** for the entire bunk bed structure. This includes the weight on both the upper and lower beds.
- Children should be supervised at all times when using the bunk bed, particularly on the upper bunk and when operating the trundle.
- Ensure all guardrails are properly installed and secured before use.
- Only use mattresses of the appropriate size and thickness as specified in the product specifications to ensure guardrail effectiveness.

3. PACKAGE CONTENTS

Before assembly, verify that all components and hardware are present. The package typically includes:

- Bed Frame Components (Headboards, Footboards, Side Rails)
- Guardrails for Upper Bunk
- Ladders
- Bed Slats for Upper and Lower Bunks

- Trundle Unit with Slats
- Hardware Pack (screws, bolts, nuts, Allen wrench)
- Assembly Instruction Manual (separate document)

Refer to the detailed parts list provided in your separate assembly instruction manual for exact quantities and identification of each component.

Easy-to-install Bunk Bed

Part List		Hardware List WF304938	
A	Leg (Left front/Right back) - 2pcs	A1	Leg (Left back) - 1pc
B	Horizontal bar HB/FB - 5pcs	B1	Horizontal bar FB - 1pc
D	Side rail - 2pcs	E	Long guard rail - 4pcs
N	Lower vertical bar (front) - 1pc	G	Slat - 14pcs
			Upper horizontal bar FB - 2pcs

STEP 1:

Note: Part 7 will face up with the "x" mark on it, otherwise it cannot be tightened.

The Bunk bed frame comes with all necessary hardware, tools, and clear instructions for quick and easy assembly. The metal House Bed frame is delivered in 2 package, making it convenient for parents to set up and enjoy DIY time with their kids.

Large Weight Capacity

Simple Installation

Security Fence

Space Saver Design

stylish appearance

Image: Example of a parts list and initial assembly step. Your specific parts list will be included in the box.

4. SETUP AND ASSEMBLY

Assembly of the Bellemave Queen Over Queen Bunk Bed with Trundle is required. All necessary hardware and tools (typically an Allen wrench) are included. No box spring is needed as the solid wood slats provide direct mattress support.

General Assembly Steps:

- Unpack and Identify Parts:** Lay out all components and hardware. Compare them against the parts list in your separate assembly manual to ensure everything is present and undamaged.
- Assemble Bed Frames:** Follow the step-by-step diagrams to connect the headboards, footboards, and side rails for both the upper and lower queen beds.
- Install Slats:** Securely attach the wooden slats to both bed frames. Ensure they are evenly spaced and firmly fastened.
- Attach Guardrails and Ladder:** Install the guardrails on the upper bunk and securely attach the ladder according to the instructions.
- Assemble Trundle Unit:** Construct the trundle frame and install its slats.
- Final Checks:** Once assembled, ensure all bolts and screws are tightened. Do not overtighten. Verify the stability of the entire structure.

For detailed, step-by-step instructions and diagrams, please refer to the dedicated assembly manual included in your product packaging.



Image: Dimensional view of the Bellemave Queen Over Queen Bunk Bed with Trundle, illustrating length, width, and height.

5. OPERATING INSTRUCTIONS

Using the Bunk Beds:

- **Upper Bunk:** Access the upper bunk using the integrated ladder. Ensure the user is capable of safely climbing and descending. Always use the guardrails provided.
- **Lower Bunk:** The lower bunk provides a comfortable sleeping space.
- **Mattress Placement:** Place queen-sized mattresses on both the upper and lower bunks. For the trundle, a twin XL mattress is recommended. Ensure mattresses fit snugly within the frame and do not exceed the recommended thickness to maintain guardrail effectiveness on the upper bunk.

Using the Trundle:

The trundle unit provides an additional sleeping area, ideal for guests or sleepovers.

1. **To Extend:** Gently pull the trundle unit out from under the lower bunk using the handles. The unit is on wheels for easy movement.
2. **To Retract:** Push the trundle unit back under the lower bunk until it is fully stored. Ensure no bedding or objects obstruct its movement.



Image: The Bellemave bunk bed with the trundle unit fully extended, ready for use.



Image: Detailed view of the trundle unit, highlighting its construction and handles.

6. MAINTENANCE

Regular maintenance will help prolong the life and appearance of your Bellemave bunk bed.

- **Cleaning:** Wipe down the wood surfaces with a soft, damp cloth. Avoid using harsh chemicals or abrasive cleaners, which can damage the finish.
- **Hardware Check:** Periodically check all bolts, screws, and fasteners to ensure they remain tight. Re-tighten as necessary, but do not overtighten. Loose hardware can compromise the bed's stability.
- **Slats:** Ensure all bed slats are securely in place and free from damage. Replace any broken or cracked slats immediately.

7. TROUBLESHOOTING

If you encounter any issues with your bunk bed, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Bed feels wobbly or unstable	Loose hardware; improper assembly	Check and tighten all bolts and screws. Review assembly instructions to ensure all steps were followed correctly.
Squeaking noises	Loose connections; friction between wood parts	Tighten all hardware. Apply a small amount of paraffin wax or silicone spray to contact points between wood components if squeaking persists.
Trundle difficult to pull out/push in	Obstruction; dirty wheels; misaligned track	Check for any objects blocking the trundle's path. Clean wheels if dirty. Ensure the trundle is aligned properly.
Missing parts	Packaging error	Contact Bellemave customer service with your model number and a description of the missing parts.


8. SPECIFICATIONS

Key specifications for the Bellemave Queen Over Queen Bunk Bed with Trundle:

- **Model:** B0FD98X5NZ
- **Size:** Queen Over Queen (With Trundle)
- **Material:** Engineered Wood, Pine Wood
- **Product Dimensions (L x W x H):** 85.4" x 64.2" x 63"
- **Style:** Modern
- **Special Feature:** Space Saving
- **Included Components:** Guardrails, Ladders, Slats, Trundle
- **Required Assembly:** Yes
- **Compatible Mattress Size (Main Beds):** Queen
- **Compatible Mattress Size (Trundle):** Twin XL
- **Maximum Weight Recommendation:** 600 Pounds
- **Color:** White

Material	Pine Wood+MDF
Size	Queen
Numbers of Package	2
Spring Box	No need
Assembly Required	Yes
Overall Product Dimension	85.4"L x 64.2"W x 63"H
Queen Bed	82.3" x 61"
Trundle Bed	80.3" x 39.3"
Total Height	63"
Recommend Mattress Thickness of Bed(Upper/Down/Trundle)	6"/8-10"6"
Overall Product Weight	206lbs
Bed Weight Capacity(Upper/Down/Trundle)	600lbs

SIZE:INCH

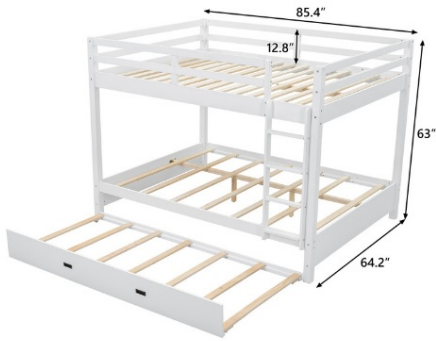

SIZE:INCH

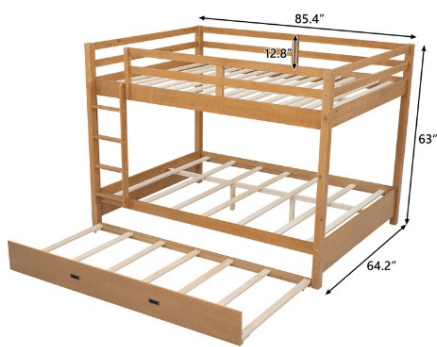


Image: Comprehensive specifications table and dimension diagrams for the bunk bed.

9. WARRANTY AND SUPPORT

For any questions regarding assembly, missing parts, or product issues, please contact Bellemave customer service. Please have your model number (B0FD98X5NZ) and purchase information ready when contacting support.

For specific warranty details, please refer to the documentation included with your purchase or contact Bellemave directly.

© 2023 Bellemave. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0FD98X5NZ>

More documents and user manuals: <https://manuals.plus/>