Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- > FOXPRO /
- > FOXPRO Prowler Electronic Predator Call User Manual

FOXPRO Prowler

FOXPRO Prowler Electronic Predator Call User Manual

Model: Prowler | Brand: FOXPRO

1. Introduction

The FOXPRO Prowler is a state-of-the-art digital game call designed for predator hunters. Manufactured in the USA, this compact and durable unit offers a wide array of high-quality sounds to attract various game. Its lightweight design and robust construction make it an ideal companion for field use.



Figure 1: The FOXPRO Prowler unit and its remote control.

2. PRODUCT FEATURES

- **Sound Library:** Pre-loaded with 75 premium FOXPRO sounds and over 100 additional sounds from the free sound library. Capable of storing up to 300 sounds via mini-USB port.
- Speaker: Equipped with a single high-efficiency horn speaker for clear and powerful audio output.
- **Remote Control:** Features a comfort grip remote with a large red backlit LCD screen and durable glow-in-the-dark raised buttons. Offers a remote-control range of over 300 yards line of sight.
- **Portability:** Weighs only 1.45 lbs with batteries, making it highly portable. Includes a carry handle with lanyard loops.
- **Connectivity:** Includes an external speaker jack for increased volume capabilities and an auxiliary jack for connecting FOXPRO decoys (e.g., FoxJack 5, X Decoy, sold separately).
- Durability: Constructed with an ABS housing for ruggedness and durability.



Figure 2: Key features of the FOXPRO Prowler.



Figure 3: Additional features enhancing user experience and functionality.

3. SETUP

3.1 Battery Installation

The Prowler unit operates on 4 AA alkaline batteries (not included). For optimal performance in cold weather, Lithium AA batteries are recommended. The remote control requires one 9-volt battery (not included).

- 1. Locate the battery compartment on the underside of the Prowler unit.
- 2. Open the compartment and insert 4 AA batteries, ensuring correct polarity.
- 3. For the remote, locate the battery compartment on the back.
- 4. Insert one 9-volt battery, observing polarity.
- 5. Securely close both battery compartments.



Figure 4: Side view of the Prowler unit, highlighting the battery compartment.



Figure 5: Rear view of the Prowler unit with various ports.

3.2 Antenna Extension

For optimal remote control range and signal reception, always extend the antenna on the remote control before operation.

4. OPERATING INSTRUCTIONS

4.1 Powering On

- 1. Locate the power switch on the Prowler unit and slide it to the 'ON' position.
- 2. Press the power button on the remote control to turn it on. The LCD screen will illuminate.

4.2 Sound Selection and Playback

The remote control allows for easy navigation and selection of sounds.

- 1. Use the 'Scroll Up' and 'Scroll Down' buttons to navigate through sound categories (e.g., Coyote, Fox, Rabbit, Bird).
- 2. Once a category is selected, continue scrolling to browse individual sounds within that category.
- 3. Press the 'Play/Select' button to play the selected sound.
- 4. Adjust the volume using the 'Vol Up' and 'Vol Down' buttons.
- 5. To mute the sound, press the 'Mute' button. Press again to unmute.

4.3 Customizing User Buttons

The 'User 1' and 'User 2' buttons on the remote are customizable for quick access to favorite sound selections, decoy on/off functions (with compatible decoys), backlight control, stand timer reset, and recall.

4.4 Adding Sounds

The Prowler features a mini-USB port for adding additional sounds. Refer to the FOXPRO website or software for instructions on how to download and transfer new sounds to your unit.

Video 1: An overview of the FOXPRO Prowler, demonstrating its features and basic operation, including power, speaker, auxiliary, and external speaker jacks, as well as remote control functions like sound selection and volume adjustment.



Figure 6: The FOXPRO Prowler in use during a hunting scenario.



5. MAINTENANCE

5.1 General Care

- Keep the unit and remote clean and free from dirt, dust, and moisture.
- Avoid exposing the unit to extreme temperatures or direct sunlight for prolonged periods.
- Store the unit in a dry, cool place when not in use.

5.2 Battery Replacement

Replace batteries in both the Prowler unit and the remote control when the low battery indicator light on the unit illuminates or when performance degrades. Refer to Section 3.1 for battery installation instructions.

6. TROUBLESHOOTING

6.1 No Sound Output

- Ensure the Prowler unit is powered on and the speaker switch is in the 'ON' position.
- Check the volume level on the remote control and increase if necessary.
- Verify that the remote control is powered on and within range (over 300 yards line of sight).
- Check battery levels in both the unit and remote. Replace if low.

6.2 Remote Control Not Responding

- Ensure the remote control's antenna is fully extended.
- Check the remote control's battery. Replace the 9-volt battery if needed.
- Ensure there are no significant obstructions between the remote and the Prowler unit.

7. SPECIFICATIONS

Attribute	Value
Product Dimensions	8.5 x 5.5 x 6.5 inches
Item Weight	2 pounds
Item Model Number	Prowler
Manufacturer	FOXPRO Inc.

8. WARRANTY AND SUPPORT

The FOXPRO Prowler comes with a 3-Year Limited Warranty. For any questions, technical assistance, or warranty claims, please contact FOXPRO's customer support. FOXPRO is known for its unmatched customer support.

Related Documents - Prowler



Cabela's Outfitter Series Electronic Predator Call Instruction Manual

This manual provides detailed instructions for the Cabela's Outfitter Series Electronic Predator Call, including setup, operation, programming, and troubleshooting. Learn how to use your FOXPRO-powered game call effectively for hunting.



FOXPRO X-WAVE Instruction Manual

Comprehensive instruction manual for the FOXPRO X-WAVE digital game call, covering setup, operation, advanced features, programming, and maintenance for hunters. Learn to maximize performance with FOXPRO Inc.'s innovative product.



FOXPRO Patriot Digital Game Call Instruction Manual

This comprehensive instruction manual provides detailed guidance on operating, programming, and maintaining the FOXPRO Patriot digital game call and its TX433 remote transmitter. Learn about setup, sound playback, custom settings, troubleshooting, and care for your FOXPRO Patriot.



FOXPRO Hellcat Pro Instruction Manual

Comprehensive instruction manual for the FOXPRO Hellcat Pro digital game call, covering setup, operation, features, care, and warranty information. Learn how to use your Hellcat Pro for effective hunting.



FOXPRO X24 Digital Game Call Instruction Manual

Comprehensive instruction manual for the FOXPRO X24 digital game call and TX1000 remote, detailing setup, features, programming, and troubleshooting for hunters. Learn to maximize your hunting success with FOXPRO technology.



FOXPRO Inferno Instruction Manual

User manual for the FOXPRO Inferno digital game call, detailing its features, operation, programming, maintenance, and troubleshooting. Includes information on the Inferno game call unit and its remote transmitter.