

Veitob 1

Veitob 88-Key Semi-Weighted Digital Piano

Model: 1

INTRODUCTION

Thank you for choosing the Veitob 88-Key Semi-Weighted Digital Piano. This manual provides essential information for the proper setup, operation, and maintenance of your instrument. Please read it thoroughly before use to ensure optimal performance and longevity.

SETUP

1. Unpacking

Carefully remove all components from the packaging. Ensure all items listed below are present:

- Veitob 88-Key Digital Piano
- Power Adapter
- Sustain Pedal
- Headphones
- Instruction Manual (this document)

2. Connecting the Power Supply

Locate the DC IN port on the rear panel of the digital piano. Connect the power adapter cable to this port, then plug the adapter into a standard electrical outlet.

3. Connecting the Sustain Pedal

Insert the sustain pedal cable into the SUSTAIN pedal jack on the rear panel of the digital piano. The pedal allows notes to continue sounding after the keys are released.

4. Connecting Headphones

For private practice, plug the included headphones into the HEADPHONE jack. This will mute the internal speakers.



Image: The Veitob 88-Key Digital Piano shown with its power adapter, sustain pedal, and headphones, illustrating a typical setup.

OPERATING INSTRUCTIONS

1. Powering On/Off

Press the **POWER** button located on the control panel to turn the digital piano on. Press it again to turn the instrument off.

2. Adjusting Volume

Use the **VOLUME** knob or buttons on the control panel to adjust the overall sound output level. Turn clockwise to increase volume, counter-clockwise to decrease.

3. Selecting Voices/Tones

Your digital piano includes various instrument voices. Refer to the control panel for buttons labeled **VOICE** or **TONE**. Press these buttons to cycle through available sounds such as Grand Piano, Electric Piano, Organ, Strings, etc.

4. Using the Sustain Pedal

Press and hold the sustain pedal while playing notes to extend their decay. Release the pedal to stop the

sustain effect.

5. Backlit Pad Feature

This model features a backlit pad. The backlight illuminates the control panel for improved visibility in low-light conditions. This feature is typically activated automatically or via a dedicated button.

MAINTENANCE

1. Cleaning

Wipe the surface of the digital piano with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Do not use abrasive cleaners, solvents, or waxes, as these can damage the finish. Avoid spraying liquids directly onto the instrument.

2. Storage

When not in use, store the digital piano in a dry, dust-free environment away from direct sunlight and extreme temperatures. If storing for an extended period, disconnect the power adapter.

3. Safety Precautions

- Do not place heavy objects on the digital piano.
- Keep liquids away from the instrument to prevent electrical shock or damage.
- Do not attempt to disassemble or repair the digital piano yourself. Refer to qualified service personnel.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No sound	Volume too low; headphones connected; power issue	Increase volume; disconnect headphones; check power connection
Keys not responding	Instrument not powered on; internal malfunction	Ensure power is on; restart the instrument; contact support if issue persists
Power indicator off	Power adapter not connected; outlet issue	Check power adapter connection; try a different outlet

If the problem persists after attempting these solutions, please contact customer support.

SPECIFICATIONS

Brand: Veitob

Model Number: 1

Number of Keys: 88

Key Type: Semi-Weighted

Color: Black

Skill Level: All

Special Feature: Backlit Pad

UPC: 728161614262

ASIN: B0FD9JP5NH

GTIN: 728161614262

WARRANTY AND SUPPORT

Warranty Information

The manufacturer states that there is **no warranty** provided for this product.

Customer Support

For any questions, technical assistance, or issues not covered in this manual, please contact Veitob customer support through the retailer where the product was purchased.