

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [GHUST](#) /

› [GHUST Voice Remote Control Replacement for Samsung Smart TV \(TM2560E, S90F Series\) - Instruction Manual](#)

GHUST TM2560E S90F

GHUST Voice Remote Control Replacement for Samsung Smart TV (TM2560E, S90F Series) - Instruction Manual

INTRODUCTION

This manual provides essential information for the proper setup, operation, and maintenance of your GHUST Voice Remote Control. This remote is designed as a direct replacement for various Samsung Smart TV models, offering seamless control without complex programming.

PRODUCT OVERVIEW

The GHUST Voice Remote Control is a user-friendly device crafted from high-quality ABS material, ensuring durability and a comfortable grip. It features dedicated buttons for common functions and streaming services, along with voice control capabilities.

Remote Control Layout



This image displays the GHUST Voice Remote Control. The remote is black with a matte finish. At the top, there is a red power button, a settings/123 button, and a microphone button, along with a microphone indicator light. Below these is a large circular navigation pad. Further down are buttons for 'Back', 'Home', and 'Play/Pause'. Below these are volume and channel control buttons, along with a 'CC/AD' button. At the bottom, there are dedicated quick-access buttons for 'TFLIX' (Netflix), 'Samsung V Plus' (Samsung TV Plus), and 'Prime Video'. There is also a partially visible button for 'Disney+'. The remote's design is ergonomic, making it easy to hold.

Button Functions

- **Power Button** (red): Turns the TV on or off.
- **Settings/123 Button** (gear icon with '123'): Accesses TV settings or numeric keypad.
- **Microphone Button** (microphone icon): Activates voice control.
- **Navigation Pad** (circular): Navigates menus and selects items. Press the center button to confirm.
- **Back Button** (U-turn arrow): Returns to the previous screen.
- **Home Button** (house icon): Accesses the Smart Hub or home screen.
- **Play/Pause Button** (two vertical bars and a triangle): Controls media playback.
- **Volume Up/Down** (buttons with '^' and 'v'): Adjusts the TV volume.
- **Channel Up/Down** (buttons with '^' and 'v'): Changes TV channels.
- **CC/AD Button**: Activates Closed Captions or Audio Description.
- **Netflix Button** (TFLIX): Direct access to the Netflix application.
- **Samsung TV Plus Button** (Samsung V Plus): Direct access to the Samsung TV Plus application.
- **Prime Video Button**: Direct access to the Prime Video application.
- **Disney+ Button**: Direct access to the Disney+ application.

SETUP

This GHUST Voice Remote Control is designed for immediate use with compatible Samsung Smart TVs, requiring no complex programming or pairing procedures.

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert two (2) AAA batteries, ensuring correct polarity (+ and -) as indicated inside the compartment.
4. Close the battery compartment cover securely.

Note: Batteries are not included with the remote control. Use new, high-quality AAA alkaline batteries for optimal performance.

OPERATING INSTRUCTIONS

Once batteries are installed, the remote is ready to control your compatible Samsung Smart TV.

Basic Functions

- **Power:** Press the **Power** button to turn your TV on or off.
- **Navigation:** Use the **circular navigation pad** to move through menus and select options. Press the center button of the pad to confirm selections.
- **Volume Control:** Press the **Volume Up (^)** or **Volume Down (v)** buttons to adjust audio levels.
- **Channel Control:** Press the **Channel Up (^)** or **Channel Down (v)** buttons to change channels.
- **Home:** Press the **Home** button to access the Smart Hub or main menu of your TV.
- **Back:** Press the **Back** button to return to the previous screen or menu.
- **Play/Pause:** Use the **Play/Pause** button to control media playback.

Voice Control

To use voice control, press and hold the **Microphone** button and speak clearly into the remote. Release the button when you are finished speaking.

Quick Access Buttons

Dedicated buttons provide direct access to popular streaming services:

- **Netflix:** Launches the Netflix application.
- **Samsung TV Plus:** Launches the Samsung TV Plus application.
- **Prime Video:** Launches the Prime Video application.
- **Disney+:** Launches the Disney+ application.

Settings and Numeric Keypad

Press the **Settings/123** button to access TV settings or to bring up a virtual numeric keypad for channel entry.

MAINTENANCE

Proper care ensures the longevity and optimal performance of your remote control.

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries simultaneously with new ones.
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage.
- **Avoid Exposure:** Keep the remote away from direct sunlight, heat sources, moisture, and extreme temperatures.

TROUBLESHOOTING

If you experience issues with your remote control, refer to the following common solutions.

Problem	Possible Cause	Solution
Remote not responding.	Dead or incorrectly installed batteries.	Replace batteries with new AAA batteries, ensuring correct polarity.
Remote has limited range or intermittent response.	Weak batteries; obstruction between remote and TV; interference.	Replace batteries. Ensure a clear line of sight to the TV's IR receiver. Remove any potential sources of interference.
Voice control not working.	Microphone button not held down; TV settings for voice control.	Ensure you are pressing and holding the Microphone button while speaking. Check your TV's settings for voice control activation.
Specific buttons not working.	Button stuck or damaged; TV not compatible with specific function.	Gently clean around the button. Verify your TV model's compatibility with all remote functions.

If the problem persists after trying these solutions, please contact customer support.

SPECIFICATIONS

This section details the technical specifications of the GHUST Voice Remote Control.

Model: TM2560E, S90F (Replacement)

Brand: GHUST

Material: High-quality ABS

Color: Black

Power Source: 2 x AAA Batteries (not included)

Compatibility: Designed for various Samsung Smart TV models, including QN55QN70FAFXZA, QN65QN70FAFXZA, QN75QN70FAFXZA, QN85QN70FAFXZA, QN55QN80FAFXZA, QN65QN80FAFXZA, QN75QN80FAFXZA, QN85QN80FAFXZA, QN100QN80FAFXZA, QN43Q7FAAFXZA, QN50Q7FAAFXZA, QN55Q7FAAFXZA, QN65Q7FAAFXZA, QN75Q7FAAFXZA, QN85Q7FAAFXZA, QN32Q8FAAFXZA, QN43Q8FAAFXZA, QN50Q8FAAFXZA, QN55Q8FAAFXZA, QN65Q8FAAFXZA, QN75Q8FAAFXZA, QN85Q8FAAFXZA, QN43LS03FAFXZA, QN50LS03FAFXZA, QN55LS03FAFXZA, QN65LS03FAFXZA, QN75LS03FWFXZA, QN85LS03FWFXZA, QN65QN900FFXZA, QN75QN900FFXZA, QN85QN900FFXZA, QN42S90FAEXZA, QN48S90FAEXZA, QN55S90FAEXZA, QN65S90FAEXZA, QN77S90FAEXZA, QN83S90FAEXZA, QN55S95FAFXZA, QN65S95FAFXZA, QN77S95FAFXZA, QN83S95FAFXZA, QN55S85FAFXZA, QN65S85FAFXZA, QN77S85FAFXZA, QN83S85FAFXZA.

Special Features: Voice Control, No Programming Required, Dedicated Streaming Service Buttons.

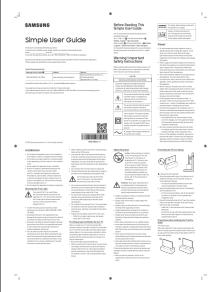
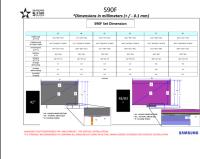
WARRANTY AND SUPPORT

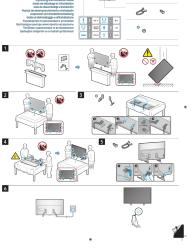
GHUST is committed to providing high-quality products. If you encounter any issues with your remote control or have questions regarding its operation, please contact GHUST customer support. Refer to your purchase documentation or the seller's information for specific warranty details and contact methods.

Customer Support

For assistance, please reach out to the seller or manufacturer directly. Contact information is typically available on the product packaging or your purchase receipt.

Related Documents - TM2560E S90F

	<p>Samsung TV Simple User Guide: Safety, Operation, and Specifications</p> <p>Comprehensive guide for Samsung TVs, covering essential safety instructions, installation procedures, operation details, internet security, troubleshooting tips, and technical specifications. Includes information on various Samsung TV models.</p>
	<p>Samsung S90F Display Dimensions and Technical Specifications</p> <p>Comprehensive technical specifications and dimensional data for Samsung S90F displays across various sizes (42" to 83"). Includes set dimensions, cover/rear-view measurements, bezel sizes, stand specifications, and IR sensor location, all in millimeters.</p>

	<p>Samsung Simple User Guide: Setup, Safety, and Troubleshooting</p> <p>A comprehensive guide for Samsung televisions, covering essential safety instructions, initial setup procedures, troubleshooting common issues, and product specifications. Learn how to connect, operate, and maintain your Samsung TV for optimal performance.</p>
	<p>Samsung S90F OLED TV: Unpacking and Installation Guide</p> <p>Official unpacking and installation guide for the Samsung S90F 48-inch OLED TV. Learn how to safely unbox, assemble, and connect your new Samsung smart television.</p>
	<p>Samsung S90D/S90F 77-83 inch TV Unpacking and Installation Guide</p> <p>A comprehensive guide for unpacking and installing Samsung's 77-inch and 83-inch S90D and S90F series smart TVs. Includes step-by-step instructions, safety precautions, and VESA mounting information.</p>
	<p>Samsung Color TV User Guide and Safety Instructions</p> <p>Comprehensive user guide and essential safety instructions for Samsung Color TVs, covering setup, operation, maintenance, troubleshooting, and specifications. Learn how to safely install and use your Samsung TV.</p>