



[Manuals.plus](#) /

> [AYRELY](#) /

> AYRELY AYCL-PM-CHIME Grandfather Mantel Clock User Manual

AYRELY AYCL-PM-CHIME

AYRELY AYCL-PM-CHIME Grandfather Mantel Clock User Manual

Model: AYCL-PM-CHIME

INTRODUCTION

Thank you for choosing the AYRELY Grandfather Mantel Clock. This elegant timepiece combines timeless design with modern functionality, featuring a solid wooden frame, a gold-tone pendulum, and melodious chimes. This manual provides detailed instructions for setting up, operating, and maintaining your clock to ensure years of reliable service.

Classic Mantel Clock

Made of wood. It will never go out of style



Figure 1: The AYRELY Grandfather Mantel Clock on a mantelpiece, showcasing its classic design.

SETUP

1. Unpacking

Carefully remove the clock from its packaging. Inspect for any signs of damage. Retain packaging for future transport or storage.

2. Battery Installation

The clock requires three AA batteries (not included): one for the clock movement and two for the chime function. The pendulum is decorative and does not require batteries.

1. Locate the battery compartments on the back and bottom of the clock.
2. Insert one AA battery into the main clock movement compartment on the back, ensuring correct polarity (+/-).
3. Insert two AA batteries into the chime unit compartment located at the bottom of the clock, ensuring correct polarity

(+/-).



Figure 2: Rear view of the clock, showing the main battery compartment and overall dimensions (9.45"W x 11.8"H).

3. Setting the Time

Turn the minute hand clockwise using the adjustment knob on the back of the clock movement until the correct time is displayed. Ensure the hour hand moves accordingly. Do not move the hour hand directly.

4. Pendulum Setup

The gold-tone pendulum is decorative. Gently ensure it is hanging freely within its designated opening at the bottom of the clock face. It will swing continuously once the clock is operating.



Decorative ring



Exquisite product details



Handmade solid wood Frame

Figure 3: Detailed view of the clock's decorative elements, including the pendulum and solid wood craftsmanship.

OPERATING THE CHIME FUNCTION

The clock features an electronic chime unit with multiple modes and volume control.

1. Chime Modes and Selection

The chime unit, located at the bottom of the clock, offers four distinct modes. Use the 'MODE' switch to cycle through them:

- **Mode 1: Retro Music Melody combined with Hourly Strikes** (Chimes every hour, from 6:00 AM to 9:00 PM).
- **Mode 2: Westminster Melody combined with Hourly Strikes** (Chimes every hour, from 6:00 AM to 9:00 PM).
- **Mode 3: Westminster Melody combined with Hourly Strikes and Quarter-Hour Chimes** (Chimes every quarter-hour, from 6:00 AM to 9:00 PM).
- **Mode 4: Hourly Strikes Only** (Chimes every hour, from 6:00 AM to 9:00 PM).

2. Volume Control

Adjust the chime volume using the rotary knob on the chime unit. Turn clockwise to increase volume, counter-clockwise to decrease.

3. Nighttime Mute Function

The clock features an automatic nighttime mute function. Chimes will not sound between 9:00 PM and 6:00 AM, ensuring a quiet environment during sleeping hours.

Your browser does not support the video tag.

Video 1: AYRELY mantel clock function display and chime sound demonstration. This video illustrates battery installation, setting the time, and showcasing the various chime modes and their sounds.

MAINTENANCE

1. Cleaning

To clean the wooden frame, use a soft, dry cloth. Avoid abrasive cleaners or harsh chemicals that may damage the finish. For the clock face, gently wipe with a soft, lint-free cloth.

2. Battery Replacement

When the clock's timekeeping becomes inaccurate or the chime function weakens/stops, it is time to replace the batteries. Replace all three AA batteries simultaneously to ensure optimal performance.

3. General Care

Place the clock on a stable, level surface away from direct sunlight, extreme temperatures, and high humidity to preserve the wood and internal components.

TROUBLESHOOTING

- **Clock not keeping accurate time or stopped:**
Check and replace all batteries. Ensure batteries are inserted with correct polarity.
- **Chimes not sounding:**
Verify that the chime unit batteries are correctly installed and not depleted. Check the 'ON/OFF' switch on the chime unit is in the 'ON' position. Ensure the time is not within the automatic nighttime mute period (9 PM - 6 AM).
- **Chimes not matching the hour:**
If the chimes are out of sync with the displayed time, follow the chime reset instructions typically found on the chime unit itself or refer to the product's quick start guide. Generally, this involves removing the chime battery, setting the time to 6:50, reinserting the battery, pressing the 'SET' button, and then turning the hour hand to the correct time.
- **Pendulum not swinging:**
Ensure the clock is on a level surface and the pendulum is not obstructed. The pendulum is decorative and its movement is part of the clock's design, not critical for timekeeping.

SPECIFICATIONS

Feature	Detail
Brand	AYRELY

Model Number	AYCL-PM-CHIME
Material	Ash wood, Veneer Finish on MDF Core
Display Type	Analog
Power Source	Battery Powered (1 AA for clock movement, 2 AA for chime function)
Special Features	Adjustable Volume, Hourly Chime, Night Mode
Product Dimensions	9.45"W x 11.8"H
Item Weight	1.2 Kilograms

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your product or visit the official AYRELY website. You may also contact the seller directly for assistance.