

Amazon Basics B0FD9WMVVH

Amazon Basics 1.7L Bagless Canister Vacuum Cleaner

Model: B0FD9WMVVH

INTRODUCTION

Thank you for choosing the Amazon Basics 1.7L Bagless Canister Vacuum Cleaner. This manual provides essential information for the safe and efficient use, assembly, operation, and maintenance of your new appliance. Please read these instructions carefully before use and retain them for future reference.

SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury.

- Read all instructions before using the appliance.
- Do not leave the appliance unattended when plugged in. Unplug from outlet when not in use and before servicing.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.

- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up toxic material (chlorine bleach, ammonia, drain cleaner, etc.).
- Do not use without dust cup and/or filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.

PRODUCT OVERVIEW

Familiarize yourself with the components of your Amazon Basics Bagless Canister Vacuum Cleaner.

Pulizia in tutta comodità

Serbatoio con capacità di 1,7 litri



Figure 1: Main unit with hose, telescopic tube, floor nozzle, and 3-in-1 accessory nozzle.



Figure 2: Detailed view of the vacuum cleaner, dustbin, and accessory tools.

1. **Main Unit:** Contains the motor, dustbin, and filter system.

2. **Dustbin:** Transparent container for collecting dust and debris. Capacity: 1.7 liters.
3. **Hose:** Flexible hose connecting the main unit to the telescopic tube.
4. **Telescopic Tube:** Adjustable metal tube for extended reach.
5. **Floor Nozzle:** Main cleaning head for carpets and hard floors. Features a button for surface type selection.
6. **3-in-1 Nozzle:** Versatile attachment for cleaning crevices, upholstery, and dusting.
7. **Power Cord:** Retractable cord for power supply.
8. **HEPA-12 Filter:** Washable filter system for capturing fine particles and allergens.

SETUP

Follow these steps to assemble your vacuum cleaner before first use.

1. **Attach the Hose:** Insert the flexible hose into the suction inlet on the main unit until it clicks securely into place.
2. **Assemble the Telescopic Tube:** Connect the telescopic tube to the handle end of the hose. Adjust the length of the telescopic tube by pressing the release button and extending or retracting it to a comfortable height.
3. **Attach the Floor Nozzle:** Connect the floor nozzle to the end of the telescopic tube. Ensure it is firmly attached.
4. **Attach Accessories (Optional):** For specific cleaning tasks, attach the 3-in-1 nozzle directly to the hose handle or the telescopic tube.
5. **Check Filters:** Ensure all filters (HEPA and motor protection filters) are correctly installed before use.

OPERATING INSTRUCTIONS

Learn how to effectively use your vacuum cleaner for various cleaning needs.

1. **Power Connection:** Pull out the power cord to the desired length and plug it into a suitable electrical outlet. Do not extend the cord beyond the yellow marker.
2. **Power On/Off:** Press the On/Off foot pedal switch located on the main unit to start or stop the vacuum cleaner.
3. **Adjust Suction Power:** The vacuum cleaner operates at a single power level (850W). For different surfaces, adjust the floor nozzle setting.
4. **Floor Nozzle Adjustment:** Use the button on the floor nozzle to switch between settings for carpets (brush down) and hard floors (brush up).
5. **Using Accessories:** For detailed cleaning, remove the floor nozzle and attach the 3-in-1 nozzle. Use the brush for dusting, the crevice tool for narrow spaces, and the upholstery tool for fabrics.
6. **After Use:** Turn off the vacuum cleaner by pressing the On/Off switch. Unplug the power cord from the outlet. Press the cord rewind button to retract the power cord into the main unit.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your vacuum cleaner. Always unplug the appliance before performing any maintenance.

Emptying the Dustbin

1. Press the dustbin release button to detach the dustbin from the main unit.
2. Position the dustbin over a waste bin.

3. Open the bottom flap of the dustbin to empty its contents.
4. Close the flap securely and reattach the dustbin to the main unit until it clicks.

Cleaning and Replacing Filters

The vacuum cleaner features a washable HEPA-12 filter and includes 2 extra replacement filters for convenience.

Migliora le prestazioni del tuo aspirapolvere

Filtro HEPA-12 robusto



Filtra anche il particolato più fine e la polvere che causa allergie



Facile da sostituire, include le istruzioni



Lavabile, riutilizzabile e di lunga durata

Figure 3: The included HEPA-12 washable filters.



Figure 4: Close-up of the HEPA-12 filter material.

1. **Accessing Filters:** Remove the dustbin. The HEPA filter is typically located within the dustbin assembly or at the motor inlet.
2. **Cleaning HEPA Filter:** Gently tap the filter to remove loose dust. If heavily soiled, rinse the filter under cold running water. Do not use detergents.
3. **Drying Filters:** Allow the filter to air dry completely for at least 24 hours before reinserting. Do not use a hairdryer or other heating devices.
4. **Replacing Filters:** Replace the HEPA filter every 6-12 months, or sooner if suction power decreases significantly or the filter is visibly damaged. Use the provided extra filters for replacement.
5. **Motor Protection Filter:** Check and clean the motor protection filter (usually a foam filter) regularly. Rinse if necessary and ensure it is completely dry before reinstallation.

TROUBLESHOOTING

If you encounter issues with your vacuum cleaner, refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
Vacuum cleaner does not turn on.	No power supply.	Check if the plug is securely inserted into the outlet. Check the circuit breaker.
Low suction power.	Dustbin is full. Clogged filters. Blockage in hose or nozzle.	Empty the dustbin. Clean or replace filters. Check hose, telescopic tube, and nozzles for blockages and remove them.
Unusual noise.	Blockage in the fan or motor area. Foreign object in the brush roll (if applicable).	Turn off and unplug the vacuum. Inspect for and remove any foreign objects. If noise persists, contact customer support.
Dust escapes from the vacuum.	Dustbin not properly closed. Filters not correctly installed or damaged.	Ensure the dustbin is securely closed. Check and correctly install all filters. Replace damaged filters.

SPECIFICATIONS

- **Brand:** Amazon Basics
- **Model:** B0FD9WMVVH
- **Form Factor:** Canister
- **Power Source:** Corded Electric
- **Motor Power:** 850W (approx. 1.13 HP)
- **Dustbin Capacity:** 1.7 Liters
- **Filter Type:** HEPA-12 (Washable)
- **Recommended Surfaces:** Carpets, Hard Floors
- **Cordless:** No
- **Number of Power Levels:** 1
- **Included Accessories:** 3-in-1 Nozzle, 2 Extra HEPA Filters

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your purchase or visit the official Amazon Basics website. Keep your proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question