

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Leeshyah](#) /

› [Leeshyah Wooden Play Kitchen for Toddlers and Kids - Instruction Manual](#)

Leeshyah B0FD9X2WYG

Leeshyah Wooden Play Kitchen for Toddlers and Kids - Instruction Manual

Model: B0FD9X2WYG

INTRODUCTION

This manual provides detailed instructions for the assembly, operation, maintenance, and troubleshooting of your Leeshyah Wooden Play Kitchen. Please read this manual thoroughly before assembly and use to ensure safe and optimal performance of the product. This interactive play kitchen is designed to encourage imaginative play and skill development in children aged 3-8.

SAFETY INFORMATION

The Leeshyah Wooden Play Kitchen is crafted from non-toxic wood with smooth, rounded edges to meet stringent safety standards. Adult supervision is recommended during play. Ensure all parts are securely fastened during assembly to prevent hazards. This product is intended for children aged 3 years and up.

PACKAGE CONTENTS

Verify that all components are present before beginning assembly. The package includes:

- Wooden play kitchen components
- Assembly hardware (screws, connectors)
- 12 accessories:
 - 3 hooks
 - 1 spoon
 - 1 spatula
 - 1 pasta fork
 - 2 ice cubes
 - 1 cup
 - 1 salt shaker

- 1 pepper shaker
- 2 coffee cups
- 1 pan
- 1 pot
- Instruction manual (this document)



Image: The Leeshyah Wooden Play Kitchen with all 12 included accessories displayed.

SETUP AND ASSEMBLY

Assembly of the Leeshyah Wooden Play Kitchen requires adult supervision and typically takes approximately 2-3 hours. It is recommended to have two adults for easier assembly. Follow the step-by-step instructions provided in the separate assembly guide included in your package. Ensure all screws and fasteners are tightened securely to maintain stability.

Assembly Tips:

- Organize all parts and hardware before starting.
- Refer to the detailed diagrams in the assembly guide.

- Do not overtighten screws to avoid damaging the wood.
- If screws seem too small or do not fit, double-check the part numbers against the instructions.



Image: A fully assembled Leeshyah Wooden Play Kitchen, showcasing its various sections including the microwave, stove, sink, and ice maker.

OPERATING INSTRUCTIONS

The Leeshyah Wooden Play Kitchen features several interactive elements designed to enhance imaginative play:

1. Stove with Lights and Sounds

Place a pot or pan on the stove burners. Turn the knobs to activate realistic cooking sounds and lights, simulating a boiling or sizzling effect. This feature encourages role-play and sensory engagement.



Image: A close-up view of the play kitchen's stove, highlighting the sound and light features when a knob is turned.

2. Rotatable Faucet and Sink

The sink area includes a faucet with rotatable handles. Children can pretend to wash dishes or fill cups, promoting fine motor skills and imaginative scenarios.



Image: A child interacting with the rotatable faucet and sink, simulating washing.

3. Ice Maker

The ice maker feature allows children to press a button and dispense pretend ice cubes into a cup, adding a realistic touch to their play experience.



Image: A child pressing the ice maker button to dispense pretend ice cubes.

4. Oven and Microwave

The oven and microwave doors open and close, providing space for pretend baking and cooking. The oven includes a pull-out rack for placing play food. Knobs on the microwave and oven can be turned for interactive play.



Image: A child demonstrating the use of the oven, placing a toy pizza inside.

Fun Cooking Experience



Faucet rotatable

Stove sound and light

Image: A child turning the knobs on the microwave, simulating cooking.

5. Coffee Maker

A dedicated coffee maker area allows children to pretend to brew coffee, complete with cups for serving. This adds another dimension to role-playing scenarios.



Image: A child placing a cup under the coffee maker, simulating brewing.

6. Storage Cabinets and Shelves

The play kitchen includes various cabinets and open shelves for storing play food, dishes, and accessories. This helps children learn organization and keeps the play area tidy.



Image: A child opening a storage cabinet, revealing space for play items.

Product Demonstration Video

Your browser does not support the video tag.

Video: A demonstration of the Leeshyah Wooden Play Kitchen's interactive features, including the stove, oven, sink, and ice maker.

MAINTENANCE AND CARE

To ensure the longevity and cleanliness of your wooden play kitchen, follow these maintenance guidelines:

- Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners, as they can damage the wood finish.
- Drying:** Ensure the play kitchen is thoroughly dry after cleaning to prevent moisture damage.
- Storage:** Store the play kitchen in a dry environment, away from direct sunlight or extreme temperatures, which can cause warping or fading.
- Inspection:** Periodically check all screws and connections to ensure they remain tight. Retighten if necessary.

TROUBLESHOOTING

Here are solutions to common issues you might encounter:

Problem	Possible Cause	Solution
Parts do not align during assembly.	Incorrect orientation of parts or mislabeled hardware.	Review the assembly guide carefully, ensuring each piece is oriented correctly. Verify hardware matches the corresponding steps.
Screws are missing or do not fit.	Packaging error or incorrect screw selection.	Check all packaging thoroughly for small parts. Ensure you are using the correct screw type and length for each step as indicated in the assembly guide. Contact customer support if parts are genuinely missing.
Doors or drawers do not close properly.	Misalignment during assembly or loose hinges/slides.	Inspect hinges and drawer slides for proper installation. Adjust alignment if necessary. Ensure all connecting screws are tight.

Problem	Possible Cause	Solution
Stove lights/sounds not working.	Batteries are low or incorrectly installed.	Check battery compartment for correct battery placement and ensure batteries are fresh. Replace if needed.

SPECIFICATIONS

- Product Dimensions:** 8 x 38 x 15 inches
- Item Weight:** 45.6 pounds
- Model Number:** B0FD9X2WYG
- Manufacturer Recommended Age:** 3 years and up
- Material:** Wooden construction
- Interactive Features:** Lights & Sounds (stove), Ice Maker, Rotatable Faucet, Opening Oven/Microwave doors
- Included Accessories:** 12 pieces (hooks, utensils, ice cubes, cups, shakers, pan, pot)

WARRANTY AND SUPPORT

Specific warranty information is not provided in the product details. For any warranty claims, missing parts, or technical support, please contact Leeshyah customer service directly through the retailer where the product was purchased or refer to the contact information provided in the product packaging.