

- Manuals.plus /
- › MgaoLo /
- › MgaoLo Mini Karaoke Machine Toy User Manual - Model B0FD9YD7VN

MgaoLo B0FD9YD7VN

Mgaolo Mini Karaoke Machine Toy User Manual

Model: B0FD9YD7VN

1. PRODUCT OVERVIEW

The Mgaolo Mini Karaoke Machine is a portable entertainment device designed for children, featuring a Bluetooth speaker and two wireless microphones. It includes interactive LED lights and various voice effects to enhance the user experience.



Figure 1: The Mgaolo Mini Karaoke Machine, a compact pink speaker with a brown handle, accompanied by two matching pink wireless microphones. The speaker features a front grille and control buttons on top.

Package Contents:

- 1x Karaoke Speaker
- 2x Wireless Microphones
- 1x USB Type-C Charging Cable
- 1x User Manual

2. SETUP

2.1 Charging the Device and Microphones

Before initial use, fully charge the karaoke speaker and both wireless microphones. Use the provided USB Type-C charging cable.

- Connect the USB Type-C cable to the charging port on the speaker and each microphone.
- Connect the other end of the cable to a compatible USB power adapter (not included).
- A red indicator light on the microphones will turn off when fully charged.

COMPACT AND PORTABLE SIZE

SPEAKER
115*65*98mm
4.52*2.55*3.85 in

300G
10.58oz

MIKE
138*38*38mm
5.43*1.49*1.49 in

65G
2.29oz



Figure 2: Illustration of the karaoke machine's charging process and battery specifications. The speaker has a 1500mAh rechargeable battery, offering 6-10+ hours of play time with a 2-3 hour charging time.

2.2 Powering On/Off

- **Speaker:** Long press the power button on the top of the speaker to turn it on or off.
- **Microphones:** Long press the power button on each microphone to turn it on or off.

2.3 Pairing Microphones

The wireless microphones are designed to automatically pair with the speaker when both are powered on. A blue indicator light on the microphone confirms successful pairing.

2.4 Connecting to an Audio Source

The karaoke machine supports multiple connection methods:

- **Bluetooth 5.3:** Turn on the speaker and enable Bluetooth on your smartphone, tablet, or other compatible device. Select "Mgaolo Karaoke" from the list of available devices to connect.
- **TF Card:** Insert a TF (Micro SD) card with pre-loaded music into the designated slot on the back of the speaker.
- **AUX Input:** Connect an external audio device using a 3.5mm AUX cable (not included) to the AUX port on the back of the speaker.

EASY TO CONNECT & PLAY

Match Your Mobile Device Quickly



Figure 3: The compact pink karaoke speaker is shown connected to a laptop, tablet, and smartphone, illustrating its versatile connectivity options including Bluetooth, TF card, and AUX input.

3. OPERATING INSTRUCTIONS

3.1 Speaker Controls

- **Power Button:** Long press to turn the speaker on/off.
- **Volume +/-:** Short press to adjust the speaker's music volume.

- **Play/Pause:** Short press to play or pause music.
- **Mode (M) Button:** Short press to switch between Bluetooth, TF card, and AUX input modes.
- **LED Light Control:** Short press the light button to cycle through different LED lighting effects. Long press to turn off the LED effect.

3.2 Microphone Controls

- **Power Button:** Long press to turn the microphone on/off.
- **Microphone Volume +/-:** Short press to adjust the microphone's output volume through the speaker.
- **Voice Changer Button:** Short press to cycle through 5 different voice effects (Original, Baby, Male, Female, Monster).
- **Echo Effect:** Short press the '+' or '-' button on the microphone to cycle and adjust the echo volume.
- **Vocal Removal:** Long press the microphone button on the speaker to remove or restore music vocals from a playing track.



Figure 4: Visual representation of the five distinct voice effects: Original Voice, Baby Voice, Male Voice, Female Voice, and Monster Voice, accessible via the microphone's voice changer button.

3.3 Interactive LED Lights

The speaker features multi-color LED lights that synchronize with music rhythms, creating a dynamic visual display. These lights can be controlled via the dedicated light button on the speaker.

4. MAINTENANCE

4.1 Charging

Ensure the device and microphones are charged regularly. The speaker provides 6-10 hours of play time on a 2-3 hour charge. Use only the provided USB Type-C cable for charging.

4.2 Cleaning

Wipe the device and microphones with a soft, dry cloth. Avoid using abrasive cleaners or solvents that may damage the surface.

4.3 Storage

Store the karaoke machine and microphones in a cool, dry place away from direct sunlight and extreme temperatures when not in use.

5. TROUBLESHOOTING

- **No Sound from Speaker:**
 - Ensure the speaker is powered on and charged.
 - Check the speaker's volume level.
 - Verify the audio source (Bluetooth, TF card, AUX) is correctly connected and playing.
- **No Sound from Microphone:**
 - Ensure the microphone is powered on and charged.
 - Check the microphone's volume level.
 - Confirm the microphone is successfully paired with the speaker (blue indicator light).
- **Distorted Sound:**
 - Reduce the volume of both the speaker and the microphone.
 - Ensure the microphone is not too close to the speaker to prevent feedback.
- **Bluetooth Pairing Issues:**
 - Make sure the speaker is in Bluetooth mode.
 - Disable and re-enable Bluetooth on your audio source device.
 - Move the speaker closer to your audio source.
- **LED Lights Not Working:**
 - Short press the light button on the speaker to activate or change the light mode.
 - Ensure the speaker is powered on.

6. SPECIFICATIONS

Feature	Specification
Brand	MgaoLo
Model Number	B0FD9YD7VN
Item Weight	1.12 pounds
Product Dimensions	4.33 x 3.94 x 2.36 inches
Batteries	1 Nonstandard Battery (included)
Battery Type	Lithium Ion
Power Source	Battery Powered
Connector Type	USB Type C
Speaker Count	1
Special Features	Echo Effect, Light Up Speaker, Lightweight, Portable, Rechargeable
Compatible Devices	MP3 Player, Smartphone, Tablet, Speaker

7. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official Mgaolo website.

© 2025 Mgaolo. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0FD9YD7VN>

More documents and user manuals: <https://manuals.plus/>