

[Manuals.plus](#) /

> [Juboos](#) /

> Juboos Kids Digital Watch Instruction Manual

Juboos 24211

Juboos Kids Digital Watch Instruction Manual

Model: 24211

PRODUCT OVERVIEW

The Juboos Kids Digital Watch is designed for boys and girls aged 7-16, offering a blend of style and practicality. This 3ATM waterproof sports watch features a night light, alarm clock, and stopwatch, making it suitable for various daily activities.





Image: Front view of the Juboos Kids Digital Watch in black, displaying the time and date.

Key Features

- **Multi-functional:** Includes calendar, alarm clock, and stopwatch.
- **Durable Design:** Features a high-definition plexiglass mirror, rounded edges, and a shockproof 3D case to protect the movement.
- **3ATM Water Resistance:** Suitable for hand washing and rain exposure. *Note: Not for bathing or swimming. Do not press buttons underwater.*
- **Comfortable Wear:** Soft, skin-friendly, and adjustable strap for a comfortable fit.
- **Night Light:** Press the "LIGHT" button for clear time display in dark environments.

Kids digital watch Multi-function



Alarm clock



Stopwatch



Calender



12/24H



LED Light



Hourly Chime



30M
Waterproof



Anti-Shock



Image: Visual representation of the watch's multi-functions, including alarm, stopwatch, calendar, and water resistance.

SETUP AND BUTTON FUNCTIONS

The watch features four main buttons for various operations:



Image: Detailed diagram of the watch face and buttons, indicating their functions and display elements.

1. **LIGHT Button (Top Left):** Activates the backlight for 3 seconds.
2. **MODE Button (Bottom Left):** Cycles through different modes (Time, Alarm, Stopwatch).
3. **START Button (Top Right):** Used to start/stop functions in Stopwatch mode or adjust settings during setup.
4. **RESET Button (Bottom Right):** Used to reset functions or confirm settings during setup.

Setting the Time and Date:

Specific instructions for setting the time and date are typically found in the included manual. Generally, you will press the MODE button until the time display flashes, then use the START and RESET buttons to adjust the hour, minute, and date. Press MODE again to confirm and exit setting mode.

OPERATING INSTRUCTIONS

Using the Backlight:

To illuminate the display in low-light conditions, press the **LIGHT** button located on the top left side of the watch. The light will remain on for approximately 3 seconds.



Image: Demonstrates pressing the LIGHT button to activate the backlight for 3 seconds.

Using the Stopwatch:

1. Press the **MODE** button repeatedly until the stopwatch display appears (usually showing "00:00:00").
2. Press the **START** button to begin timing.
3. Press the **START** button again to pause timing.
4. Press the **RESET** button to clear the stopwatch to zero.

Setting the Alarm:

1. Press the **MODE** button until the alarm setting appears (often indicated by an alarm icon).
2. Use the **START** and **RESET** buttons to adjust the alarm hour and minute.
3. Press **MODE** to confirm the alarm time and exit.

4. To turn the alarm on or off, typically press the **START** button while in alarm mode.

MAINTENANCE AND CARE

- **Water Resistance:** The watch is 3ATM (30 meters/98 feet) water resistant. This means it can withstand splashes, rain, and hand washing.
- **Important Water Resistance Notes:**
 - *Do not press any buttons while the watch is submerged in water.*
 - *Do not wear the watch during bathing, showering, or swimming.*
 - *Avoid exposure to hot water or high temperatures, as this can compromise the water seal.*
- **Cleaning:** Wipe the watch with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, but ensure no water enters the watch.
- **Storage:** Store the watch in a cool, dry place away from direct sunlight and extreme temperatures when not in use.
- **Battery Replacement:** Battery replacement should be performed by a qualified watch technician to ensure the water resistance seal is maintained.



Image: Illustrates the watch's water resistance for daily activities like hand washing, with warnings against high temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Watch display is blank or dim.	Low or dead battery.	Replace the battery. Consult a professional to maintain water resistance.
Time is inaccurate.	Time needs to be reset; battery is low.	Reset the time according to the "Setting the Time and Date" section. If problem persists, replace battery.
Buttons are unresponsive.	Watch may be in a locked mode; internal malfunction.	Try pressing the MODE button multiple times. If unresponsive, the watch may require professional inspection.

Problem	Possible Cause	Solution
Watch is not water resistant as expected.	Buttons pressed underwater; exposed to high temperatures; seal compromised.	Ensure no buttons are pressed underwater. Avoid hot water. If water ingress occurs, dry immediately and seek professional repair.
Metal clasp causes discomfort.	Sharp edge on the clasp.	Wear the watch looser or consider applying a protective layer to the inside of the clasp if discomfort persists.

SPECIFICATIONS

Feature	Detail
Model Number	24211
Brand	Juboos
Water Resistance	3ATM (30 meters / 98 feet)
Movement	Japanese Imported Digital Movement
Display Type	Digital
Functions	Time, Date, Day of Week, Alarm, Stopwatch, Night Light, Hourly Chime
Mirror Material	High definition plexiglass
Clasp Type	Buckle
Weight	0.92 ounces (approx. 26 grams)
Dimensions (Watch Face)	Approx. 3.5cm (1.38in) height x 1.7cm (0.67in) width
Strap Length (Total)	Approx. 23.5cm (9.25in)



Image: Detailed dimensions and weight of the Juboos Kids Digital Watch.

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the product packaging or contact Juboos customer service directly. Specific warranty terms and conditions may vary.

You can visit the official Juboos store on Amazon for more information: [Juboos Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0FD9YDG5Z>

More documents and user manuals: **<https://manuals.plus/>**