

Manuals.plus /

› KAPEYDESI /

› KAPEYDESI Captain 400 Wireless Gaming Headset Instruction Manual

KAPEYDESI Captain 400

KAPEYDESI Captain 400 Wireless Gaming Headset Instruction Manual

Model: Captain 400

1. INTRODUCTION

This manual provides detailed instructions for the proper use and maintenance of your KAPEYDESI Captain 400 Wireless Gaming Headset. Please read this manual thoroughly before using the product to ensure optimal performance and longevity.



Figure 1: KAPEYDESI Captain 400 Wireless Gaming Headset in Midnight Blue.

2. PACKAGE CONTENTS

Verify that all items are present in the package:

- 1x Captain 400 Wireless Gaming Headset
- 1x Detachable Noise-canceling Microphone
- 1x USB Transmitter (2.4GHz dongle)
- 1x Type-C Charging Cable
- 1x 3.5mm Aux Cable
- 1x User Manual (this document)



Figure 2: Headset with included USB transmitter, Type-C charging cable, and 3.5mm Aux cable.

3. PRODUCT OVERVIEW

3.1 Headset Features

- **Audio Drivers:** 50mm PET dynamic drivers for precise sound reproduction.
- **Microphone:** Detachable, omni-directional, with Environmental Noise Canceling (ENC) technology.
- **Comfort:** Breathable mesh earmuffs, wide head beam protection, adaptive ear shell design, ultra-light construction.
- **Connectivity:** 2.4GHz Wireless, Bluetooth 5.2, 3.5mm Wired.
- **Battery Life:** Up to 40 hours (25 hours with LED lights active).
- **Charging:** USB Type-C, approximately 2.5 hours for a full charge. Supports use while charging.

3.2 Controls and Ports

The headset features intuitive controls for easy operation:

- **Volume Slider:** Adjusts audio output level.
- **Power Button:** Turns the headset on/off.
- **Mute Button:** Mutes/unmutes the microphone.
- **Mode Switch:** Toggles between 2.4GHz wireless and Bluetooth modes.

- **USB Type-C Port:** For charging the headset.
- **3.5mm Audio Jack:** For wired connection.
- **Microphone Port:** For attaching the detachable microphone.

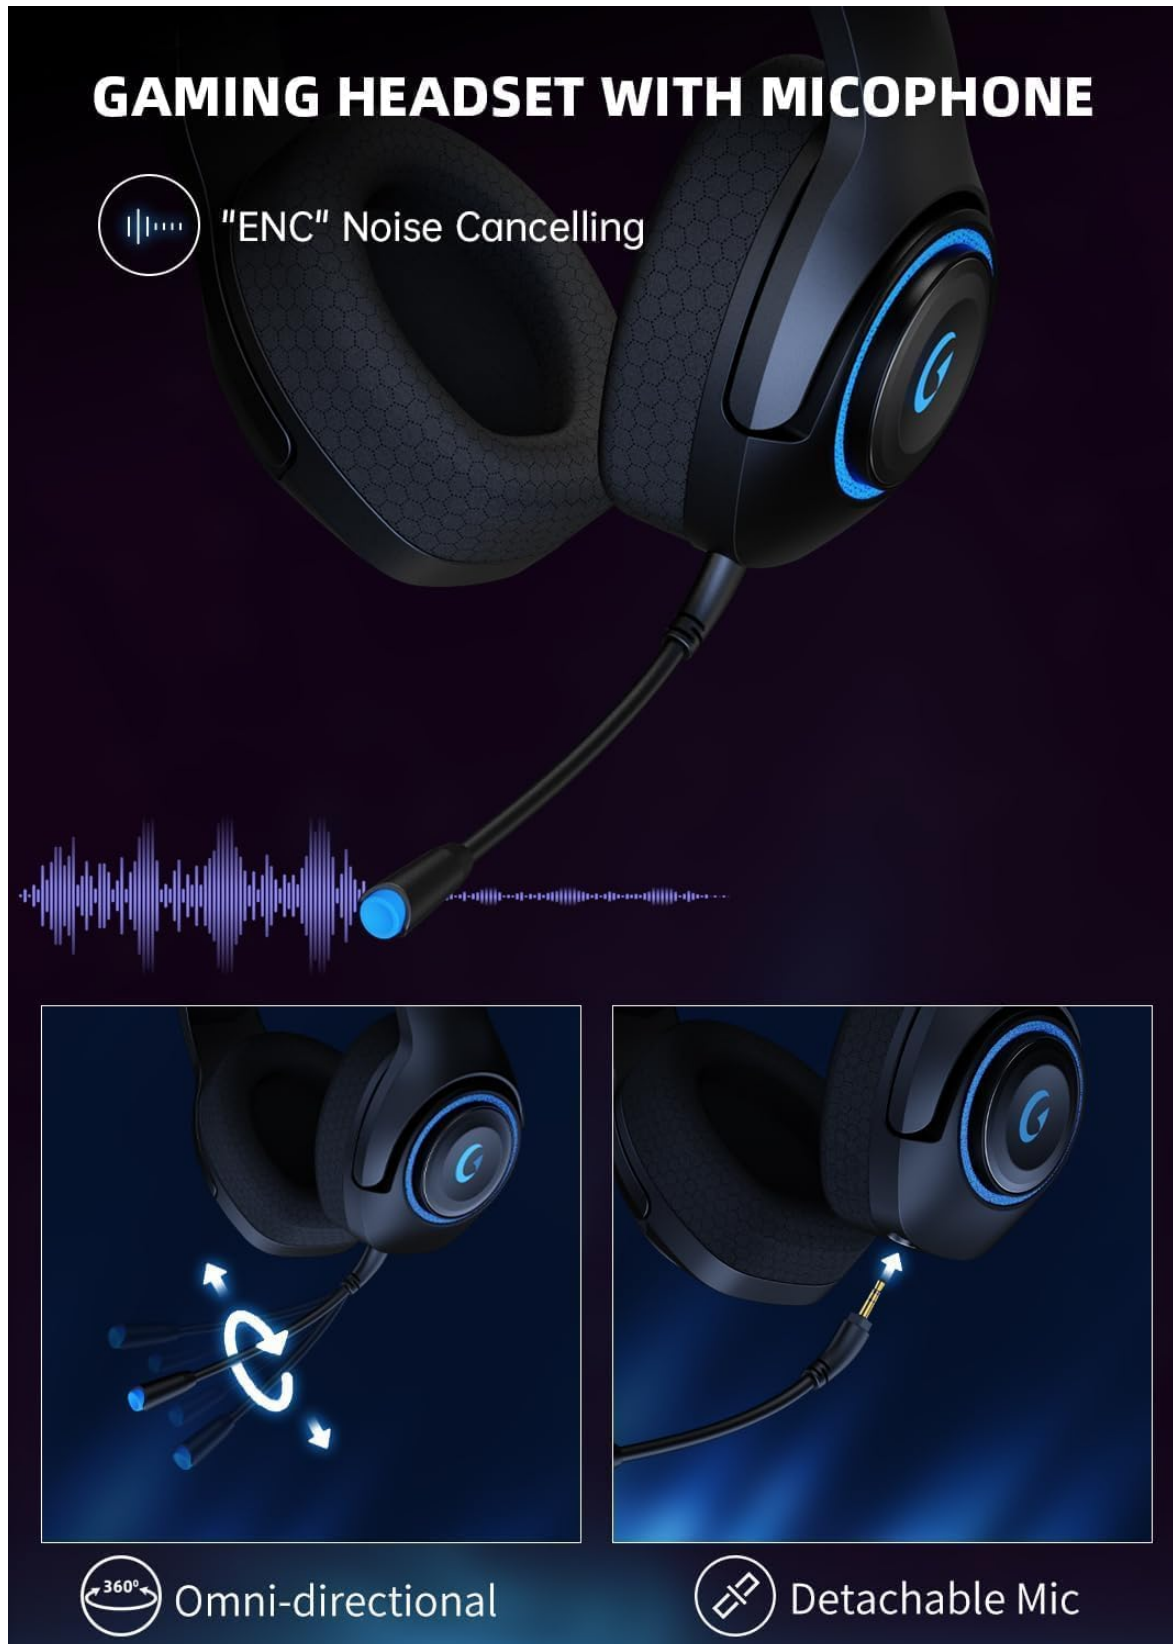


Figure 3: Detachable microphone and control layout on the headset.

4. SETUP AND CONNECTION

4.1 2.4GHz Wireless Connection (PC, PS4, PS5, Nintendo Switch)

1. Plug the USB Transmitter into an available USB port on your device (PC, PS4, PS5, or Nintendo Switch dock).
2. Power on the Captain 400 headset by pressing and holding the Power button.
3. Ensure the headset is in 2.4GHz mode (indicated by a specific LED color or voice prompt).
4. The headset will automatically pair with the USB Transmitter. A successful connection will be indicated by a steady LED light on the headset.

Video 1: Instructions on connecting the CT400 Gaming Headphones with Nintendo Switch.

Video 2: Instructions on connecting the Captain 400 Gaming Headset with PC.

Video 3: Instructions on connecting the CT400 Gaming Headset with PS5.

4.2 Bluetooth 5.2 Connection (Phones, Tablets, Nintendo Switch)

1. Power on the Captain 400 headset.
2. Double-click the Mode Switch button to enter Bluetooth pairing mode. The LED indicator will flash, signifying it's ready to pair.
3. On your mobile device or Nintendo Switch, go to Bluetooth settings and select "Captain 400" from the list of available devices.
4. Once connected, the LED indicator on the headset will become steady.

4.3 Wired Connection (Devices with 3.5mm Jack, Xbox Series)

1. Ensure the headset is powered off for wired mode.
2. Connect one end of the 3.5mm Aux Cable to the 3.5mm audio jack on the headset.
3. Connect the other end of the 3.5mm Aux Cable to your device's 3.5mm audio port.
4. **Note for Xbox:** An adapter (not included) may be required to connect the 3.5mm cable directly to an Xbox controller.

3 TYPES OF CONNECTION



- a** **USB Interface: PS4/5, Notebook, Desktop, MAC, Switch, etc**
(Wireless mode not compatible with Xbox series)
- b** **Bluetooth: Phone, Pad, Laptop, etc.**
(Wireless mode not compatible with Xbox series)
- c** **3.5MM Jack Wired: All platform.**
(Xbox series consoles only support wired connections)

Figure 4: Visual representation of the three available connection modes.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

- To power on, press and hold the Power button until the LED indicator lights up.
- To power off, press and hold the Power button until the LED indicator turns off.

5.2 Volume Control

- Use the Volume Slider on the headset to increase or decrease the audio volume.

5.3 Microphone Usage

- Attach the detachable microphone to the microphone port on the headset.
- To mute the microphone, press the Mute button. Press again to unmute.
- Adjust the flexible microphone boom for optimal voice pickup.
- **Note:** The microphone may not function with Nintendo Switch in certain modes. Contact customer support if microphone issues persist with PS5.

Video 4: Overview of the Captain 400 Gaming Headset Wireless with Mic.

5.4 LED Lighting

- The headset features LED lighting. You can disable the lights at any time to conserve battery life. Refer to the specific button on your headset for LED control.

6. CHARGING

To charge the Captain 400 headset:

1. Connect the Type-C Charging Cable to the USB Type-C port on the headset.
2. Connect the other end of the charging cable to a compatible USB power source (e.g., PC, wall adapter).
3. The LED indicator will show charging status. A full charge takes approximately 2.5 hours.
4. The headset provides voice prompts when the battery level falls below 3%.
5. The headset can be used while charging.

SUPER BATTERY LIFE



Over 40H
Without LED Light



22H With
Dazzling Light



2.5H Fully
Charged

40H



Figure 5: Battery life and charging information for the headset.

7. MAINTENANCE & CARE

- Clean the headset regularly with a soft, dry cloth.
- Avoid exposing the headset to extreme temperatures, humidity, or direct sunlight.
- Do not attempt to disassemble or repair the headset yourself. This may void the warranty.
- Store the headset in a cool, dry place when not in use. The foldable design allows for compact storage.

ERGONOMIC DESIGN



Figure 6: Ergonomic design features contributing to headset comfort and durability.

8. TROUBLESHOOTING

Problem	Possible Solution
No sound from headset	Check volume levels on both headset and device. Ensure correct connection mode (2.4GHz, Bluetooth, or wired). Verify headset is powered on and charged.
Microphone not working	Ensure microphone is securely attached and not muted. Check device's audio input settings. Note: Microphone may not work with Nintendo Switch in some modes.
Headset not pairing (2.4GHz)	Ensure USB Transmitter is correctly plugged in. Verify headset is in 2.4GHz mode. Try unplugging and re-plugging the transmitter.
Headset not pairing (Bluetooth)	Ensure headset is in Bluetooth pairing mode (flashing LED). Make sure Bluetooth is enabled on your device and select "Captain 400".
Short battery life	Ensure LED lights are off if not needed. Fully charge the headset before use. Battery life is up to 25 hours with LEDs on.

9. SPECIFICATIONS

- **Model Name:** Captain 400
- **Connectivity Technology:** Wired (3.5mm jack), Wireless (2.4GHz USB dongle, Bluetooth V5.2)
- **Audio Driver Type:** Dynamic Driver
- **Audio Driver Size:** 50 Millimeters
- **Noise Control:** Sound Isolation (ENC Microphone)
- **Battery Life:** 40 Hours (without LED), 25 Hours (with LED)
- **Charging Time:** 2.5 Hours
- **Bluetooth Version:** 5.2
- **Bluetooth Range:** 49 Feet
- **Impedance:** 20 Ohms
- **Material:** Acrylonitrile Butadiene Styrene (ABS), Mesh Earmuffs, Plastic
- **Item Weight:** 1.1 pounds

10. WARRANTY & SUPPORT

KAPEYDESI is committed to providing comprehensive assistance to all users. For any product-related inquiries or support, please contact our expert customer support team. We ensure responses within 12-24 hours. For contact information, please refer to the packaging or the official KAPEYDESI website.