

Devoko 0815

Devoko Electric Recliner Armchair Instruction Manual

Model: 0815

1. INTRODUCTION

Thank you for choosing the Devoko Electric Recliner Armchair. This manual provides essential information for the safe assembly, operation, and maintenance of your new recliner. Please read these instructions carefully before use and retain them for future reference.

This electric recliner offers premium comfort with high-density foam padding, an electrically adjustable backrest and footrest, and multiple reclining angles from 105° to 155°. It features a robust structure with a weight capacity of 136 kg and non-slip feet for stability.

2. SAFETY INSTRUCTIONS

WARNING: Failure to follow these safety instructions may result in injury or damage to the product.

- Ensure all components are securely assembled before use.
- Keep children and pets away from the recliner's moving parts during operation.
- Do not allow children to play on or with the recliner.
- This recliner is not ideal for elderly or injured users. Individuals aged 65 and above should exercise caution and consider assistance when using.
- Do not place hands or feet near the reclining mechanism to avoid pinching.
- Only use the provided power adapter. Do not use damaged cords or plugs.
- Unplug the recliner from the power outlet before cleaning or maintenance.
- Do not expose the recliner to excessive moisture or direct sunlight.
- Do not exceed the maximum weight capacity of 136 kg (300 lbs).

3. PACKAGE CONTENTS

Please check the package carefully to ensure all parts are present and undamaged. If any parts are missing or damaged, please contact customer support.

- Backrest Section
- Seat Base Section with Armrests
- Power Adapter and Remote Control
- Four (4) Non-slip Feet
- Instruction Manual



Image 1: Assembled Devoko Electric Recliner Armchair. This image shows the complete recliner, illustrating the overall design and components once assembled.

4. ASSEMBLY INSTRUCTIONS

Assembly of your Devoko Electric Recliner Armchair is designed to be tool-free and typically takes approximately 30 minutes. Follow these steps carefully:

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, soft surface to prevent scratches.
2. **Attach Non-slip Feet:** Locate the four non-slip feet and screw them into the designated holes on the bottom of the seat base section. Ensure they are tightened securely to enhance stability and protect your floor.
3. **Connect Backrest:** Align the metal brackets on the backrest section with the corresponding slots on

the seat base section. Slide the backrest down firmly until it clicks into place. Ensure both sides are securely engaged.

4. **Connect Power Cables:** Locate the power cables extending from the backrest and seat base. Connect them securely. Then, connect the power adapter to the recliner's main power input and plug it into a wall outlet.
5. **Final Check:** Gently rock the recliner to ensure all connections are stable. Test the reclining function using the remote control before full use.



Image 2: Devoko Electric Recliner Armchair in an assembled state. This image provides a visual reference of the fully assembled product, ready for use.

5. OPERATING INSTRUCTIONS

Your Devoko Electric Recliner Armchair is equipped with an easy-to-use remote control for adjusting the reclining position.

1. **Power Connection:** Ensure the recliner is properly plugged into a functioning electrical outlet.
2. **Using the Remote Control:** The remote control has buttons to adjust the backrest and footrest.
3. **Reclining Function:** Press and hold the 'Recline' button on the remote to smoothly recline the backrest and raise the footrest simultaneously. The backrest and armrests support synchronous

adjustment.

- Upright Position:** Press and hold the 'Upright' button to return the recliner to its original, upright position.
- Adjustable Angles:** The recliner supports angle adjustment within the range of 105° (upright) to 155° (fully reclined). Release the button at your desired angle.

Note: The high-performance brushless motor ensures smooth and quiet operation. Avoid forcing the recliner into positions beyond its designed range.

6. MAINTENANCE

Proper care will extend the life and appearance of your Devoko Electric Recliner Armchair.

- Cleaning Fabric:** For general cleaning, use a soft, damp cloth with mild soap and water. Blot spills immediately. Do not use harsh chemicals or abrasive cleaners, as they may damage the fabric.
- Vacuuming:** Regularly vacuum the recliner using a soft brush attachment to remove dust and debris.
- Electrical Components:** Keep the power cord and adapter free from damage. Do not attempt to repair electrical components yourself.
- Moving the Recliner:** When moving the recliner, lift it rather than dragging to prevent damage to the feet and floor.
- Inspection:** Periodically check all connections and fasteners to ensure they remain tight.

7. TROUBLESHOOTING

If you encounter any issues with your recliner, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Recliner does not operate.	No power supply.	Check if the power cord is securely plugged into the wall outlet and the recliner. Ensure the outlet is functional.
Recliner operates slowly or intermittently.	Low power or obstruction.	Ensure the power adapter is fully connected. Check for any obstructions in the reclining mechanism.
Unusual noise during operation.	Loose connection or foreign object.	Inspect for any loose parts or objects caught in the mechanism. Tighten any visible loose fasteners.
Backrest or footrest not moving smoothly.	Mechanism obstruction.	Ensure there are no items obstructing the movement of the backrest or footrest.

If the problem persists after attempting these solutions, please contact Devoko customer support for assistance.

8. SPECIFICATIONS

- Brand:** Devoko
- Model:** 0815
- Material Type:** Fabric

- **Colour:** Grey
- **Product Dimensions (D x W x H):** 55 x 55 x 103 cm (21.65 x 21.65 x 40.55 inches)
- **Item Weight:** 18 kg (39.68 lbs)
- **Weight Capacity:** 136 kg (300 lbs)
- **Adjustable Angle Range:** 105° - 155°
- **Special Features:** Adjustable Backrest, Foldable (for transport/storage)
- **Power Source:** Electric (via power adapter)

9. WARRANTY AND SUPPORT

Devoko products are manufactured to high-quality standards. For specific warranty information, please refer to the warranty card included with your purchase or visit the official Devoko website.

If you require technical support, have questions about assembly, or need assistance with troubleshooting, please contact Devoko customer service. Have your model number (0815) and purchase details ready when contacting support.

Thank you for choosing Devoko.