

[Manuals.plus](#) /

› [Seesii](#) /

› SEESII 12-Inch Cordless Chainsaw M12 Studio User Manual

Seesii M12 Studio

SEESII 12-Inch Cordless Chainsaw

MODEL: M12 STUDIO USER MANUAL

1. Important Safety Information

Always read and understand all safety warnings and instructions before operating this chainsaw. Failure to follow the warnings and instructions may result in electric shock, fire, and/or serious injury.

- **Personal Protective Equipment (PPE):** Always wear safety glasses, hearing protection, gloves, sturdy footwear, and appropriate clothing (no loose clothing or jewelry).
- **Work Area:** Keep the work area clean and well-lit. Clear all bystanders, children, and pets from the work area.
- **Secure Grip:** Always hold the chainsaw firmly with both hands.
- **Kickback Prevention:** Be aware of the risk of kickback. Avoid the guide bar tip contacting any object.
- **Battery Safety:** Use only the specified battery pack and charger. Do not expose batteries to heat or fire.
- **Maintenance:** Keep the chainsaw well-maintained. Ensure the chain is sharp and properly tensioned.

For detailed safety guidelines, please refer to the official safety document: [Safety Information \(PDF\)](#)

2. Package Contents

Carefully unpack all items and check against the list below. If any parts are missing or damaged, contact customer support.

Contenido de la caja



- | | |
|-------------------------------------|------------------------------|
| 1* Motosierra SEESII de 12 pulgadas | 1* Guantes |
| 2* Baterías de 5000 mAh | 1* Gafas de seguridad |
| 1* Cargador | 1* Botella de aceite vacía |
| 1* Protector guía | 1* Destornillador de montaje |
| 1* Cadena de 12 pulgadas | |

Image: All items included in the SEESII 12-inch cordless chainsaw package.

- 1x SEESII 12-inch Chainsaw
- 2x 5000 mAh Batteries
- 1x Charger
- 1x Guide Bar Protector
- 1x 12-inch Chain
- 1x Pair of Gloves

- 1x Safety Glasses
- 1x Empty Oil Bottle
- 1x Assembly Screwdriver

3. Setup

3.1. Battery Charging

Before first use, fully charge both 5.0Ah lithium-ion batteries. Connect the charger to a power outlet and then to the battery. The charging indicator light will show the charging status. A full charge typically takes approximately 2.5 hours per battery.

3.2. Chain and Guide Bar Installation

1. Ensure the battery is removed from the chainsaw.
2. Loosen the chain tensioning knob (tool-free adjustment) and remove the side cover.
3. Carefully place the chain around the drive sprocket and then into the groove of the guide bar. Ensure the cutting edges of the chain are facing the correct direction (refer to the arrow on the guide bar).
4. Position the guide bar onto the chainsaw, ensuring the chain tensioning pin fits into the hole on the guide bar.
5. Replace the side cover and hand-tighten the chain tensioning knob.
6. Adjust the chain tension by rotating the knob. The chain should be snug against the guide bar but still able to be pulled freely by hand. A properly tensioned chain will have about 2-3mm of play when pulled away from the bar at its midpoint.
7. Once tensioned, fully tighten the chain tensioning knob.



Tensado de cadena sin herramientas

Ajuste de cadena completado fácilmente,
listo para trabajar al instante

Image: Adjusting the tool-free chain tension.

3.3. Filling the Automatic Lubrication System

The chainsaw features an automatic lubrication system to ensure smooth operation and prolong chain life.

1. Ensure the battery is removed.
2. Locate the oil reservoir cap on the chainsaw.
3. Unscrew the cap and fill the reservoir with high-quality bar and chain oil (not included). Use the provided empty oil

bottle for easier pouring.

4. Do not overfill. Monitor the oil level through the transparent window during operation.
5. Securely replace the oil reservoir cap.



Sistema de lubricación de cadena

Sin presión necesaria, mantenimiento de la cadena más sencillo

Image: Filling the chain oil reservoir.

3.4. Battery Installation

1. Align the battery with the battery slot on the chainsaw.

2. Slide the battery into the slot until it clicks securely into place.
3. To remove, press the battery release button and slide the battery out.



Image: Installing the battery.

4. Operation

4.1. Starting the Chainsaw

Always ensure you are wearing appropriate PPE before starting the chainsaw.

1. Hold the chainsaw firmly with both hands.
2. Press and hold the safety lock button (usually located on the top of the handle).
3. While holding the safety lock button, squeeze the trigger switch to start the chainsaw. Release the trigger to stop.

4.2. Cutting Techniques

- **Stable Stance:** Maintain a balanced and stable stance.
- **Avoid Forcing:** Let the chainsaw do the work. Do not force the chain through the wood.
- **Kickback Zone:** Be aware of the kickback danger zone at the tip of the guide bar.
- **Cutting Small Branches:** Support the branch to prevent it from pinching the chain.
- **Cutting Larger Logs:** Make a relief cut on the underside if the log is under tension, then cut from the top.

4.3. Safety Features

The SEESII M12 Studio chainsaw is equipped with safety features for user protection:

- **Safety Lock Button:** Prevents accidental starting. The trigger cannot be engaged without first pressing this button.
- **Hand Guard:** A reinforced hand guard protects your hand from debris and branches during operation.

El doble de seguridad, corte con confianza



Image: Chainsaw in use, showing safety features.

5. Maintenance

Regular maintenance ensures optimal performance and extends the life of your chainsaw. Always remove the battery before performing any maintenance.

5.1. Chain Tension

Check chain tension frequently, especially during the first hour of use and after prolonged cutting. Adjust as described in Section 3.2.

5.2. Chain Sharpening

A dull chain will reduce cutting efficiency and increase the risk of kickback. Sharpen the chain regularly or replace it when necessary. Refer to a professional for sharpening if unsure.

5.3. Cleaning

- After each use, clean the chainsaw body with a damp cloth.
- Remove the side cover and clean sawdust and debris from around the sprocket, guide bar, and chain.
- Ensure the oil outlet hole is clear of debris to maintain proper lubrication.

5.4. Storage

When not in use, store the chainsaw in a dry, secure place, out of reach of children. Always attach the guide bar protector. Remove the battery before storage.

6. Troubleshooting

Problem	Possible Cause	Solution
Chainsaw does not start	Battery not charged or not inserted correctly; Safety lock not pressed; Trigger not fully squeezed.	Charge battery; Reinsert battery; Press safety lock before trigger; Fully squeeze trigger.
Chain does not move	Chain too tight; Debris jamming chain; Chain or guide bar damaged.	Adjust chain tension; Clean debris; Inspect and replace damaged parts.
Poor cutting performance	Dull chain; Incorrect chain tension; Insufficient oil.	Sharpen or replace chain; Adjust chain tension; Refill oil reservoir.
No oil on chain	Oil reservoir empty; Oil outlet blocked.	Refill oil reservoir; Clean oil outlet.

7. Specifications

Feature	Detail
Brand	Seesii
Model Number	M12 Studio
Power Source	Battery
Motor Type	Brushless
Motor Power	1200 Watts
Guide Bar Length	12 inches
Battery Type	Lithium-ion
Battery Capacity	2x 5.0Ah (5000 mAh)

Feature	Detail
Charging Time	Approx. 2.5 hours per battery
Chain Lubrication	Automatic
Chain Tensioning	Tool-free
Product Dimensions (L x W x H)	20 x 24 x 37 cm
Compatibility	Compatible with Makita 18V batteries

8. Warranty and Support

For warranty information, technical support, or to order replacement parts, please contact the seller or manufacturer directly. Keep your purchase receipt as proof of purchase.

You can visit the official Seesii store for more information:[Seesii Store](#)

© 2026 SEESII. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0FDB8BHX2>

More documents and user manuals: <https://manuals.plus/>