

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Sanyo](#) /

› [Sanyo DRW-500 DVD Recorder/Player Instruction Manual](#)

Sanyo DRW-500

Sanyo DRW-500 DVD Recorder/Player Instruction Manual

Model: DRW-500

INTRODUCTION

This manual provides comprehensive instructions for the safe and efficient operation of your Sanyo DRW-500 DVD Recorder/Player. Please read this manual thoroughly before using the device and retain it for future reference. The Sanyo DRW-500 allows you to record television programs and home videos onto DVD-R/RW discs, as well as play back DVD-Video and Audio CD discs.

IMPORTANT SAFETY INFORMATION

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

Always follow basic safety precautions when using this product to reduce the risk of fire, electric shock, and injury to persons.

- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way.

PACKAGE CONTENTS

Please check that all items are present in the box:

- Sanyo DRW-500 DVD Recorder/Player Unit

- Remote Control
- RCA Audio/Video Cable
- Power Cord
- Instruction Manual (this document)

PRODUCT OVERVIEW

Familiarize yourself with the front and rear panels of your Sanyo DRW-500.



Figure 1: Front Panel of Sanyo DRW-500. Shows the disc tray, power button, play/pause, stop, record buttons, and the display screen.

Front Panel Controls:

- **POWER Button:** Turns the unit on or off.
- **OPEN/CLOSE Button:** Opens and closes the disc tray.
- **PLAY Button:** Starts disc playback.
- **STOP Button:** Stops disc playback or recording.
- **RECORD Button:** Initiates recording.
- **DISPLAY:** Shows current status, time, and track information.

Rear Panel Connections:

- **AUDIO/VIDEO OUT (RCA):** Connects to your TV's audio/video input.
- **S-VIDEO OUT:** Provides higher quality video output to compatible TVs.

- **AUDIO/VIDEO IN (RCA):** Connects to external devices like VCRs or camcorders for recording.
- **POWER IN:** Connects the power cord.

SETUP

1. Connecting to a Television

There are two primary ways to connect your Sanyo DRW-500 to a television:

Option A: RCA (Composite Video) Connection

1. Connect one end of the RCA audio/video cable (red, white, yellow) to the **AUDIO/VIDEO OUT** jacks on the rear of the DRW-500.
2. Connect the other end of the RCA cable to the corresponding **AUDIO/VIDEO IN** jacks on your television. Ensure colors match (yellow to yellow for video, red to red for right audio, white to white for left audio).
3. Select the correct input channel on your TV (e.g., Video 1, AV1, Input 1).

Option B: S-Video Connection (for improved picture quality)

1. Connect an S-Video cable (not included) from the **S-VIDEO OUT** jack on the DRW-500 to the S-Video input on your television.
2. Connect a separate RCA audio cable (red, white) from the **AUDIO OUT** jacks on the DRW-500 to the corresponding audio input jacks on your television. S-Video only carries video, not audio.
3. Select the correct input channel on your TV (e.g., S-Video, Input 2).

2. Power Connection

1. Connect the supplied power cord to the **POWER IN** port on the rear of the DRW-500.
2. Plug the other end of the power cord into a standard AC wall outlet.

3. Initial Setup and Clock Setting

Upon first power-on, the unit may prompt you to set the clock and other basic settings. Follow the on-screen instructions using the remote control.

OPERATING INSTRUCTIONS

Playing a DVD or CD

1. Press the **POWER** button to turn on the unit.
2. Press the **OPEN/CLOSE** button to open the disc tray.
3. Place a DVD or CD disc onto the tray with the label side facing up.
4. Press the **OPEN/CLOSE** button again to close the tray.
5. Playback should begin automatically. If not, press the **PLAY** button.
6. Use the remote control for functions like Pause, Stop, Fast Forward, Rewind, and Chapter Skip.

Recording to DVD-R/RW

The Sanyo DRW-500 can record from various external sources connected to its **AUDIO/VIDEO IN** jacks.

Recording from a TV/Cable Box:

1. Connect the audio/video output of your TV or cable box to the **AUDIO/VIDEO IN** jacks on the rear of the DRW-500.
2. Insert a blank recordable DVD (DVD-R or DVD-RW) into the disc tray.
3. Select the correct input source on the DRW-500 using the **INPUT SELECT** button on the remote control (e.g., L1, L2).
4. Tune your TV/cable box to the desired program.
5. Press the **RECORD** button on the DRW-500 or its remote control to start recording.
6. Press the **STOP** button to end recording.

Recording from a VCR or Camcorder:

1. Connect the audio/video output of your VCR or camcorder to the **AUDIO/VIDEO IN** jacks on the rear of the DRW-500.
2. Insert a blank recordable DVD into the disc tray.
3. Select the correct input source on the DRW-500 using the **INPUT SELECT** button on the remote control.
4. Start playback on your VCR or camcorder.
5. Press the **RECORD** button on the DRW-500 or its remote control to start recording.
6. Press the **STOP** button to end recording.

Finalizing a Disc

For recorded DVD-R/RW discs to be playable on other DVD players, they must be "finalized."

1. Insert the recorded DVD-R/RW disc into the DRW-500.
2. Access the **MENU** on the remote control.
3. Navigate to the "Disc Settings" or "Setup" menu.
4. Select the "Finalize Disc" option.
5. Confirm the action. The finalization process may take several minutes. Do not interrupt power during this process.

Note: DVD-RW discs can be unfinalized and re-recorded multiple times. DVD-R discs, once finalized, cannot be recorded on again.

MAINTENANCE

Cleaning the Unit

- Always unplug the unit from the power outlet before cleaning.
- Use a soft, dry cloth to wipe the exterior of the unit.
- Do not use liquid cleaners, aerosol cleaners, or strong chemical solvents, as these may damage the finish.

Disc Care

- Handle discs by their edges to avoid fingerprints on the recording surface.
- Store discs in their cases when not in use to prevent scratches and dust accumulation.
- Clean dirty discs with a soft, lint-free cloth, wiping gently from the center outwards.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cord not connected securely.	Check power cord connection to the unit and wall outlet.
No picture or sound	Incorrect TV input selected. A/V cables not connected properly.	Select the correct input on your TV. Ensure A/V cables are securely connected to the correct input/output jacks.
Disc does not play	Disc is dirty or scratched. Disc is inserted incorrectly. Incompatible disc format.	Clean the disc. Insert the disc with the label side up. Ensure the disc is a compatible format (DVD-Video, Audio CD, recorded DVD-R/RW).
Cannot record	No blank recordable disc inserted. Disc is full or protected. Incorrect input source selected.	Insert a blank DVD-R or DVD-RW. Use a new disc or erase a DVD-RW. Select the correct input source (e.g., L1, L2).
Recorded disc won't play on other players	Disc not finalized.	Finalize the disc using the "Finalize Disc" option in the unit's menu.

SPECIFICATIONS

Feature	Detail
Model	DRW-500
Manufacturer	Sanyo
Compatible Disc Formats (Playback)	DVD-Video, CD-Audio, DVD-R, DVD-RW (finalized)
Recordable Disc Formats	DVD-R, DVD-RW
Video Output	Composite Video (RCA), S-Video
Audio Output	Stereo RCA
Video Input Compatibility	NTSC
Connectivity Technology	AUX (RCA)
Special Feature	Compact Design
Power Supply	AC 120V, 60Hz (typical for US models)

WARRANTY AND SUPPORT

This product is covered by a limited manufacturer's warranty. Please refer to the warranty card included with your

purchase for specific terms and conditions. For technical support or service inquiries, please contact Sanyo customer service through their official website or the contact information provided in your warranty documentation. *Please note that warranty terms may vary by region and retailer. Keep your proof of purchase for warranty claims.*

© 2024 Sanyo. All rights reserved. Sanyo and the Sanyo logo are registered trademarks.