

Rowenta UB9820E0

Rowenta Air Shape Hair Styler UB9820E0 Instruction Manual

Model: UB9820E0

[Safety Instructions](#)

[Product Components](#)

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the Rowenta Air Shape hair styler. Keep this manual for future reference.

- **Water Hazard:** Do not use this appliance near water, such as in bathtubs, showers, basins, or other vessels containing water. Never immerse the appliance in water or any other liquid.
- **Electrical Safety:** Always unplug the appliance immediately after use and before cleaning. Do not handle the appliance with wet hands. Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.
- **Burn Hazard:** The appliance and its attachments can become very hot during use. Handle with care to avoid burns. Keep away from skin, eyes, and heat-sensitive surfaces.
- **Children:** This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- **Damage:** Do not use the appliance if the cord or plug is damaged, if it is not working properly, or if it has been dropped or damaged. Contact Rowenta customer service for repair.
- **Storage:** Allow the appliance to cool down completely before storing. Do not wrap the cord around the appliance.

2. PRODUCT COMPONENTS

The Rowenta Air Shape hair styler UB9820E0 includes the following components:

- Main Styler Unit (with digital motor)
- Drying Nozzle (Concentrator)
- Round Brush Attachment
- Flat Brush Attachment
- Air Curler Attachment
- Cleaning Brush
- Storage Pouch



Image 2.1: The Rowenta Air Shape main unit and its interchangeable attachments.

3. SETUP AND FIRST USE

1. **Unpack:** Carefully remove all components from the packaging. Retain packaging for storage or future transport.
2. **Inspect:** Check the appliance and all attachments for any signs of damage. Do not use if damaged.
3. **Attach Desired Head:** Select the desired styling attachment (drying nozzle, round brush, flat brush, or air curler). Align the attachment with the main styler unit and push it firmly until it clicks into place. Ensure it is securely fastened before use.
4. **Connect to Power:** Plug the appliance into a suitable electrical outlet.



Image 3.1: The Rowenta Air Shape styler with the drying nozzle attached, ready for use.

4. OPERATING INSTRUCTIONS

The Rowenta Air Shape features a high-speed digital motor and offers multiple settings for versatile styling.

4.1 Power and Settings

- **Power On/Off:** Press the power button to turn the appliance on or off.
- **Temperature Settings:** Use the temperature control switch to select one of 3 heat settings.
- **Speed Settings:** Use the speed control switch to select one of 3 airflow speeds.



4.2 Using the Attachments

Drying Nozzle (Concentrator)

Use this attachment for efficient and rapid drying of your hair. Direct the airflow towards your hair, moving the styler continuously to prevent excessive heat concentration in one area.



Image 4.2: Demonstrating the powerful drying function with the concentrator nozzle.

Round Brush Attachment

Ideal for adding volume and shaping your hair. Work with small sections of hair, placing the brush underneath and rolling it outwards or inwards as you dry. The brush design helps to lift hair from the roots for added body.

CEPILLO REDONDO

El diseño redondo del cepillo permite un secado con volumen a la vez que moldeas tu cabello



Image 4.3: Using the round brush attachment to create volume and shape.

Flat Brush Attachment

Designed for detangling and achieving a smooth, straight finish. Use on damp hair for best results. Brush through sections of hair from root to tip, applying gentle tension. This attachment helps to smooth hair with less heat compared to traditional flat irons.

CEPILLO PLANO

Utiliza el accesorio con el cabello húmedo para lograr un acabado liso de peluquería con hasta 2 veces menos calor*



*vs. el uso de una plancha de pelo a 230 °C

Image 4.4: Achieving a smooth, detangled look with the flat brush attachment.

Air Curler Attachment

Create beautiful waves and curls with this attachment. It can be used on both damp and dry hair. Wrap a section of hair around the curler, hold for a few seconds, then release. Experiment with different section sizes for varied curl patterns, from soft waves to defined surfer-style curls that can last up to 48 hours.



AJUSTES PERSONALIZADOS

3 velocidades y 3 temperaturas

Image 4.5: Creating beautiful waves with the air curler attachment.

4.3 General Styling Tips

- For best results, ensure hair is towel-dried before using styling attachments.
- Always work with small, manageable sections of hair.
- Apply a heat protectant spray before styling to minimize heat damage.
- Finish with a cool shot (if available, or lowest temperature setting) to set your style.

Your browser does not support the video tag.

Video 4.1: Official product video demonstrating the versatility and various styling options of the Rowenta Air Shape hair styler.

5. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the lifespan of your Rowenta Air Shape styler.

1. **Unplug:** Always unplug the appliance from the power outlet before cleaning.
2. **Cool Down:** Allow the appliance and all attachments to cool down completely.
3. **Clean Attachments:**
 - Use the provided cleaning brush to remove any trapped hair or debris from the brush attachments and air curler.
 - Wipe the surfaces of the attachments with a soft, damp cloth. Do not use abrasive cleaners or solvents.

4. **Clean Main Unit:** Wipe the main styler unit with a soft, damp cloth. Ensure no water enters the internal components.
5. **Air Inlet Filter:** Periodically check and clean the air inlet filter at the back of the main unit to prevent blockages and maintain airflow.
6. **Storage:** Store the clean and dry appliance and its attachments in the provided storage pouch in a cool, dry place. Do not wrap the power cord tightly around the appliance.



Image 5.1: The Rowenta Air Shape styler alongside its cleaning brush, essential for maintenance.

6. TROUBLESHOOTING

If you encounter issues with your Rowenta Air Shape styler, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in correctly; power outlet issue; appliance fault.	Ensure the plug is fully inserted. Test the outlet with another device. If still not working, contact customer service.
Weak airflow or overheating.	Air inlet filter blocked; internal blockage.	Clean the air inlet filter. Ensure no hair or debris is blocking the air vents.

Problem	Possible Cause	Solution
Attachments are loose.	Attachment not properly secured.	Ensure the attachment is aligned and pushed firmly until it clicks into place.
Hair not styling as expected.	Incorrect temperature/speed setting; hair section too large; hair too wet/dry for attachment.	Adjust temperature and speed settings. Work with smaller sections of hair. Ensure hair dampness is appropriate for the chosen attachment.

If the problem persists after trying these solutions, please contact Rowenta customer support.

7. TECHNICAL SPECIFICATIONS

Feature	Detail
Model Number	UB9820E0
Brand	Rowenta
Power Source	Corded Electric
Motor Type	High-Speed Digital Motor
Airflow Speed	Up to 150 km/h
Temperature Settings	3 levels
Speed Settings	3 levels
Dimensions (Product)	25.72 x 4.68 x 4.52 cm
Weight (Product)	1.03 kg
Color	Black + Copper Gold
Country of Origin	China

8. WARRANTY AND SUPPORT

Rowenta products are designed for durability and performance. For specific warranty information, please refer to the warranty card included with your product or visit the official Rowenta website.

For technical support, spare parts, or repair services, please contact Rowenta customer service in your region. You can find contact details on the Rowenta website or in the product packaging.

Repairability: Rowenta is committed to making products repairable for 15 years at a fair price, with 6200 authorized repair centers worldwide.