

Kinetijy Ecopad K11

Kinetijy Case for Ecopad K11 10-Inch Tablet Instruction Manual

Model: Ecopad K11

INTRODUCTION

This manual provides instructions for the proper installation, operation, and maintenance of your Kinetijy Case for Ecopad K11 10-Inch Tablet. Please read this manual thoroughly before use to ensure optimal performance and longevity of your product.

PACKAGE CONTENTS

- 1 x Kinetijy Case for Ecopad K11 10-Inch Tablet

SETUP

Follow these steps to properly install your Ecopad K11 10-inch tablet into the case.

1. **Verify Compatibility:** Ensure your tablet is an Ecopad K11 10-inch model. This case is specifically designed for this tablet size and model.
2. **Insert Tablet:** Gently align your Ecopad K11 tablet with the case's internal frame. Press the tablet firmly into the frame, ensuring all edges are securely seated within the protective corners.
3. **Check Port Access:** Confirm that all tablet ports, buttons, and speakers are accessible through the case's precise cutouts.

COMPATIBLE WITH A LOT OF TABLET

Please kindly check your tablet size before purchase as shown



This image illustrates the compatibility of the case with the Ecopad K11 10-inch tablet. It shows the tablet securely fitted within the case, demonstrating how to ensure proper alignment and fit before use.

OPERATING INSTRUCTIONS

This case offers versatile viewing options and additional functionality.

360-Degree Rotation and Multi-Viewing Angles

The case features a 360-degree rotating mechanism and an anti-slip strip design to provide multiple viewing angles.

1. **Rotate Tablet:** To change the tablet's orientation, gently rotate the tablet within its frame. The mechanism allows for both portrait and landscape viewing.
2. **Adjust Viewing Angle:** Fold the front cover back to form a stand. Utilize the anti-slip strip on the inside of the cover to prop the tablet at your desired viewing angle. The strip helps maintain stability.

ADJUSTABLE MULTIPLE ANGLES


Supports multiple viewing angles with 360° free rotate



This image demonstrates the case's ability to rotate 360 degrees, allowing for both horizontal and vertical viewing. It also shows how the case can be folded into various stand positions to achieve different viewing angles.

MULTIPLE VIEWING

It turns into a convenient stand.
Frees your hands and gives you a
best viewing angle.

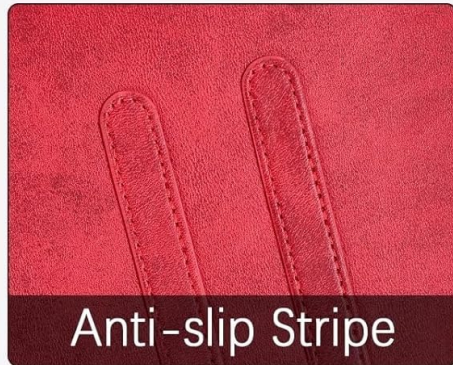

This image highlights the anti-slip strip integrated into the case, which provides stability when the case is folded into a stand, ensuring the tablet remains securely at the chosen viewing angle.

Storage Pocket

The case includes a storage pocket for small items.

- **Accessing the Pocket:** Open the front cover to reveal the integrated pocket. This pocket is suitable for carrying cards, documents, or cash.

STORAGE POCKET

The pocket is convenient for carrying cards, documents, and cash



This image showcases the convenient storage pocket built into the case, designed to hold cards, documents, or cash, enhancing the case's utility.

Camera Access

The case features a reserved back camera opening.

- **Using the Camera:** The case provides a cutout for the tablet's rear camera, allowing for camera usage without removing the tablet from the case.

SUITABLE FOR DIFFERENT PLATES

The 3 pre-cutouts can be used by tablets with different camera positions



This image illustrates the multiple pre-cutouts on the case, designed to accommodate tablets with different camera positions, ensuring camera functionality is maintained.

PROTECTION FEATURES

The Kinetijy case is designed to provide comprehensive protection for your tablet.

- **All-Over Protection:** The case covers all sides and corners of the tablet, guarding against scratches, shocks, and dust.
- **Durable Material:** Constructed from premium synthetic PU leather with a soft anti-slip interior, it helps prevent fingerprints and dirt.
- **Thickened Corner Protector:** Features thickened anti-drop corner protectors for enhanced impact resistance.

ALL-OVER-PROTECTION

Goes into every side & corner,



Device ports, speakers, buttons all work fine



Slim & Lightweight



It can protect the plate very well

This image demonstrates the comprehensive protection offered by the case, covering all sides and corners of the tablet. It also shows how device ports, speakers, and buttons remain fully functional while the tablet is in the case.

MAINTENANCE

To maintain the appearance and longevity of your tablet case, follow these guidelines:

- **Cleaning:** Wipe the exterior with a soft, damp cloth. Avoid using harsh chemicals or abrasive cleaners, as these can damage the PU leather.
- **Storage:** Store the case in a cool, dry place away from direct sunlight and extreme temperatures when not in use.
- **Avoid Sharp Objects:** Keep the case away from sharp objects to prevent scratches or punctures.

TROUBLESHOOTING

- **Tablet Does Not Fit:** Ensure your tablet is the Ecopad K11 10-inch model. The case is designed for this specific model. Do not force the tablet into the case if it does not fit easily.
- **Rotation Stiffness:** If the 360-degree rotation feels stiff, gently rotate it a few times to loosen the mechanism. Avoid excessive force.
- **No Auto-Sleep/Wake Function:** Please note that this case does not support any tablet's auto-

sleep/wake function. You will need to manually lock/unlock your tablet.

SPECIFICATIONS

Feature	Detail
Product Dimensions	0.39 x 0.39 x 0.39 inches
Item Weight	2.46 ounces
Compatible Devices	Ecopad K11 10-inch Tablet
Material	Premium Durable Synthetic PU Leather
Special Features	Card insertion, Stash the change, Thickened anti-drop corner protector, Folding stand, 360-degree rotation
Form Factor	Flip Case
Color	Red

WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the seller's policies on the platform where the product was purchased or contact the manufacturer directly. Keep your purchase receipt for any warranty claims.