

JBL JBLBB3WIFIBLKAM

JBL Boombox 3 Wi-Fi Portable Bluetooth Speaker User Manual

Model: JBLBB3WIFIBLKAM

INTRODUCTION

The JBL Boombox 3 Wi-Fi Portable Bluetooth Speaker is designed to deliver powerful, high-fidelity audio for any occasion. With its robust construction, IP67 waterproof and dustproof rating, and extended battery life, it is perfect for both indoor and outdoor use. Enjoy seamless audio streaming via Wi-Fi for multi-room experiences or connect instantly via Bluetooth for on-the-go listening. Manage your speaker settings and expand your sound system with the JBL One app.

WHAT'S IN THE BOX

- 1 x JBL Boombox 3 Wi-Fi Portable Bluetooth Speaker (Black)
- 1 x AC Power Cord
- 1 x USB-A to USB-C Cable
- 1 x MicroFiber Cloth



Image: JBL Boombox 3 Wi-Fi speaker and its accessories.

PRODUCT OVERVIEW

Front View



Image: Front view of the JBL Boombox 3 Wi-Fi speaker.

Top Panel Controls



Image: Top panel controls of the JBL Boombox 3 Wi-Fi speaker.

- **Power Button:** Press to turn the speaker on or off.
- **Bluetooth Button:** Press to enter Bluetooth pairing mode.
- **Volume Down (-):** Decreases the volume.
- **Volume Up (+):** Increases the volume.
- **Play/Pause Button:** Plays or pauses audio playback.
- **Wi-Fi Button:** Activates Wi-Fi mode and initiates Wi-Fi setup.

Rear Panel Connections



Image: Rear panel connections of the JBL Boombox 3 Wi-Fi speaker.

- **AC Power Input:** Connect the provided AC power cord for charging and continuous power.
- **USB-C Port:** Used for charging external devices or for firmware updates.

Passive Radiator



Image: Side view of the JBL Boombox 3 Wi-Fi speaker, highlighting the passive radiator.

The JBL Boombox 3 features dual passive radiators on its sides, which enhance bass response and provide a deeper, more impactful low-frequency sound.

SETUP

Charging the Speaker

Before first use, fully charge the JBL Boombox 3 Wi-Fi speaker. Connect the provided AC power cord to the

speaker's AC power input and then to a wall outlet. The battery indicator lights will show the charging progress. A full charge provides up to 24 hours of playback time.

Powering On/Off

Press the **Power Button** on the top panel to turn the speaker on or off. A sound indicator will confirm the power status.

Initial Bluetooth Pairing

1. Turn on the JBL Boombox 3 Wi-Fi speaker.
2. Press the **Bluetooth Button** on the top panel. The Bluetooth indicator light will flash, indicating it's in pairing mode.
3. On your mobile device, go to Bluetooth settings and select "JBL Boombox 3 Wi-Fi" from the list of available devices.
4. Once connected, the Bluetooth indicator will glow solid, and you will hear a confirmation sound.

Wi-Fi Setup (using JBL One app)

For Wi-Fi streaming and multi-room features, download the **JBL One app** from your device's app store. Follow the in-app instructions to connect your speaker to your home Wi-Fi network. This enables features like high-resolution audio streaming, multi-room control, and access to integrated services like Spotify Connect, AirPlay, and Chromecast.

OPERATING THE SPEAKER

Bluetooth Playback

After pairing, simply start playing audio on your connected Bluetooth device. Use the volume buttons on the speaker or your device to adjust the sound level. The Play/Pause button controls playback directly from the speaker.

Wi-Fi Streaming

Once connected to Wi-Fi via the JBL One app, you can stream audio directly to the speaker using compatible services and protocols such as Spotify Connect, Apple AirPlay, or Google Chromecast. This provides higher audio quality and extended range compared to Bluetooth.

Multi-Room Audio

Utilize the JBL One app to group multiple JBL Wi-Fi compatible speakers together for a synchronized multi-room audio experience. Play the same music across different rooms or assign different audio to each speaker.

PartyBoost Feature

The PartyBoost feature allows you to connect two JBL PartyBoost-compatible speakers together for stereo sound or link multiple speakers for an amplified party experience. Activate PartyBoost via the JBL One app or by pressing the dedicated PartyBoost button on compatible speakers (if available).

MAINTENANCE

- **Cleaning:** Use the provided microfiber cloth or a soft, damp cloth to clean the speaker's exterior. Do not use abrasive cleaners or solvents.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the speaker frequently. Charge it regularly, even if

not in use for extended periods.

- **Waterproof/Dustproof:** Ensure the charging port cover is securely closed before exposing the speaker to water or dust to maintain its IP67 rating.

TROUBLESHOOTING

Issue	Possible Solution
Speaker does not turn on.	Ensure the battery is charged. Connect the speaker to power and try again.
Cannot pair via Bluetooth.	Make sure the speaker is in Bluetooth pairing mode (flashing blue light). Check if your device's Bluetooth is enabled and within range. Forget the device on your phone and re-pair.
No sound or low volume.	Check the volume levels on both the speaker and your connected device. Ensure the speaker is not muted.
Wi-Fi connection issues.	Ensure your Wi-Fi network is active and the speaker is within range. Use the JBL One app to reconfigure the Wi-Fi connection. Restart your router if necessary.
Sound distortion.	Reduce the volume on both the speaker and the source device. Ensure the audio source is not of poor quality.

SPECIFICATIONS

Feature	Detail
Model Name	Boombox 3 Wifi
Speaker Type	Outdoor
Connectivity Technology	Bluetooth, Wi-Fi
Wireless Communication Technology	Bluetooth, Wi-Fi
Audio Output Mode	Stereo
Battery Life	24 Hours
Is Waterproof	True (IP67 rated)
Item Weight	20 Pounds
Product Dimensions	19 x 10 x 10 inches
Control Method	App, Touch
Power Source	Battery Powered
Compatible Devices	Laptop, Smartphone, Tablet

WARRANTY AND SUPPORT

The JBL Boombox 3 Wi-Fi Portable Bluetooth Speaker comes with a limited manufacturer's warranty. For specific warranty terms and conditions, please refer to the warranty card included in your product packaging or visit the official JBL support website.

For technical support, troubleshooting assistance, or to inquire about replacement parts, please visit the [JBL Support Website](#) or contact JBL customer service directly.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question