

[Manuals.plus](#) /

› [Oryzom](#) /

› Oryzom Electric Shaver V1 Pro User Manual

Oryzom V1 Pro

Oryzom Electric Shaver V1 Pro User Manual

Model: V1 Pro

INTRODUCTION

Thank you for choosing the Oryzom Electric Shaver V1 Pro. This manual provides essential information for the safe and effective use, maintenance, and care of your new shaver. Please read these instructions thoroughly before first use and keep them for future reference.

IMPORTANT SAFETY INFORMATION

To reduce the risk of injury, electric shock, fire, or damage to the product, always follow these basic safety precautions:

- Do not use on irritated or broken skin.
- Avoid contact with eyes and ears.
- Do not use near water or while the device is charging.
- Clean the shaver regularly to prevent bacterial growth.
- Use with caution to avoid cuts.
- Keep out of reach of children.
- Only use the charger provided with the device.

PRODUCT OVERVIEW

The Oryzom Electric Shaver V1 Pro is designed for a close and comfortable shave, featuring advanced rotary blade technology and an integrated trimmer.



Figure 1: Oryzom V1 Pro Electric Shaver. This image shows the main unit of the shaver with its digital display indicating remaining minutes of use.

Key Features:

- **4D Flexible Floating Head:** Adapts to facial contours for a smooth shave.
- **Integrated Pop-up Trimmer:** For precise trimming of sideburns and mustaches.
- **Wet & Dry Shaving:** Suitable for both dry shaving and use with foam/gel or in the shower.
- **Double-track Cut Blades:** Ensures a clean and efficient shave.
- **Double Ring Mesh:** Designed for fewer passes and a closer shave.
- **Washable Design:** Easy to clean under running water.

SETUP

Charging the Shaver:

1. Ensure the shaver is turned off.
2. Connect the charging cable to the shaver and plug the adapter into a power outlet.
3. The digital display will indicate the charging status. A full charge typically takes approximately [Insert Charging Time, if available, otherwise omit].
4. Once fully charged, disconnect the shaver from the power outlet.

Note: Do not use the shaver while it is connected to the charger, especially in wet conditions.

OPERATING INSTRUCTIONS

General Shaving:

1. Press the power button to turn on the shaver.
2. Hold the shaver at a right angle to your skin.
3. Move the shaver in small, circular motions against the direction of hair growth.
4. Apply gentle pressure; excessive pressure is not necessary and can cause irritation.
5. For best results, stretch your skin with your free hand to make the hairs stand upright.
6. After shaving, press the power button to turn off the shaver.



Figure 2: The Oryzom V1 Pro shaver can be used for both wet and dry shaving, offering versatility and comfort.


Using the Pop-up Trimmer:

1. Locate the trimmer activation button on the back of the shaver.
2. Slide the button upwards to engage the pop-up trimmer.
3. Use the trimmer for precise shaping of sideburns, mustaches, or detailing.
4. After use, slide the button downwards to retract the trimmer.



Pop-up Trimmer

for
Mustache
and
Sideburns

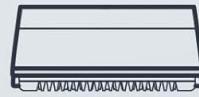

25mm
Blade Width



One-click
Ejection



Figure 3: The integrated pop-up trimmer, with a 25mm blade width, is activated by a one-click ejection mechanism for precise grooming.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and hygiene of your shaver.

Daily Cleaning:

1. Turn off the shaver and disconnect it from any power source.
2. Open the shaver head by pressing the release button (if applicable) or twisting the head counter-clockwise.
3. Rinse the shaver head and the internal hair chamber under warm running water.
4. Shake off excess water and allow the shaver head to air dry completely before closing or storing.



Washable for Easy Cleaning



Figure 4: The shaver head is washable for easy cleaning under running water, ensuring hygiene and prolonging blade life.

Deep Cleaning (Weekly/Bi-weekly):

1. In addition to daily cleaning, carefully remove the individual rotary blades and foil guards.
2. Brush away any trapped hairs using the provided cleaning brush (if included).
3. Rinse all components thoroughly under warm water.
4. Allow all parts to dry completely before reassembling.
5. Apply a drop of shaver oil (not included) to each blade for optimal performance and longevity.



4D Flexible Floating Head

Close to every angle and curve

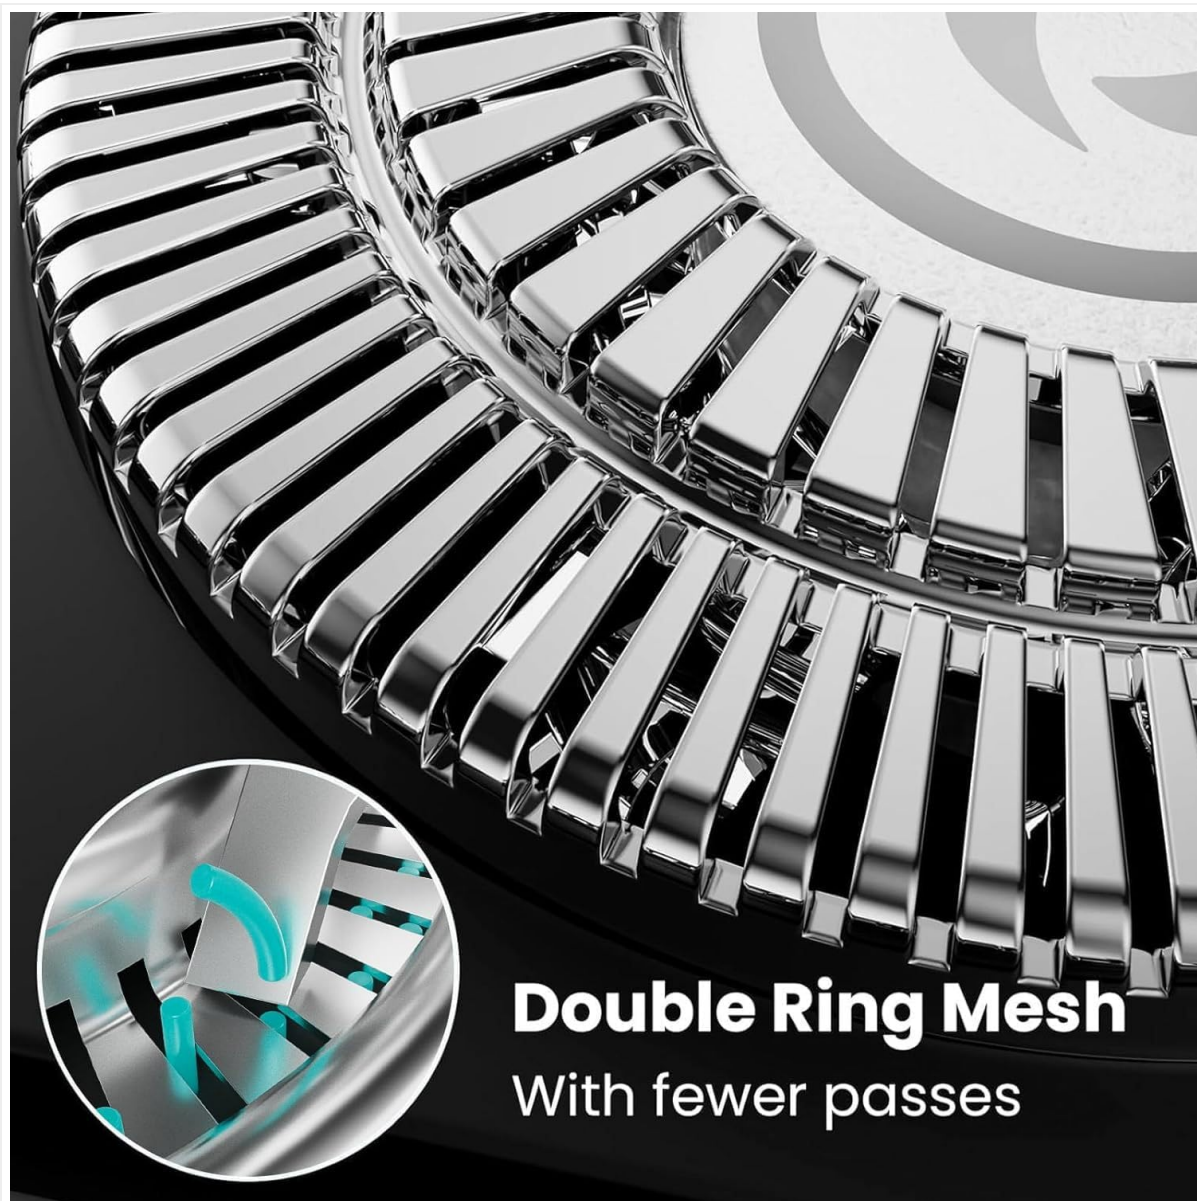


Figure 5: The 4D Flexible Floating Head system, designed to adapt to every angle and curve of your face for a close shave.



**Double-track
Cut Blades**
Clean shave

Figure 6: Close-up view of the double-track cut blades, engineered for a clean and efficient shave.



Double Ring Mesh With fewer passes

Figure 7: Detail of the double ring mesh, designed to capture more hair with fewer passes for a smoother result.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Shaver does not turn on.	Battery is depleted.	Charge the shaver fully.
Poor shaving performance.	Shaver head is dirty or blades are dull.	Clean the shaver head thoroughly. Consider replacing the shaver head/blades if performance does not improve.
Skin irritation after shaving.	Excessive pressure, dry shaving sensitive skin, or dirty blades.	Apply less pressure. Try wet shaving with foam/gel. Ensure shaver is clean. Allow skin to adapt.
Trimmer does not extend/retract.	Mechanism is jammed with hair or debris.	Clean the trimmer area carefully with a small brush.

SPECIFICATIONS

Model Name	V1 Pro
Brand	Oryzom (Manufacturer: SWZEC)
Power Source	Battery Powered
Blade Material	Stainless Steel
Head Type	Rotary (4D Flexible Floating Head)
Color	Grey
Package Dimensions	10 x 10 x 10 cm
Weight	100 grams
Country of Origin	China

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided by your retailer or the manufacturer, SWZEC. Keep your proof of purchase for any warranty claims.

Manufacturer: SWZEC

Model Reference: 1