

[Manuals.plus](#) /

› [GOEBLESON](#) /

› GOEBLESON 75" Arc Floor Lamp E15LD05 Instruction Manual

GOEBLESON E15LD05

GOEBLESON 75" Arc Floor Lamp Instruction Manual

Model: E15LD05

1. INTRODUCTION

Thank you for purchasing the GOEBLESON 75" Arc Floor Lamp, Model E15LD05. This lamp features a natural marble base, adjustable height and arm, a rotating shade, and dimmable LED lighting with three color temperature options (3CCT). It can be controlled via a magnetic remote or a convenient foot switch. This manual provides detailed instructions for assembly, operation, and maintenance to ensure safe and optimal use of your new floor lamp.



Figure 1.1: GOEBLESON 75" Arc Floor Lamp (Model E15LD05)

2. SAFETY INFORMATION

- Read all instructions carefully before assembly and use.
- Do not connect the power until the lamp is fully assembled.
- Ensure the power cord is not pinched or damaged during assembly.

- Use only the specified bulb type (E26) and wattage (9W LED bulb included).
- Keep the lamp away from water and moisture. For indoor use only.
- The marble base is heavy (13.7 lbs) for stability. Handle with care during movement to prevent injury or damage.
- Do not attempt to modify or disassemble the lamp beyond what is instructed in this manual.
- If any part is damaged or missing, contact customer support before use.

3. PACKAGE CONTENTS

Verify that all components are present and undamaged before beginning assembly.

- Lamp Pole Sections (with pre-attached cord)
- Marble Base
- Linen Lampshade
- 9W E26 LED Bulb
- Remote Control (with battery)
- Foot Switch (integrated into power cord)
- Assembly Tool (if required)

SOLID MARBLE BASE WITH NATURAL TEXTURE

Provides the full stability and durability.



LAMP WEIGHT 13.7LB



Each Marble Base is Unique

These natural marble texture on the base makes each lamp unique



Figure 3.1: All components included in the package.

4. SETUP AND ASSEMBLY

Follow these steps to assemble your GOEBLESON Arc Floor Lamp:

1. **Attach the Base:** Carefully screw the lowest lamp pole section into the natural marble base. Ensure it is tightened securely to prevent wobbling.

2. **Assemble Pole Sections:** Connect the remaining lamp pole sections by screwing them together clockwise. Gently pull any excess power cord through the base as you assemble to avoid tangling.
3. **Attach Arc Arm:** Screw the arc arm section onto the top of the assembled pole.
4. **Install Lampshade:** Unscrew the retaining ring from the lamp holder at the end of the arc arm. Place the linen lampshade over the lamp holder and secure it with the retaining ring.
5. **Insert Bulb:** Screw the provided 9W E26 LED bulb into the lamp holder. Do not overtighten.
6. **Position Lamp:** Place the lamp in your desired location, ensuring the power cord can reach an outlet without being stretched or obstructed.
7. **Connect Power:** Plug the power cord into a standard electrical outlet.

190CM ARC FLOOR LAMP WITH EXTENDED LIGHT ARM



Figure 4.1: Assembly of lamp pole sections.

DIMMABLE ARC FLOOR LAMP

Versatile lighting solution for any mood or activity



MEMORY FUNCTION

Remembers the last mode setting



Adjustable Color Temperatures 2700K–6500K

2700K  6500K

Stepless Dimming 10%–100%

 
10%  100%

Figure 4.2: Lampshade and bulb installation.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

- **Foot Switch:** Press the foot switch located on the power cord to turn the lamp on or off.
- **Remote Control:** Press the power button (**ON/OFF**) on the remote control to turn the lamp on or off.

5.2 Adjusting Brightness (Dimming)

The lamp offers stepless dimming from 10% to 100% brightness.

- **Remote Control:** Use the brightness adjustment buttons (+ for brighter, - for dimmer) on the remote.

5.3 Adjusting Color Temperature (3CCT)

The lamp provides three color temperature options: Warm White (2700K), Natural White (4500K), and Cool White (6500K).

- **Remote Control:** Use the color temperature adjustment buttons (**K+** for cooler, **K-** for warmer) on the remote.

5.4 Preset Lighting Modes

The remote control includes buttons for quick access to various lighting modes:

- **Night Light Mode:** Provides a soft, low-intensity light.
- **Reading Mode:** Optimized brightness and color temperature for reading.
- **Working Mode:** Brighter, cooler light suitable for tasks.
- **Nursing Mode:** Gentle light for nighttime care.

5.5 Timer Function

Set the lamp to automatically turn off after 60 minutes.

- **Remote Control:** Press the timer button (**1H**) on the remote. The lamp will flash once to confirm the timer is set.

5.6 Adjustable Lamp Features

- **Height Adjustment:** The lamp's height can be adjusted from 63 to 75 inches. Loosen the adjustment knob on the pole, slide to the desired height, and re-tighten.
- **Arm Extension:** The arc arm extends from 22 to 29 inches. Adjust the arm to position the light as needed.
- **Head Rotation:** The lamp head rotates 350° horizontally and 180° vertically, allowing precise light direction.

MAGNETIC REMOTE CONTROL LAMP

Set the warmth and the brightness from the comfort of your sofa.



Fit the standard
E26 light sockets



Sticks onto the pole
or any metal



9W LED Bulb
Included



Figure 5.1: Remote control and foot switch operation.

PRE-SET LIGHTING MODES

Set a sleep timer



Figure 5.2: Dimmable color temperatures and brightness range.

ANGLE ADJUSTABLE LAMP HEAD

Direct light exactly where you want.



Figure 5.3: Angle adjustable lamp head.



Figure 5.4: Preset lighting modes and timer.

6. MAINTENANCE

- **Cleaning:** Disconnect the lamp from power before cleaning. Wipe the lamp pole and base with a soft, dry cloth. For the lampshade, use a lint roller or a slightly damp cloth to remove dust. Do not use abrasive cleaners or solvents.
- **Bulb Replacement:** Ensure the lamp is unplugged and the bulb has cooled before attempting to replace it. Unscrew the old

E26 bulb and screw in a new E26 LED bulb (max 9W).

- **Remote Control Battery:** If the remote control stops responding, replace its battery. Refer to the remote control's specific instructions for battery type and replacement procedure.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Lamp does not turn on.	No power, loose bulb, faulty bulb.	Check if plugged in. Ensure bulb is screwed in tightly. Replace bulb if necessary. Check wall outlet with another device.
Remote control not working.	Dead battery, remote out of range, obstruction.	Replace remote battery. Ensure remote is pointed at the lamp and within range. Remove any obstructions between remote and lamp.
Lamp flickers or dims unexpectedly.	Loose connection, incompatible bulb, power fluctuation.	Check all connections. Ensure bulb is E26 LED 9W. Try plugging into a different outlet.
Lamp is unstable.	Loose pole sections, uneven surface.	Ensure all pole sections are securely tightened. Place lamp on a flat, stable surface.

8. SPECIFICATIONS

Feature	Detail
Model Number	ST-F31107 (E15LD05)
Brand	GOEBLESON
Product Dimensions	12"D x 31.5"W x 75"H (Adjustable Height: 63"-75")
Item Weight	13.7 pounds
Base Material	Natural Marble
Shade Material	Linen
Light Source Type	LED
Bulb Base	E26
Wattage	9 watts (Max)
Color Temperature	2700K-6500K (Dimmable)
Control Method	Remote Control, Foot Switch
Additional Features	Adjustable Arm, Adjustable Height, Dimmable, Timer, Rotating Head
Indoor/Outdoor Usage	Indoor Only

9. WARRANTY AND SUPPORT

GOEBLESON products are manufactured with quality and care. For warranty information, please refer to the documentation included with your purchase or contact GOEBLESON customer support directly. If you encounter any issues or have questions regarding your lamp, please reach out to our support team for assistance.

Customer Support: Please refer to the contact information provided on the product packaging or the official GOEBLESON website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question