

Vayepro 24 Cup Electric Food Processor

Vayepro 24 Cup Electric Food Processor Instruction Manual

Model: 24 Cup Electric Food Processor

Brand: Vayepro

1. INTRODUCTION

Thank you for purchasing the Vayepro 24 Cup Electric Food Processor. This appliance is designed for efficient food preparation, including chopping, grinding, mixing, and pureeing various ingredients. Please read this manual thoroughly before use to ensure safe and optimal operation.



Image 1.1: Vayepro Electric Food Processor with ingredients.

2. IMPORTANT SAFETY PRECAUTIONS

- Always unplug the appliance from the power outlet before assembling, disassembling, or cleaning.
- Keep hands and utensils away from moving blades during operation to prevent injury.
- Ensure the lid is securely locked in place before operating the food processor.
- Do not operate the appliance continuously for more than 10 seconds. Allow a 5-second rest period between operations to

prevent overheating. If the motor stops due to overheating, unplug the unit and wait 20 minutes before resuming use.

- This appliance is not intended for use by children. Close supervision is necessary when any appliance is used near children.
- Do not immerse the motor unit in water or other liquids. Clean with a damp cloth only.
- Use only attachments and accessories recommended by the manufacturer.



Image 2.1: Important usage duration and rest period for the motor.

3. PRODUCT COMPONENTS

The Vayepro Electric Food Processor includes the following parts:

- Motor Unit (with power cord and speed buttons)
- Stainless Steel Bowl (6-liter capacity)
- Transparent Lid
- 4 Bi-Level Stainless Steel Blades
- Spatula

NOTE: Please do not use continuously for 15s, just 10s work, then 5s rest. Otherwise the electric machine will over heat, If it loses power due to over heat, unplug and wait 20mins and work again.

NOT MOTOR BROKEN!!! NOT MOTOR BROKEN!!!!



Image 3.1: All components of the food processor.

Effortless Cutting

Food Grade 304 SUS Blades



Image 3.2: Detailed view of the 4 bi-level stainless steel blades.

4. SETUP

Follow these steps to assemble your food processor before first use:

1. Place the stainless steel bowl on a stable, flat surface.
2. Carefully place the 4 bi-level blade assembly onto the central shaft inside the bowl. Ensure it is seated correctly.
3. Add your desired ingredients to the bowl. Do not overfill.
4. Place the transparent lid onto the bowl, aligning it properly.
5. Position the motor unit on top of the lid, ensuring it locks securely into place. The motor unit will only operate when correctly assembled.
6. Plug the power cord into a suitable electrical outlet.



1.Place the blade on the bowl axis



2.Put in the right amount of food and close the lid



3.Press the button to start running



4.Chop finished

Image 4.1: Visual guide for assembly and initial use.

Setup Demonstration Video

Your browser does not support the video tag.

Video 4.1: A seller demonstrates the assembly process and initial use of the food processor for grinding meat and vegetables.

5. OPERATING INSTRUCTIONS

The Vayepro Food Processor features two speed settings for versatile food preparation:

- **Speed 1 (Lower Speed):** Ideal for softer ingredients such as tomatoes, pumpkin, and onions, or for achieving a coarser chop.
- **Speed 2 (Higher Speed):** Suitable for harder ingredients like meat, carrots, and nuts, or for achieving a finer grind/puree.

To operate, press and hold the desired speed button on the motor unit. Release the button to stop. Remember to use short pulses (max 10 seconds) with rest periods (5 seconds) to protect the motor.

2 SPEED TO CHOP

Chop every ingredients you want



| For Soft Food



Tomatoes



Pumpkin



Onions

|| For Hard Food



Meat



Carrots



Nuts

Image 5.1: Recommended speed settings for various food types.

Kitchen all-around tool



Grind



Chop



Mix



Puree

Image 5.2: The food processor's versatile functions: grind, chop, mix, and puree.

Operation Demonstration Video

Your browser does not support the video tag.

Video 5.1: A seller demonstrates grinding meat and chopping vegetables using the food processor.

Your browser does not support the video tag.

Video 5.2: A seller demonstrates the meat grinding capabilities of the food processor.

6. CLEANING AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your food processor:

- Always unplug the appliance before cleaning.
- The stainless steel bowl, lid, and blades are dishwasher safe.
- For manual cleaning, wash these parts with warm, soapy water and rinse thoroughly. Handle blades with extreme care as they are sharp.
- Wipe the motor unit with a damp cloth. Do not immerse it in water.
- Ensure all parts are completely dry before reassembling or storing.



Image 6.1: Cleaning instructions for the food processor components.

7. TROUBLESHOOTING

If you encounter issues with your food processor, refer to the following common problems and solutions:

- **Appliance does not turn on:** Ensure the power cord is securely plugged in and the motor unit is correctly seated and locked onto the lid. Check if the power outlet is functional.
- **Motor stops during operation:** This may indicate overheating. Unplug the unit and allow it to cool for 20 minutes before resuming. Reduce the amount of ingredients or cut them into smaller pieces.
- **Ingredients are not chopped evenly:** Ensure ingredients are cut into uniform, small pieces (approx. 2 inches) before processing. Use short pulses rather than continuous operation to achieve desired consistency.
- **Loud noise during operation:** Check that the blade assembly is correctly installed and not obstructed. Ensure the lid and motor unit are securely locked.

8. SPECIFICATIONS

Feature	Specification
Brand	Vayepro
Model Name	1
Bowl Capacity	6 Liters (24 Cups)
Wattage	800 watts
Number of Speeds	2
Special Feature	Safety Lock
Product Dimensions	10.24"D x 10.24"W x 12.99"H
Material	Stainless Steel
Blade Material	Stainless Steel
Power Source	Electric
Voltage	110 Volts
Dishwasher Safe Parts	Bowl, Lid, Blades



Image 8.1: Product dimensions.



Image 8.2: Illustration of the 6-liter capacity.

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official Vayepro website. Keep your proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question