

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Yanmis](#) /

› [Yanmis Automatic Card Shuffler Dealer Machine User Manual](#)

Yanmis B0FDG2YFZR

Yanmis Automatic Card Shuffler Dealer Machine User Manual

Model: B0FDG2YFZR

1. SETUP AND INITIAL USE

1.1 Package Contents

Please verify that all items are present in the package:

- 1 x Yanmis Automatic Card Shuffler Dealer Machine
- 1 x USB Charging Cable

1.2 Charging the Device

The card shuffler is equipped with a built-in 2500mAh Lithium-ion battery. Before first use, or when the battery is low, charge the device using the provided USB charging cable.

1. Locate the Type-C charging port on the device.
2. Connect the USB charging cable to the device and a suitable USB power adapter (not included).
3. Allow the device to charge fully. A full charge can support approximately 400 deals of 54 cards.

Low power consumption and long battery life

 Type-c



Image: The card shuffler showing its Type-C charging port with a charging cable connected, indicating low power consumption and long battery life.

1.3 Device Overview



Image: A black Yanmis Automatic Card Shuffler Dealer Machine, showcasing its compact, octagonal design and the red power button on the top surface.

2. OPERATING INSTRUCTIONS

2.1 Powering On/Off

To power on the device, press and hold the red power button located on the top surface until the device activates. To power off, press and hold the same button.

2.2 Game Settings Configuration

The device allows for customizable game settings to suit various card games and player numbers.

1. Press and hold the **OK** key for more than 2 seconds. A buzzer will sound, indicating entry into the configuration mode.
2. Once in configuration mode, press the **OK** button to cycle through the following settings: bottom board first or last, bottom card, number of players, number of cards, clockwise or counterclockwise dealing direction, continuous game, and other settings.
3. Adjust the numerical value for each setting by pressing the **+** or **-** buttons.
4. If the number of players is set to 3, options for pivoting handling and rotating dealing will become available after setting the number of continuous games.
5. To confirm your settings and exit configuration mode, press and hold the **OK** key for more than 2 seconds. If the numerical values stop flashing, the confirmation is successful.

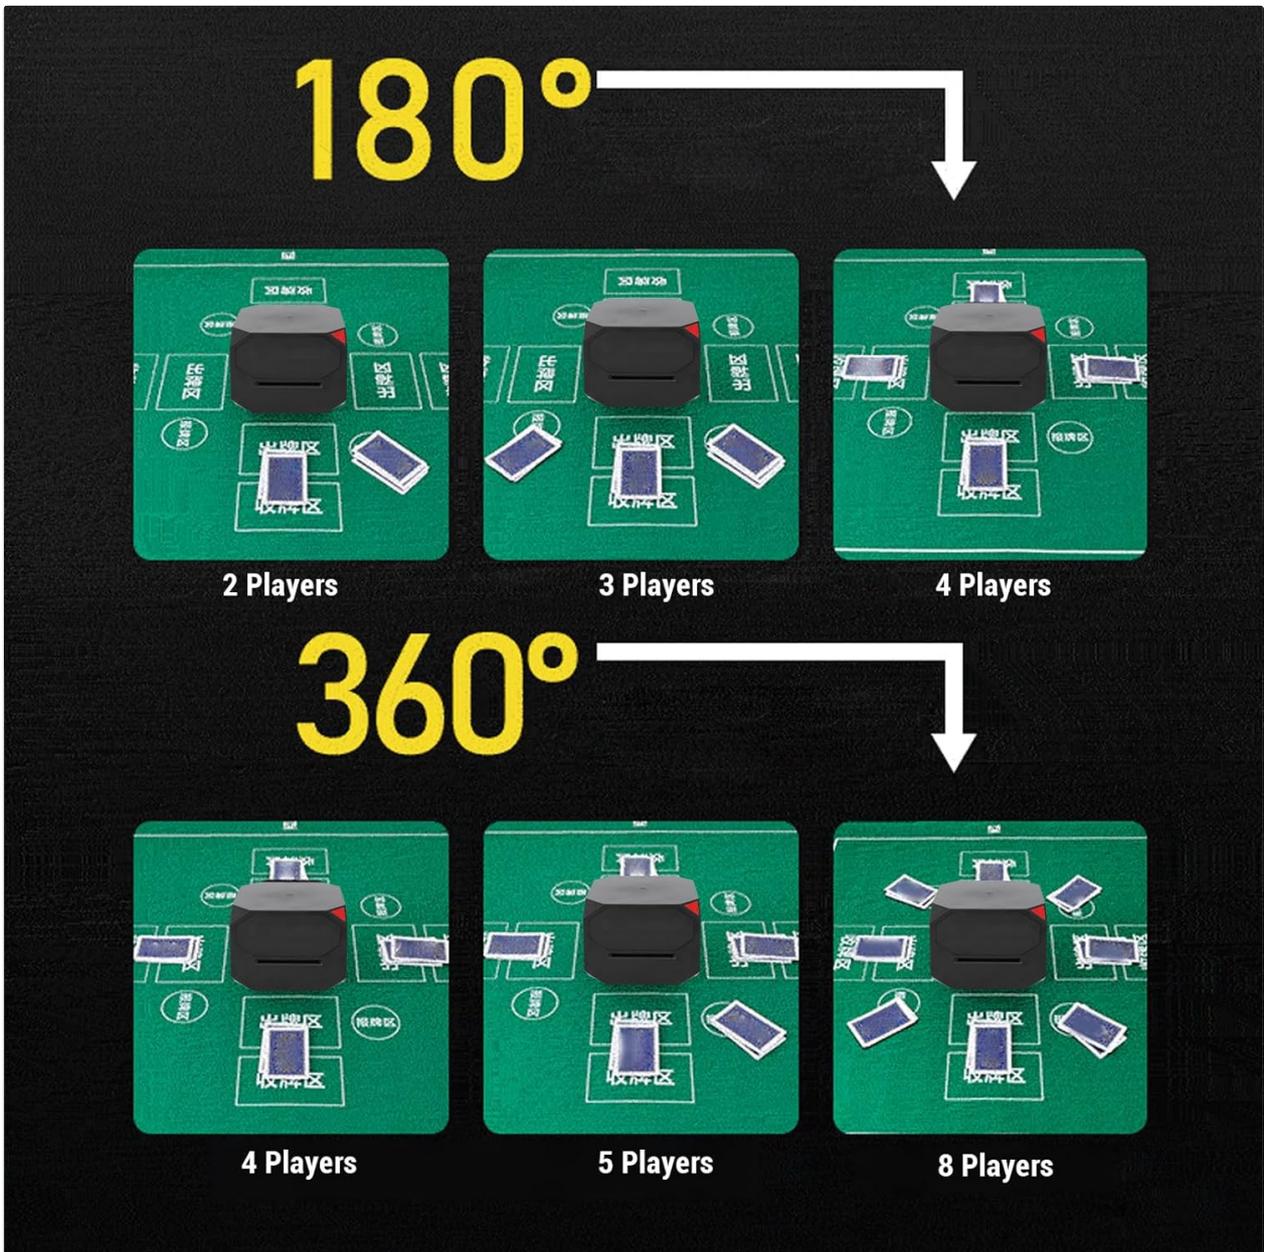


Image: A visual representation of the step-by-step instructions for configuring game settings on the card shuffler.

2.3 Card Loading and Dealing

The shuffler supports up to two decks of standard playing cards (108 cards total).

**Supports up to
2 decks of cards at a time**



Image: The card shuffler positioned on a blue game mat, demonstrating its ability to handle and deal up to two decks of cards simultaneously.

2.4 Dealing Functions

The device offers several dealing functionalities:

- **Deal Key / Pause Key:** Press the right key to initiate directional dealing immediately. Press the right key again during dealing to pause the operation.
- **Random Deal / Designated Deal:** A short press of the key will initiate a random deal. The 'bit' value will roll in the middle, and after it stops, cards will be dealt randomly to one of the numerical positions based on the current total number of bits.
- **Card Counting Function:** Press and hold the - key to quickly access the card counting function.
- **Quick Single Card Function:** Press the + or - key to deal a single card.



Deal key, pause key

Directional dealing immediately after pressing the right key. Pause immediately after pressing the right key while dealing.



Random Deal, Designated Deal

Short press the key to deal randomly, the 'bit' value rolls in the middle, after the value rolling stops, according to the current total number of bits, randomly one of the numerical position of the cards dealt.



Card Counting Function

Press and hold the - key to quickly enter the card counting function.



Quick Single Card Function

Press + or - to deal a single card.

Image: A graphic illustrating the various dealing functions with their respective icons and brief descriptions.

2.5 Dealing Angles and Player Positions

The shuffler can deal cards in 180-degree or 360-degree rotations, accommodating up to 8 players.

Swing Dealer



Image: The card shuffler demonstrating its 'Swing Dealer' capability, distributing cards in a circular pattern around the device.

Demonstration of 180° dealing angle

180°




360° Dealing Angle Demo

360°




Image: Two diagrams illustrating the card shuffler's dealing capabilities: one showing a 180-degree dealing angle and the other a 360-degree dealing angle.

8-Player Position

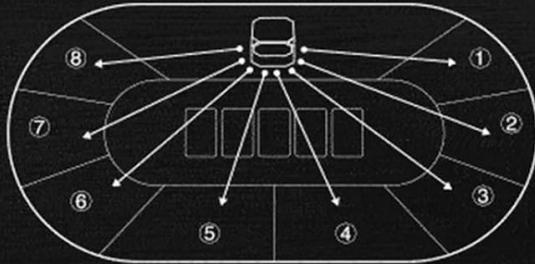


8-Player Position


The player positions shown here are dealt clockwise
Counterclockwise dealing
Here the player positions are mirrored

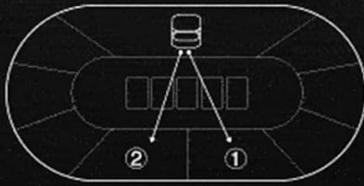


2-Player Position

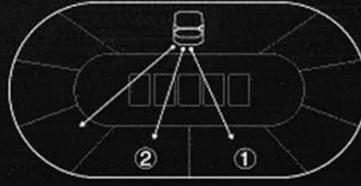


3-Player Position

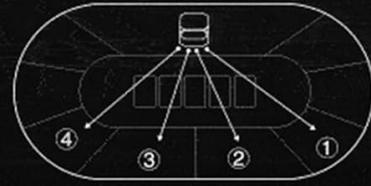


4-Player Position

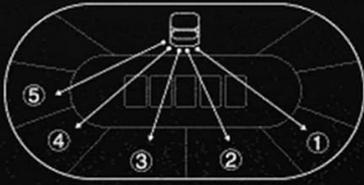

5-Player Position

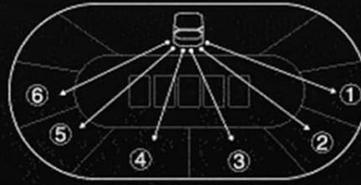

6-Player Position

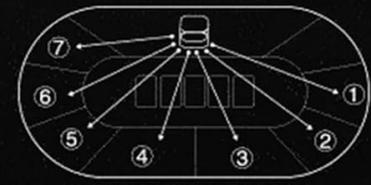

7-Player Position

Image: A comprehensive diagram illustrating various player positions (from 2 to 8 players) and how cards are dealt in clockwise or counterclockwise directions around the shuffler.

Game settings

1. Press and hold the OK key for more than 2 seconds, the buzzer will sound, entering the configuration mode.
2. After entering, press the OK key to move to the next item, the sequence is bottom card first or last, bottom card, number of players, number of cards, clockwise or counterclockwise direction, continuous play, settings.
3. Adjust the numerical value by pressing the + or - key.
4. When the number of players is 3, after setting the number of continuous play, options for swinging dealing and rotating dealing will appear.
5. Press and hold the OK key for more than 2 seconds to confirm, exit the configuration mode, and if the numerical value does not flash, it means the confirmation is successful.

Image: Visual examples of card dealing layouts for different player counts (2, 3, 4 players for 180-degree dealing; 4, 5, 8 players for 360-degree dealing) on green game mats.

3. MAINTENANCE

3.1 Cleaning

The Yanmis Automatic Card Shuffler Dealer Machine is equipped with an adaptive self-cleaning sensor. This feature helps prevent dust accumulation from affecting performance. For external cleaning, wipe the device with a soft, dry cloth. Do not use abrasive cleaners or immerse the device in water.

3.2 Battery Care

To prolong battery life, avoid fully discharging the battery frequently. Recharge the device when the battery indicator shows low power. Store the device in a cool, dry place when not in use for extended periods.

4. TROUBLESHOOTING

If you encounter issues with your Yanmis Automatic Card Shuffler Dealer Machine, please refer to the

following common problems and solutions:

- **Device does not power on:** Ensure the device is fully charged. Connect it to the charging cable and allow it to charge for at least 30 minutes before attempting to power it on again.
- **Cards are not dealing correctly or jamming:**
 - Check that the cards are properly aligned in the input tray.
 - Ensure that the cards are not bent, damaged, or excessively worn.
 - Verify that you are using standard-sized playing cards within the maximum supported width of 65mm.
 - Clean any visible dust or debris from the card path.
- **Settings are not saving:** Ensure you press and hold the **OK** key for more than 2 seconds to confirm and exit the configuration mode after making changes. The numerical values should stop flashing to indicate successful confirmation.

If the problem persists, please contact customer support for further assistance.

5. SPECIFICATIONS

Feature	Detail
Item Type	Automatic Card Shuffler Dealer
Material	ABS
Battery Type	Lithium-ion Battery (Built-in)
Battery Capacity	2500mAh
Product Size (L x W x H)	Approx. 123 x 123 x 95 mm (4.8 x 4.8 x 3.7 inches)
Maximum Card Width Support	65 mm (2.6 inches)
Color	Black
Manufacturer	Yanmis
Package Dimensions	17 x 16 x 12 cm
Package Weight	877 g

6. WARRANTY AND SUPPORT

6.1 Warranty Information

Specific warranty details for this product are not provided in the available information. Please refer to the retailer or manufacturer's official website for the most current warranty policy.

6.2 Customer Support

For technical assistance, troubleshooting beyond this manual, or inquiries regarding your product, please contact Yanmis customer support through their official channels or the retailer from whom you purchased the device.

