

Boldever HY300/HY300 Pro Projector Mount

Boldever HY300/HY300 Pro Projector Mount Instruction Manual

Model: HY300/HY300 Pro Projector Mount

 
1. INTRODUCTION

This manual provides detailed instructions for the safe installation, operation, and maintenance of your Boldever HY300/HY300 Pro Projector Mount. Please read this guide thoroughly before attempting any installation or use to ensure proper functionality and safety.

2. PRODUCT SPECIFICATIONS

- **Brand:** Boldever
- **Color:** White
- **Mounting Type:** Wall Mount, Ceiling Mount
- **Material:** Stainless Steel
- **Weight Capacity:** 1.2 kg (2.65 lbs)
- **Item Dimensions:** 4.72 x 4.72 x 0.35 inches (12 x 12 x 0.9 cm)
- **Compatible Projectors:** HY300, HY300 Pro, and other barrel-type projectors meeting the following criteria:
 - Base thickness: 0.24–0.35 inches (0.6–0.9 cm)
 - Base diameter: Less than 4.7 inches (12 cm)
 - Weight: Less than or equal to 2.65 lbs (1.2 kg)

Stable Mount for HY300 & HY300 Pro Projector

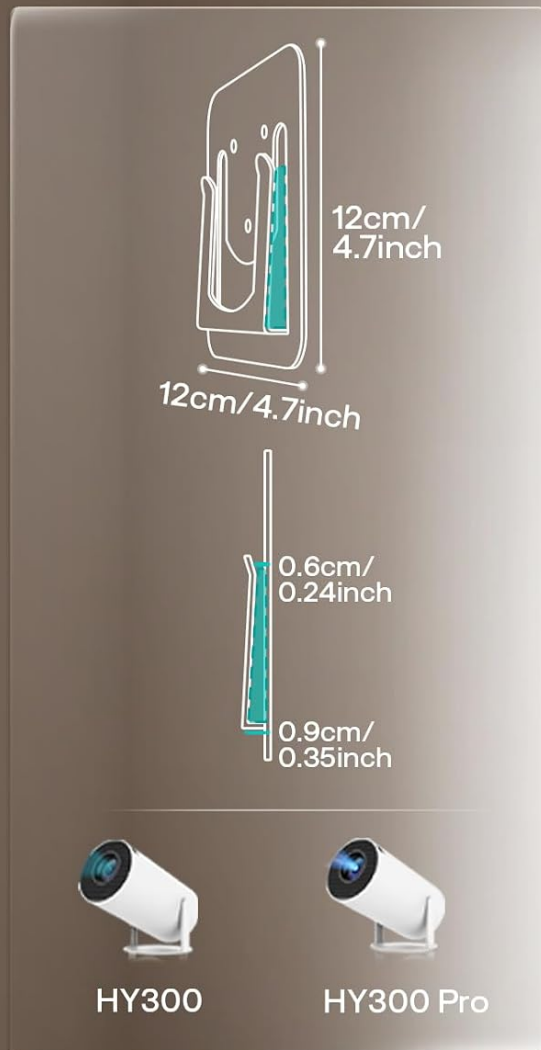

Weight Capacity
1.2kg/2.65lbs

Image 2.1: Projector mount with key dimensions and weight capacity.

Product Dimensions

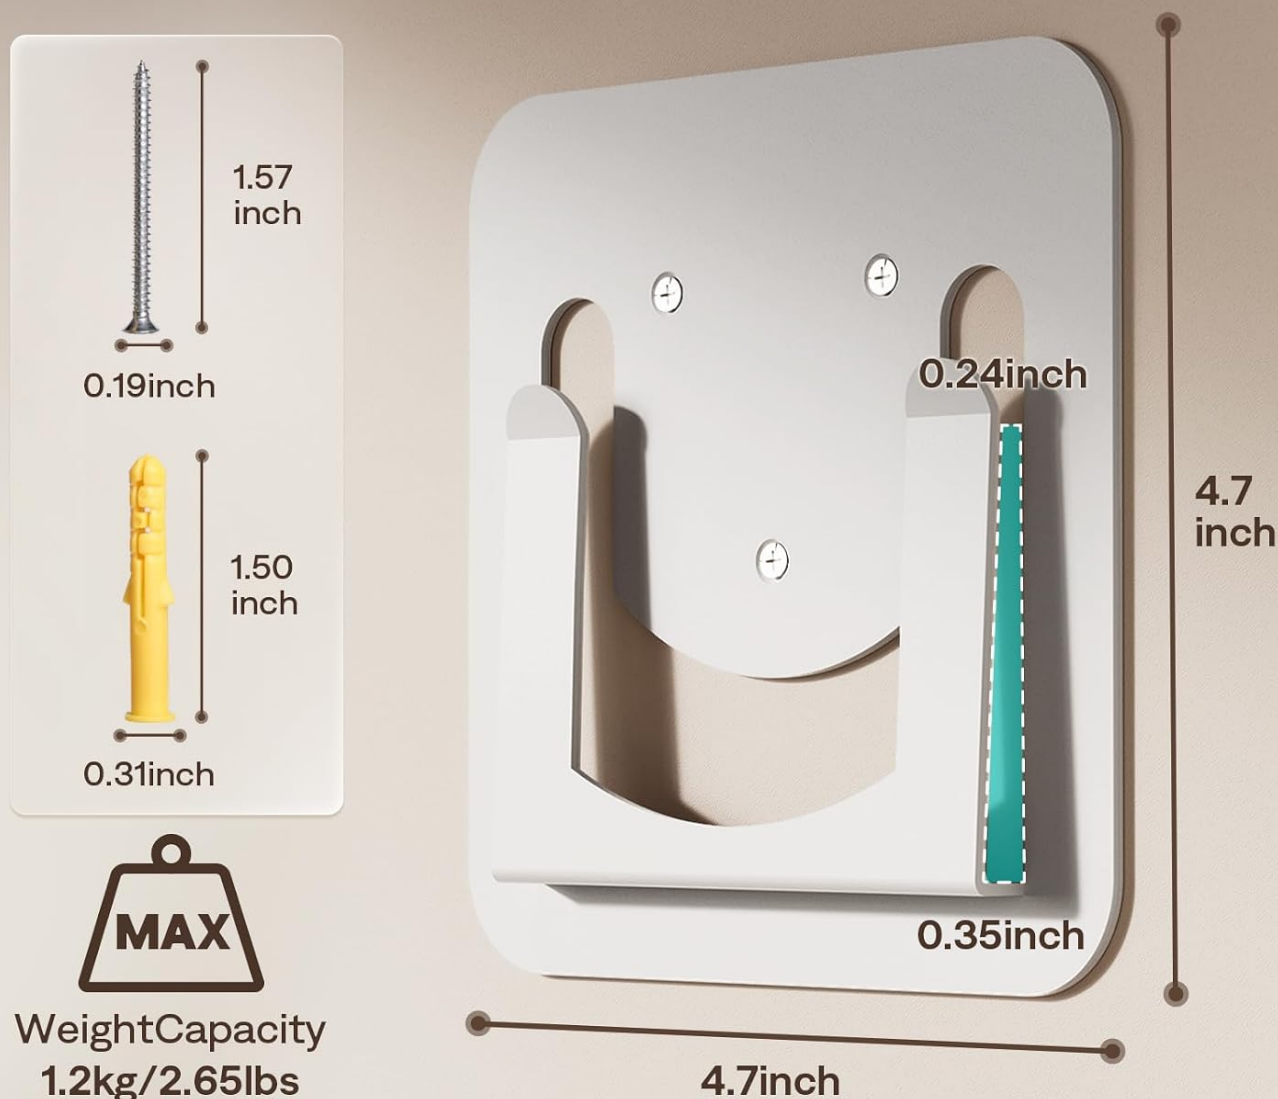 


Image 2.2: Detailed product dimensions for the mount and fasteners.

3. PACKAGE CONTENTS

Verify that all components are present before beginning installation:

- 1 x Projector Mount
- 3 x Iron Nails (Screws)
- 3 x Plastic Expansion Anchors
- 1 x Instruction Manual (this document)

4. SAFETY INFORMATION

Please observe the following safety precautions:

- Ensure the mounting surface (wall or ceiling) is structurally sound and capable of supporting the combined weight of the

mount and projector.

- Do not exceed the maximum weight capacity of 1.2 kg (2.65 lbs).
- Use the appropriate fasteners for your specific wall or ceiling material. Plastic expansion anchors are for solid concrete and brick only; use screws directly for wood surfaces.
- Keep all small parts and tools out of reach of children.
- If you are unsure about any part of the installation process, consult a qualified professional.

5. INSTALLATION

The Boldever projector mount can be installed on a wall or ceiling. Follow these steps carefully:

5.1. Preparing for Installation

1. **Choose Location:** Select a suitable location on your wall or ceiling that provides the desired projection angle and is free from obstructions.
2. **Identify Wall/Ceiling Material:** Determine if your mounting surface is wood, solid concrete, or brick. This will dictate the type of fasteners to use.
3. **Gather Tools:** You will need a pencil, a drill, and a screwdriver.

5.2. Mounting Steps

1. **Step 1: Mark Hole Positions**

Place the projector mount against the desired surface. Use a pencil to mark the three screw hole positions.

2. **Step 2: Drill Holes and Insert Anchors (if applicable)**

For solid concrete or brick walls, drill holes at the marked positions. Gently press the yellow plastic expansion anchors into the drilled holes until flush with the surface. For wood surfaces, anchors are not needed; proceed directly to screwing.

3. **Step 3: Secure the Mount**

Align the mount with the drilled holes (and anchors, if used). Insert the three screws and tighten them securely with a screwdriver until the mount is firmly attached to the wall or ceiling.

4. **Step 4: Slide Projector into Mount**

Carefully slide your compatible projector into the mount. Ensure it sits snugly within the tapered slide rails and rests on the anti-slip silicone pads for stability.

Easy to Install, Instant to Use

Wooden panels: No anchors needed, secure directly with screws

Step 1



Mark three hole position

Step 2



After drilling, press yellow expansion anchor into the hole

Step 3



Tighten 3 screws to secure the wall mount

Step 4



Slide the projector into the wall mount

Image 5.1: Step-by-step installation process.

Installation Tips

Plastic Expansion Anchors for solid concrete & brick only - not for wood surfaces



✓ Rock-Solid for Concrete



✓ Grip-Tight for Brick



✓ Secure Wood Mounting

Image 5.2: Fastener recommendations for various wall types.

6. USAGE AND OPERATION

Once installed, the mount provides a stable platform for your projector.

- **Adjusting Angle:** The mount allows for 180° vertical or horizontal rotation, depending on whether it's wall-mounted or ceiling-mounted. Gently adjust your projector to achieve the desired projection angle.
- **Stability Features:** The mount features anti-slip silicone pads and a tapered slide rail design to prevent the projector from shaking or slipping, ensuring a stable image.



Image 6.1: Wall mount usage demonstrating 180° vertical rotation.

Ceiling Projector Mount

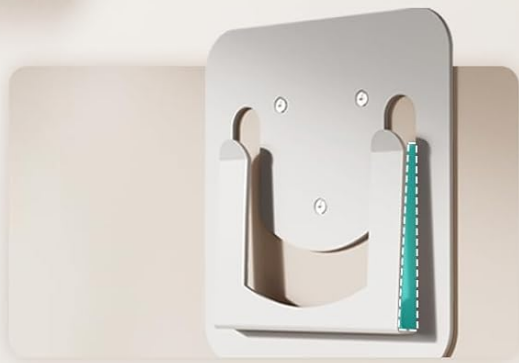 


Image 6.2: Ceiling mount usage demonstrating 180° horizontal rotation.

Anti-Slip Silicone Pads for Stability & Crystal-Clear Image



- ✓ No Scratches
- △ No Shaking



Tapered slide rails ensure maximum stability and prevent slipping



Anti-Slip Silicone Pads Inside

Image 6.3: Anti-slip silicone pads and tapered design for enhanced stability.

7. MAINTENANCE

To ensure the longevity and continued performance of your projector mount:

- **Regular Inspection:** Periodically check all screws and fasteners to ensure they remain tight and secure.
- **Cleaning:** Wipe the mount with a soft, dry cloth to remove dust. Avoid using abrasive cleaners or solvents.
- **Material Durability:** The mount is constructed from stainless steel for durability.

Durable and Unshakable Material



Iron Materials



High-quality
Processing



Seamless One-Piece
Welded Frame

Image 7.1: Illustration of the mount's durable stainless steel construction.

8. TROUBLESHOOTING

If you encounter issues with your projector mount, refer to the following:

- **Mount feels unstable:**

- Ensure all three screws are fully tightened.
- Verify that the correct fasteners (screws directly into wood, or screws with expansion anchors for concrete/brick) were used for your wall type.
- Confirm the mounting surface is strong enough to support the weight.

- **Projector is slipping or shaking:**

- Check that your projector meets the specified compatibility requirements (base thickness, diameter, and weight).
- Ensure the projector is properly seated within the tapered slide rails.

- Verify the anti-slip silicone pads are intact and providing grip.

Why Choose US?

Boldever



Anti-slip pads,
No shaking



Tapered slide
rail design,
No slipping out



Expansion anchors
and screws,
Heavy-Duty
support

Others



Not slip resistant



Short sliding
track, easy to
slip out



Only screws,
Limited to wood

VS

Image 8.1: Comparison of Boldever mount features for stability and secure installation.

9. SUPPORT

For technical assistance, product inquiries, or customer service, please contact Boldever support. We are committed to providing:

- Quick replies within 24 hours.
- Replacement options available within 24 months of purchase.
- Lifetime professional customer service.

Please refer to your product packaging or the Boldever official website for specific contact details.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0FDG74S4N>

More documents and user manuals: <https://manuals.plus/>