

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> **1PLUS** /

> **1PLUS Electric Scooter S10 User Manual**

## 1PLUS S10

# 1PLUS Electric Scooter S10 User Manual

Model: S10  
Brand: 1PLUS

## INTRODUCTION

Welcome to the 1PLUS Electric Scooter S10 user manual. This guide provides essential information for the safe operation, maintenance, and troubleshooting of your new electric scooter. Please read this manual thoroughly before your first ride to ensure optimal performance and safety.


The 1PLUS S10 Electric Scooter features a powerful 600W motor, 10-inch solid tires, and a double braking system, designed for efficient urban commuting and short-distance travel.

## SETUP

Your 1PLUS S10 Electric Scooter comes mostly pre-assembled. Follow these steps to prepare for your first ride:

### 1. Unfolding the Scooter:

Locate the folding mechanism near the base of the handlebar stem. Release the latch and carefully raise the handlebar stem until it locks securely into place. Ensure the locking mechanism is fully engaged before riding.

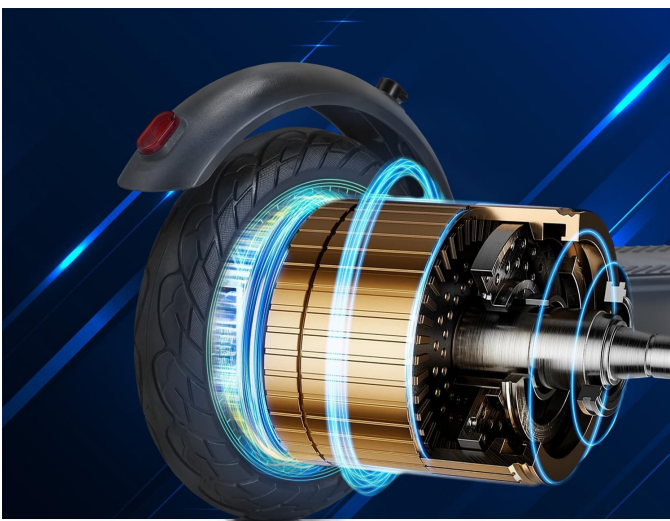

600W Motor



19MPH



15% Climbing slope

Image: A person demonstrating the unfolding process of the 1PLUS S10 electric scooter, showing the handlebar stem being raised and locked into position.

## 2. Initial Charge:

Before your first use, fully charge the scooter's battery. The charging time is approximately 5 hours. Connect the charger to the charging port on the scooter and then to a power outlet. The LED display will indicate the charging status.

## 3. Power On:

Press and hold the power button on the LED display dashboard to turn on the scooter. Check the battery indicator to ensure sufficient charge.

### Smart LCD Display

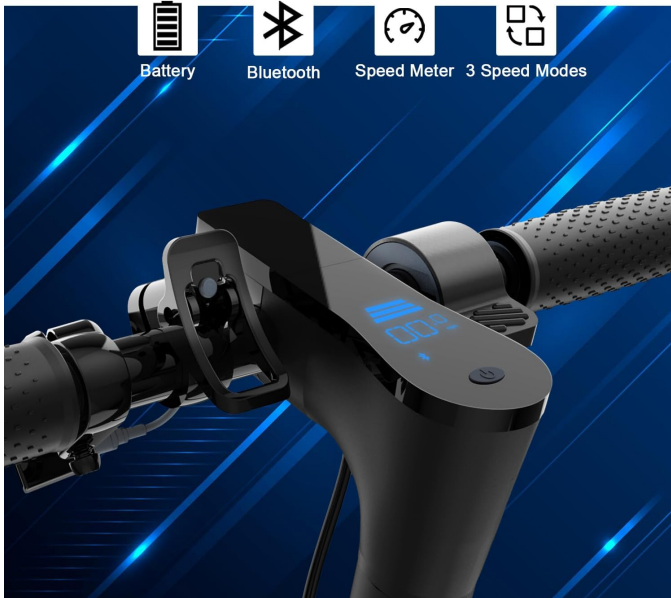


Image: A detailed view of the scooter's LED display, showing icons for battery level, Bluetooth connectivity, speed meter, and three speed modes.

## 4. Brake Adjustment:

Verify that the rear disc brake is functioning correctly. The brake lever should provide firm and responsive braking. If needed, adjust the brake cable tension for optimal performance.

Your browser does not support the video tag.

Video: A demonstration of the 1PLUS S10 electric scooter's features, including a close-up of the rear disc brake and its functionality.

## OPERATING INSTRUCTIONS

---

Operating your 1PLUS S10 Electric Scooter is straightforward. Follow these guidelines for a safe and enjoyable ride:

### 1. Starting the Ride:

Step on the deck with one foot and use your other foot to push off the ground, similar to a traditional kick scooter. Once the scooter reaches 1.86 mph (3 km/h), press the accelerator lever on the right handlebar to engage the motor.

### 2. Speed Modes:


The scooter offers multiple speed modes. Press the power button once to cycle through the speed modes (Level 1, Level 2, Level 3). Level 3 provides the full speed of up to 19 mph.

### 3. Braking:

To slow down or stop, gently squeeze the handbrake lever on the left handlebar. The scooter features a double braking system with a disc brake and eABS regenerative anti-lock braking for effective stopping power.

### 4. Lights:

The scooter is equipped with ultra-bright LED headlights and responsive brake lights for visibility. Double-tap the power button to turn the headlight on or off.

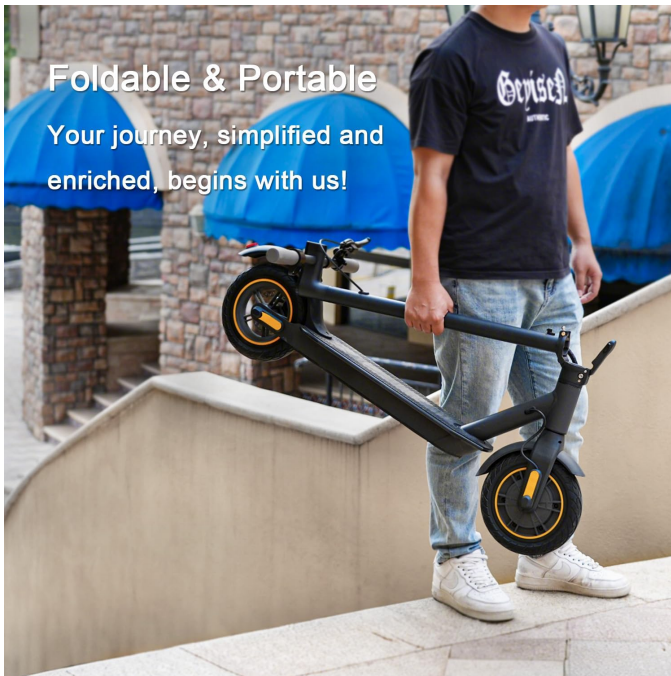

Foldable & Portable  
Your journey, simplified and enriched, begins with us!

Image: A man riding the 1PLUS S10 electric scooter, highlighting the auto headlights and taillights for night visibility.

## MAINTENANCE

---

Regular maintenance ensures the longevity and safety of your 1PLUS S10 Electric Scooter:

- **Cleaning:**

Wipe down the scooter with a damp cloth after each use. Avoid using harsh chemicals or abrasive materials that could damage the finish. Do not use high-pressure water jets.

- **Tires:**

The 1PLUS S10 features 10-inch solid tires, which do not require inflation. This eliminates the need for air pressure checks, repairs, or maintenance related to punctures.



Image: A full side view of the 1PLUS S10 electric scooter, showcasing its 10-inch solid tires and overall design.

- **Battery Care:**

Store the scooter in a cool, dry place. If storing for an extended period, ensure the battery is charged to about 50-70% and recharge it every 30-60 days to prevent deep discharge.

- **Brakes:**

Periodically check the brake system for wear and tear. Ensure the brake lever is responsive and the disc brake is clean and free of debris.

## TROUBLESHOOTING

---

If you encounter issues with your scooter, refer to the following common troubleshooting tips:

- **Scooter Not Turning On:**

Check the battery level. Ensure the scooter is fully charged. If the issue persists, contact customer support.

- **Loss of Power/Speed:**

Verify the selected speed mode. Ensure the battery is adequately charged. Riding uphill or carrying heavy loads can reduce speed and range.

- **Brakes Not Responsive:**

Inspect the brake cable for looseness or damage. Check the disc brake for any obstructions or excessive wear. Adjust the brake tension if necessary.

## SPECIFICATIONS

---

Feature	Specification
Brand	1PLUS
Model Name	S10
Motor Power	600W Peak (Brushless)
Max Speed	Up to 19 mph
Max Range	Up to 20 miles
Tire Type	10-inch Solid Tires
Braking System	Double Braking (Disc & eABS)
Weight Limit	220 Pounds
Charging Time	5 Hours
Frame Material	Aluminum

## WARRANTY & SUPPORT

---

The 1PLUS S10 Electric Scooter comes with a manufacturer's warranty. Please refer to the product details or your purchase documentation for specific warranty periods (e.g., One-year or 180-day for different parts).

For further assistance, troubleshooting, or warranty claims, please visit the official 1PLUS Store on Amazon or contact their customer service directly.

Official 1PLUS Store: [Visit Store](#)

