

[Manuals.plus](#) /

› [XLURC](#) /

› XLURC Digital Camera W05-8K User Manual

XLURC W05-8K

XLURC Digital Camera W05-8K User Manual

Model: W05-8K

1. INTRODUCTION

Thank you for choosing the XLURC Digital Camera W05-8K. This manual provides detailed instructions for the proper setup, operation, and maintenance of your camera. Please read this manual thoroughly before using the camera to ensure optimal performance and longevity.

2. PACKAGE CONTENTS

Before proceeding, please verify that all items listed below are included in your package:

- 1 x XLURC Digital Camera W05-8K
- 1 x 32GB TF Card
- 1 x USB Type-C Cable
- 1 x Neck Strap
- 1 x 3000mAh Li-Ion Battery
- 1 x User Manual (this document)
- 1 x Cleaning Cloth
- 1 x Lens Hood
- 1 x Lens Cap



Lens hood



Lithium Batteries



Lens cap



Neck strap



32G Memory card



User's Manual



Cleaning Cloth



Type c Cable

Figure 2.1: Detailed view of XLURC Digital Camera W05-8K package contents. This image provides a clear layout of all items included in the XLURC Digital Camera W05-8K package: lens hood, lithium batteries, lens cap, neck strap, 32GB memory card, user's manual, cleaning cloth, and Type-C cable.

3. CAMERA OVERVIEW

Familiarize yourself with the main components of your XLURC Digital Camera W05-8K.



Figure 3.1: XLURC Digital Camera W05-8K and included accessories. This image displays the XLURC Digital Camera W05-8K along with its complete set of accessories, including the lens hood, battery, lens cap, neck strap, 32GB memory card, user manual, cleaning cloth, and USB Type-C cable.

3.1 Mode Dial

The mode dial on the top of the camera allows you to select various shooting modes for different scenarios.

Digital Camera 9 Mode Dials



Figure 3.2: XLURC Digital Camera W05-8K mode dial and various shooting modes. This image focuses on the camera's top-mounted mode dial, which offers 9 distinct shooting modes. Below the dial, examples of these modes are shown, including Photo, Auto, Burst, Timer, Video, Slowly (slow motion), Lapse (time-lapse), Loop (loop recording), and Video+Photo.

3.2 Dual Lens and Touchscreen

The camera features a dual-lens system and a 4-inch touchscreen for versatile shooting and easy control.

Dual Lens for Multi-Scenario & 4inch Touchscreen for Easy Control



Figure 3.3: XLURC Digital Camera W05-8K dual lens and 4-inch touchscreen in use. This image depicts a couple using the XLURC Digital Camera W05-8K. The camera's dual-lens system is highlighted, suitable for various scenarios, including selfies. The 4-inch touchscreen is shown displaying the live view, emphasizing its ease of control.

4. SETUP

4.1 Battery Installation

1. Locate the battery compartment cover on the bottom of the camera.
2. Slide the latch to open the cover.
3. Insert the 3000mAh Li-Ion battery into the compartment, ensuring the correct orientation according to the diagram inside.
4. Close the battery compartment cover and slide the latch to secure it.

4.2 Memory Card Installation

The camera supports TF (MicroSD) cards. A 32GB TF card is included.

1. Locate the memory card slot, typically near the battery compartment or on the side of the camera.

2. Insert the 32GB TF card with the gold contacts facing the camera, pushing gently until it clicks into place.
3. To remove, gently push the card again until it springs out.

4.3 Attaching the Lens Hood and Cap

1. Align the lens hood with the front of the camera lens and twist gently until it locks into position.
2. Place the lens cap over the lens when not in use to protect it from dust and scratches.

5. OPERATING THE CAMERA

5.1 Power On/Off

Press and hold the power button (usually located on the top or side) to turn the camera on or off.

5.2 Selecting Shooting Modes

Rotate the mode dial (refer to Figure 3.2) to select your desired shooting mode:

- **Photo:** For still images.
- **Auto:** Camera automatically adjusts settings.
- **Burst:** Captures multiple photos in quick succession.
- **Timer:** Sets a delay before taking a photo.
- **Video:** For recording standard video.
- **Slowly (Slow Motion):** Records video in slow motion.
- **Lapse (Time-Lapse):** Captures a sequence of images over time to create a time-lapse video.
- **Loop (Loop Recording):** Continuously records video, overwriting older footage when the memory card is full.
- **Video+Photo:** Records video while also capturing still images.

5.3 Taking Photos and Recording Videos

1. Select your desired mode using the mode dial.
2. Frame your shot using the 4-inch touchscreen.
3. Press the shutter button halfway to focus (if in Photo or Auto mode).
4. Press the shutter button fully to take a photo or start/stop video recording.

5.4 Using Digital Zoom

The camera features 16X digital zoom. Use the zoom controls (typically a rocker switch labeled 'W' for Wide and 'T' for Telephoto) to adjust the zoom level. Note that digital zoom may reduce image quality compared to optical zoom.

5.5 WiFi Connectivity

The camera's smart WiFi feature allows for easy sharing and remote control via mobile devices.



Figure 5.1: XLURC Digital Camera W05-8K demonstrating auto-focus and WiFi connectivity. The top portion of this image illustrates the camera's auto-focus capability, highlighting fast and easy operation. The bottom portion shows the camera's rear screen displaying WiFi information, including the network name and password, alongside a smartphone connected via WiFi, indicating remote control and sharing features.

1. Enable WiFi on your camera through the settings menu. The camera screen will display the WiFi network name (SSID) and password.
2. On your mobile device, go to WiFi settings and connect to the camera's network.
3. Download and install the recommended companion app (refer to the camera's on-screen instructions or the QR code for the app download: <https://qr04.cn/B9lhOx>).
4. Open the app to control the camera remotely, view live footage, and transfer files.

5.6 Touchscreen Operation

The 4-inch touchscreen simplifies parameter adjustments and video playback. Tap to select options, swipe to navigate menus or review photos/videos, and pinch to zoom during playback.

5.7 Dual-Lens Functionality

The dual-lens setup enhances convenience for various uses, including selfies and live broadcasts. Utilize the front-facing lens for self-portraits or vlogging directly to the camera.

6. MAINTENANCE

- **Cleaning the Lens:** Use the provided cleaning cloth or a specialized lens cleaning solution and cloth to gently wipe the lens. Avoid using abrasive materials.
- **Cleaning the Screen:** Use a soft, lint-free cloth to clean the touchscreen.
- **Battery Care:** Store the battery in a cool, dry place when not in use. Avoid fully discharging the battery frequently.
- **Storage:** When not in use for extended periods, store the camera in a dry, dust-free environment, preferably in a camera bag.

7. TROUBLESHOOTING

- **Camera Unresponsive/Overheating:** Long-term continuous use, especially during video recording or WiFi transfer, may cause the camera to become warm or temporarily unresponsive. If this occurs, turn off the camera and allow it to cool down before resuming use.
- **Battery Drains Quickly:** Ensure the battery is fully charged. Reduce screen brightness, turn off WiFi when not in use, and limit continuous video recording to conserve battery life.
- **Memory Card Error:** Ensure the TF card is inserted correctly. If the error persists, try formatting the card (this will erase all data) or use a different compatible TF card.
- **Cannot Connect to WiFi:** Verify that WiFi is enabled on the camera and your mobile device. Ensure you are entering the correct network name and password. Try restarting both devices.
- **Poor Image/Video Quality:** Check lens cleanliness. Ensure adequate lighting. Adjust shooting modes and settings as needed. Digital zoom beyond a certain point can reduce quality.

8. SPECIFICATIONS

Feature	Specification
Model Name	W05-8K
Effective Still Resolution	64 MP
Video Resolution	8K
Screen Size	4 Inches
Digital Zoom	16x
Optical Zoom	1x
Connectivity Technology	USB, WiFi
Battery Type	1 Lithium Polymer (3000mAh)
Photo Sensor Size	1/2.5-inch
Form Factor	Compact
Item Weight	13.6 ounces

Color	Black
Manufacturer	XLURC
ASIN	B0FDGDP9CH

9. SUPPORT

For any inquiries or technical assistance regarding your XLURC Digital Camera W05-8K, please contact our customer service. We offer 24-hour customer support to ensure you receive the help you need.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

How do I turn the picture around on the XLURC W05-8K digital camera?

Based on the XLURC W05-8K manual, there are two ways to interpret "turning the picture around" depending on whether you want to switch to the selfie camera or rotate a saved image: Switching to...

[Read full answer](#)

Open the live page

<https://manuals.plus/asin/B0FDGDP9CH>

More documents and user manuals: <https://manuals.plus/>