

GXJ GXJ-OL8077-WH

GXJ Criss Cross Office Chair

INSTRUCTION MANUAL - MODEL GXJ-OL8077-WH

1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before assembly and use. Retain this manual for future reference.

- Always follow the assembly instructions carefully to ensure the chair is assembled correctly and safely.
- Do not exceed the maximum weight recommendation of **380 pounds (172 kg)** to prevent potential safety hazards and damage to the chair.
- Ensure all screws and bolts are securely tightened before use and check them periodically.
- Keep small parts away from children during assembly.
- Use the chair on a level surface.
- Avoid standing on the chair or using it as a step stool.

2. PRODUCT OVERVIEW

The GXJ Criss Cross Office Chair is designed for comfort and versatility in various settings, including home offices, study rooms, and vanity areas. It features an ergonomic design with a wide seat and back, a lumbar pillow, and an adjustable headrest to support prolonged sitting.

Key features include:

- Adjustable height (19.7" to 23.6")
- Reclining backrest with 3 positions (90°, 110°, 120°)
- Flip-up and 4D adjustable armrests
- Integrated footrest for relaxation
- Soft, thickened corduroy fabric cushions
- 360° swivel and smooth-rolling wheels
- BIFMA certified and SGS level 3 gas cylinder for safety and durability



Image 2.1: GXJ Criss Cross Office Chair in use, highlighting its spacious design for various sitting postures.

3. SETUP AND ASSEMBLY

Assembly of your GXJ Criss Cross Office Chair is straightforward. All necessary tools and hardware are typically included. Please follow the step-by-step instructions provided in the separate assembly guide that came with your product. Below are general steps and component identification.

3.1 Components Overview

Image 3.1: Illustration of the chair's stable seating components, including the gas lift, base, and wheels.

3.2 General Assembly Steps (Refer to detailed guide for specifics)

1. Attach the wheels to the chair base.
2. Insert the gas lift into the center of the chair base.

3. Secure the seat plate mechanism to the underside of the seat cushion.
4. Place the assembled seat onto the gas lift.
5. Attach the backrest to the seat using the provided hardware.
6. Install the armrests to the sides of the seat and backrest.
7. Attach the lumbar pillow and headrest as desired.
8. Ensure all connections are tight and stable before use.

4. OPERATING INSTRUCTIONS

4.1 Height Adjustment

To adjust the chair's height (from 19.7" to 23.6"), locate the lever on the right side beneath the seat. Lift the lever upward while seated to lower the chair, or lift the lever while standing to raise the chair. Release the lever at your desired height.



Image 4.1: Visual guide for chair height adjustment.

4.2 Reclining Backrest

The backrest offers three reclining positions: 90° (upright), 110°, and 120° (relaxed). To adjust, pull the recline lever (typically on the left side) forward. Lean your back against the chair to reach the desired angle, then push the lever back to lock it in place. To return to the 90° upright position, pull the lever forward, sit on the chair, and lean back slightly; the backrest will spring back to the upright angle.

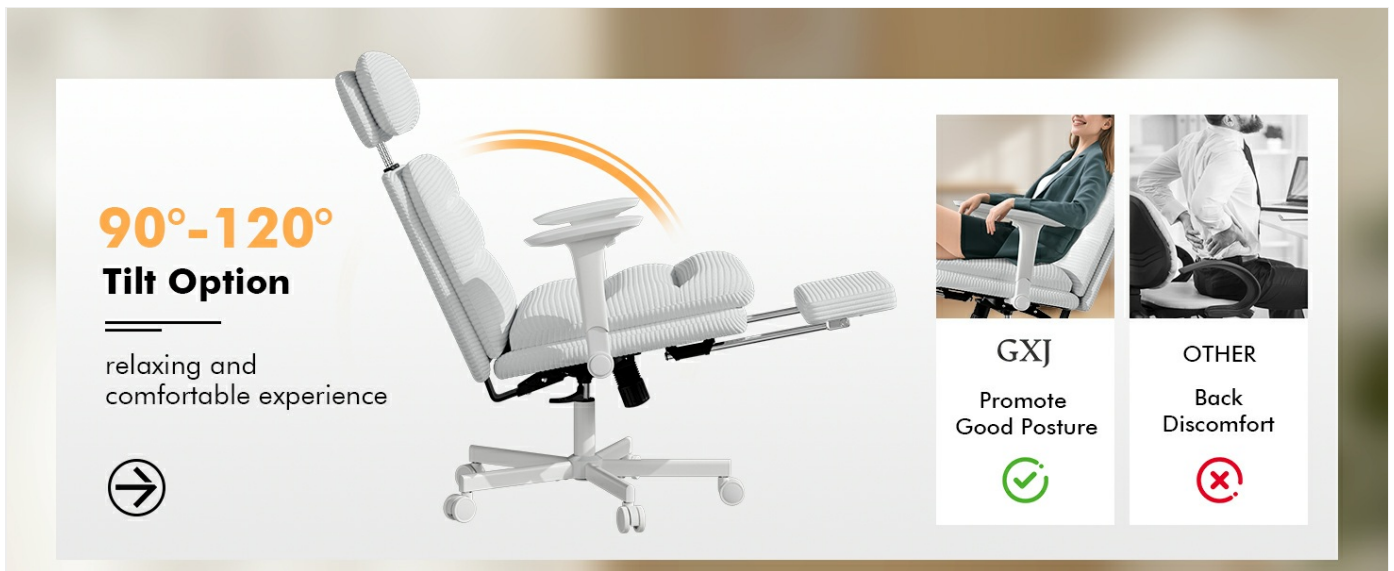


Image 4.2: Demonstration of the chair's reclining function and tilt lock.

4.3 Armrest Adjustments

The chair features 4D armrests that can be adjusted in multiple ways:

- **Flip-Up Function:** The armrests can be flipped up 60° to allow for cross-legged sitting or to easily stow the chair under a desk, saving space.
- **Height Adjustment:** Press the button on the side of the armrest to adjust its height up or down.
- **Slide Adjustment:** The armrests can slide forward and backward.
- **Rotation:** The armrest pads can rotate 43° left and right to suit your preference.



Image 4.3: Illustration of the flip-up armrest feature.

4.4 Footrest Operation

To use the integrated footrest, pull it out from underneath the seat. Extend it to your desired length for comfortable leg support. Push it back in when not in use to store it neatly under the seat.



Comes With Lumbar Pillow

Image 4.4: The chair with its footrest extended and lumbar pillow in place.

4.5 Adjustable Headrest

The headrest can be adjusted in height (7.5"-10") to provide optimal neck and head support. Simply grasp the headrest and slide it up or down to your preferred position.

Adjustable Headrest

Rise Headrest for Adapting Posture



Image 4.5: Visual representation of the adjustable headrest.

5. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your GXJ office chair.

- **Cleaning:** Wipe clean with a soft, damp cloth. Avoid using harsh chemicals or abrasive cleaners, as these can damage the corduroy fabric and other components.
- **Fasteners:** Periodically check all screws and bolts to ensure they remain tight. Re-tighten if necessary to maintain stability and safety.
- **Moving Parts:** If any moving parts (e.g., gas lift, wheels) become stiff, a small amount of silicone-based lubricant can be applied, avoiding contact with fabric.
- **Fabric Care:** The corduroy fabric is designed to be anti-scratch and anti-peeling. For spills, blot immediately with a clean, dry cloth.

6. TROUBLESHOOTING

If you encounter issues with your chair, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Chair does not adjust height	Gas lift malfunction or lever not engaged.	Ensure the height adjustment lever is fully engaged. If the issue persists, the gas lift may need replacement. Contact customer support.
Chair wobbles or feels unstable	Loose screws or uneven assembly.	Check and re-tighten all assembly screws, especially those connecting the seat, backrest, and base. Ensure the chair is on a level surface.
Armrests move unexpectedly or pinch skin	Armrest adjustment mechanisms are not locked or are too loose.	While the armrests are designed for flexibility, be mindful of their movement when leaning. Ensure they are in a stable position for support. If a locking mechanism is present, ensure it is engaged.
Footrest slides out on its own	Lack of resistance in the sliding mechanism.	Use the footrest gently. If it consistently slides out, inspect the mechanism for any obstructions or damage.

Problem	Possible Cause	Solution
Wheels do not roll smoothly	Debris in wheels or damaged casters.	Clean any hair or debris from the wheel casters. If a wheel is damaged, it may need replacement.

7. SPECIFICATIONS

Feature	Detail
Brand	GXJ
Model Name	GXJ-OL8077-WH
Color	White
Product Dimensions (D x W x H)	22.8" x 22.2" x 42.1"-46.1"
Seat Height	19.7" - 23.6"
Maximum Weight Recommendation	380 Pounds (172 kg)
Back Style	Padded Backrest
Special Features	Adjustable Height, Ergonomic, Flip-up Armrests, Foot Rest, Reclining, Lumbar Pillow, Adjustable Headrest
Arm Style	4D Arms
Reclining Position Count	3 Positions (90°, 110°, 120°)
Fill Material	Sponge
Fabric Type	Corduroy
Item Weight	45.4 pounds (20.6 kg)
Certifications	BIFMA Certified, SGS Level 3 Gas Cylinder

Product Dimension

Weight Capacity

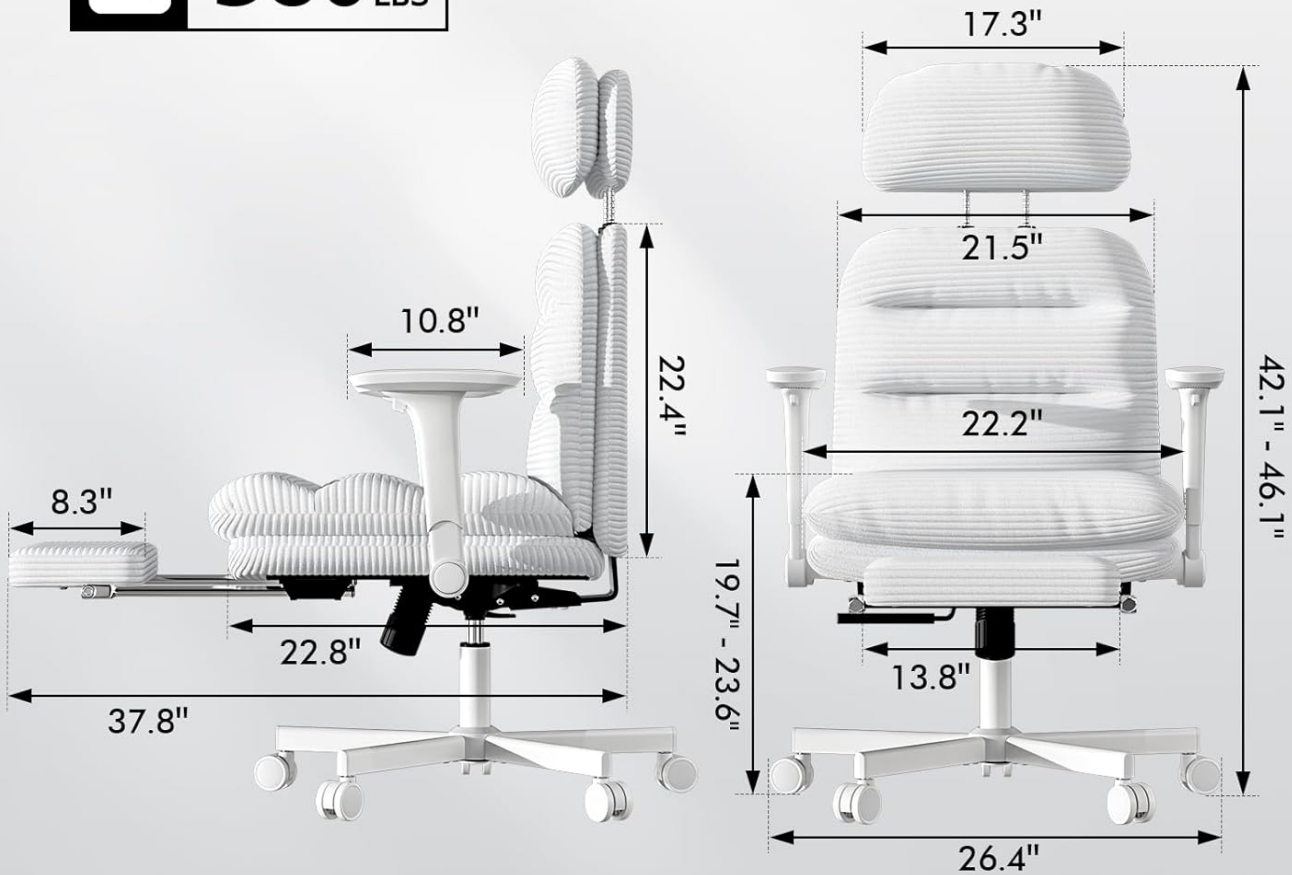


Image 7.1: Product dimensions and weight capacity.

8. WARRANTY AND SUPPORT

For warranty information, please refer to the documentation included with your purchase or contact the seller directly. GXJ is committed to customer satisfaction.

If you have any questions, require assistance with assembly, or need to report a defect, please contact GXJ customer support through the retailer where you purchased the product. Please have your model number (GXJ-OL8077-WH) and purchase date ready.



