

[Manuals.plus](#) /

› [VULKKANO](#) /

› VULKKANO TD10 Bluetooth Turntable Instruction Manual

VULKKANO TD10

VULKKANO TD10 Bluetooth Turntable

Instruction Manual

INTRODUCTION

Thank you for choosing the VULKKANO TD10 Bluetooth Turntable. This manual provides essential information for setting up, operating, and maintaining your turntable to ensure optimal performance and enjoyment of your vinyl collection. The TD10 combines classic analog sound with modern convenience, featuring Bluetooth connectivity, automatic playback, and a precise tonearm. Its elegant design and integrated phono equalizer make it suitable for any music enthusiast.

WHAT'S IN THE BOX

Carefully unpack all components and ensure you have received the following items:

- VULKKANO TD10 Turntable Base with Tonearm
- Aluminum Platter
- Dust Cover
- Felt Mat
- Counterweight
- 45 RPM Adapter
- RCA Cable with Ground Wire
- Power Adapter (European)
- User Manual (this document)

DESIGN WITH **ANALOG SOUL**



**WOOD
FINISH**



**MINIMALIST
LINES**



**TIMELESS
AESTHETICS**



Image: All components included in the VULKANO TD10 package.

SETUP

1. **Placement:** Place the turntable on a stable, level surface away from direct sunlight, heat sources, and strong vibrations.
2. **Platter Installation:** Carefully place the aluminum platter onto the spindle. Ensure it sits securely.
3. **Felt Mat:** Place the felt mat on top of the platter.
4. **Dust Cover:** Attach the dust cover to the hinges at the back of the turntable.
5. **Counterweight:** Slide the counterweight onto the rear of the tonearm. Adjust it according to the cartridge's recommended tracking force (typically 3.5 grams for the ATL-3600 cartridge, though 3 grams may suffice to reduce vinyl wear). Refer to the cartridge manufacturer's instructions for precise adjustment.
6. **Connections:**
 - **Power:** Connect the power adapter to the DC IN 12V port on the rear of the turntable and then to a power

outlet.

- **Audio Output:** The TD10 has an integrated phono preamp. Connect the RCA cable (with ground wire) from the OUTPUT/SELECT ports (R and L) on the turntable to your active speakers or an amplifier's LINE input. Ensure the PHONO/LINE switch on the turntable's rear is set to 'LINE' if using the internal preamp, or 'PHONO' if connecting to an amplifier with a dedicated phono input.



Image: Rear panel connections of the VULKKANO TD10.


Image: VULKKANO TD10 ready for playback with connected speakers.

OPERATING INSTRUCTIONS

Playing a Record

1. Ensure the turntable is powered on using the ON/OFF switch on the rear.
2. Select the appropriate speed (33 or 45 RPM) using the speed selector knob. Use the 45 RPM adapter for singles if needed.
3. Place your vinyl record on the felt mat on the platter.
4. Lift the tonearm using the cueing lever.
5. Position the stylus over the desired starting groove of the record.
6. Lower the tonearm gently using the cueing lever. The automatic playback feature will start the platter rotation.
7. At the end of the record, the tonearm will automatically return to its rest, and the platter will stop.

 WARM AND STABLE SOUND

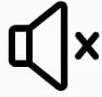

REDUCE
VIBRATIONS



BELT-DRIVEN
SYSTEM



SMOOTH
PLAYBACK



PURE
SOUND



Image: ATL-3600 Cartridge for precise audio playback.

Bluetooth Connectivity

The VULKKANO TD10 features Bluetooth connectivity for streaming audio from your turntable to compatible Bluetooth speakers or headphones. Consult your Bluetooth device's manual for pairing instructions. The turntable will typically enter pairing mode automatically when Bluetooth is selected (if available via a mode switch) or when no other audio output is active.

ATL-3600 CARTRIDGE

CLASSIC PRECISION

CAPTURES EVERY GROOVE **DETAIL** WITH **BALANCE**, **CLARITY**, AND **AUTHENTIC ANALOG CHARACTER.**



Image: VULKANO TD10 delivering warm and stable sound.

MAINTENANCE

Cleaning the Turntable

- **Dust Cover:** Always keep the dust cover closed when the turntable is not in use to prevent dust accumulation. Clean the dust cover with a soft, dry cloth.
- **Cabinet:** Wipe the turntable cabinet with a soft, slightly damp cloth. Avoid using harsh chemicals or abrasive cleaners.
- **Stylus:** Gently clean the stylus regularly using a soft brush designed for stylus cleaning, brushing from back to front. A dirty stylus can degrade sound quality and damage your records.
- **Records:** Keep your vinyl records clean. Use a carbon fiber brush before each play to remove dust and static.

Stylus Replacement

The stylus (needle) is a consumable part and will wear out over time, typically after 300-500 hours of playback. A worn stylus can damage your records and degrade sound quality. Replace the stylus with an ATL-3600 compatible replacement when necessary. Refer to the cartridge manufacturer's instructions for replacement procedures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power adapter not connected; power outlet not active; ON/OFF switch off.	Check power connections; try a different outlet; ensure ON/OFF switch is on.
No sound	RCA cables not connected; PHONO/LINE switch incorrect; speakers off/volume low; stylus damaged.	Check RCA connections; set PHONO/LINE switch correctly; turn on speakers and adjust volume; inspect stylus.
Sound distorted or skipping	Dirty record/stylus; incorrect tracking force; turntable not level; damaged record.	Clean record/stylus; adjust counterweight; ensure turntable is level; try a different record.
Platter not spinning	Belt dislodged or broken; motor issue.	Check drive belt placement; contact support if belt is broken or motor is faulty.
Bluetooth pairing issues	Device too far; device not in pairing mode; interference.	Ensure devices are close; put Bluetooth device in pairing mode; reduce interference.

SPECIFICATIONS

- **Brand:** VULKKANO
- **Model Name:** TD10
- **Part Number:** TD10-BROWN
- **Color:** Maroon
- **Power Source:** Corded Electric (12V DC)
- **Signal-to-Noise Ratio:** 65 dB
- **Included Components:** Turntable, User Manual, European Power Adapter, RCA to RCA Cable
- **Cartridge:** ATL-3600
- **Speeds:** 33 1/3 RPM, 45 RPM
- **Features:** Bluetooth Connectivity, Automatic Playback, Integrated Phono Preamp, Adjustable Tonearm, Dust Cover

WARRANTY AND SUPPORT

For warranty information, please refer to the documentation provided with your purchase or contact your retailer. VULKKANO products are designed for durability and performance. If you encounter any issues not covered in this manual, please contact VULKKANO customer support for assistance.

Contact Information: Please visit the official VULKKANO website or consult your purchase receipt for the most up-to-date customer support contact details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question