



[Manuals.plus](#) /

› [Lenovo](#) /

› [Lenovo ThinkPad E16 AMD Ryzen 5 7535HS Laptop User Manual](#)

Lenovo ThinkPad E16

Lenovo ThinkPad E16 AMD Ryzen 5 7535HS Laptop User Manual

Model: ThinkPad E16 (21M5S0J500)

INTRODUCTION

This manual provides essential information for setting up, operating, maintaining, and troubleshooting your Lenovo ThinkPad E16 laptop. Please read this guide thoroughly to ensure proper use and to maximize the lifespan of your device.

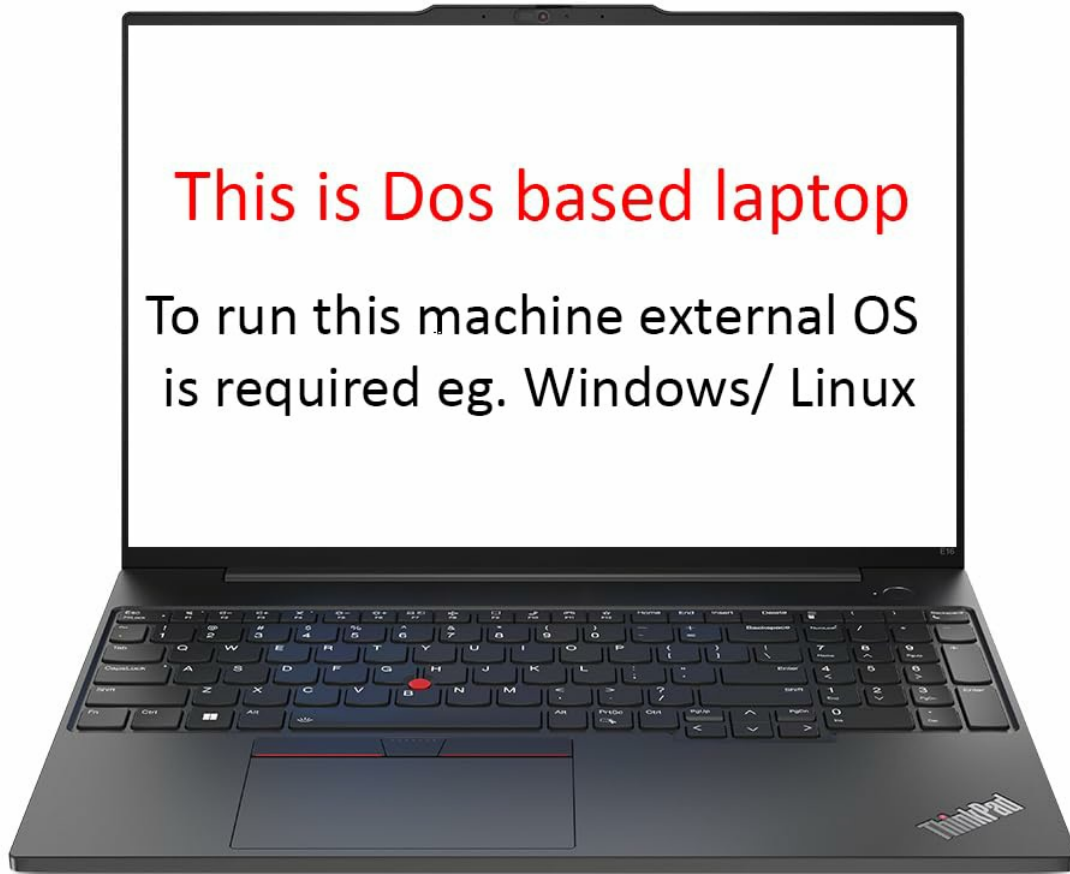


Image: Lenovo ThinkPad E16 Laptop. This image displays the closed laptop from a slight angle, showcasing its sleek design and graphite black finish.

1. SETUP

1.1 Unboxing and Initial Inspection

Carefully remove all components from the packaging. Verify that the following items are present:

- Lenovo ThinkPad E16 Laptop
- Power Adapter
- User Manual (this document)

Inspect the laptop and accessories for any signs of damage. If any items are missing or damaged, contact your vendor immediately.

1.2 Connecting the Power Adapter

Connect the power adapter to the laptop's power input port and then plug the power cable into a wall outlet. The

battery will begin charging automatically.

1.3 First Power On and Operating System Installation

Press the power button located on the side or top of the keyboard deck. Since this model comes with DOS, you will need to install a compatible operating system (e.g., Windows, Linux) to utilize the laptop fully. Follow the on-screen instructions provided by your chosen operating system's installation media.

1.4 Connecting Peripherals

Your ThinkPad E16 includes various ports for connecting external devices:

- **USB Ports:** Connect USB devices such as mice, keyboards, external storage, or printers. The laptop features 4 total USB ports.
- **HDMI Port:** Connect an external display or projector using an HDMI cable.
- **Audio Jack:** Connect headphones or external speakers.

2. OPERATING YOUR LAPTOP

2.1 Keyboard and Touchpad Usage

The laptop features a full-sized keyboard with a backlit function for use in low-light conditions. The integrated touchpad supports multi-touch gestures for navigation.

2.2 Fingerprint Reader

The integrated fingerprint reader allows for secure and convenient login. To set up, access the security settings within your operating system and follow the instructions to register your fingerprints.

2.3 Connecting to an External Display

Use the HDMI port to connect your laptop to an external monitor or television. Once connected, you can configure display settings (e.g., duplicate, extend) through your operating system's display settings.

2.4 Power Management

Adjust power settings in your operating system to optimize battery life or performance. This includes setting sleep timers, display brightness, and power modes.

3. MAINTENANCE

3.1 Cleaning Your Laptop

To clean the laptop, use a soft, lint-free cloth slightly dampened with water or a specialized screen cleaner. Avoid harsh chemicals or abrasive materials. Ensure the laptop is powered off and unplugged before cleaning.

3.2 Battery Care

To prolong battery life:

- Avoid extreme temperatures.
- Do not fully discharge the battery frequently.
- If storing the laptop for an extended period, ensure the battery is charged to approximately 50-60%.

3.3 Software Updates

Regularly update your operating system, drivers, and applications to ensure optimal performance, security, and compatibility.

3.4 Storage Management

Periodically review and manage your 512GB SSD storage. Delete unnecessary files, uninstall unused applications, and consider cloud storage for large files to maintain system speed.

4. TROUBLESHOOTING

This section addresses common issues you might encounter with your ThinkPad E16.

4.1 Laptop Not Powering On

- Ensure the power adapter is securely connected to both the laptop and a working power outlet.
- Verify the power outlet is functional by plugging in another device.
- If the battery is completely drained, allow it to charge for at least 15-30 minutes before attempting to power on.

4.2 Display Issues

- If the screen is blank, try adjusting the brightness settings using the keyboard function keys.
- If using an external monitor, ensure the cable is properly connected and the display settings are configured correctly in your operating system.
- Restart the laptop.

4.3 Fingerprint Reader Not Working

- Ensure your finger is clean and dry.
- Try re-registering your fingerprint in the operating system's security settings.
- Ensure the fingerprint reader drivers are up to date.

4.4 Slow Performance

- Close unnecessary applications running in the background.
- Check for and install any pending operating system or driver updates.
- Ensure you have sufficient free space on your 512GB SSD.
- Run a malware scan.

5. SPECIFICATIONS

Below are the key technical specifications for the Lenovo ThinkPad E16 (Model: 21M5S0J500).

Feature	Specification
Brand	Lenovo
Model Name	Lenovo Laptop (ThinkPad E16)
Processor	AMD Ryzen 5 7535HS (6 Cores, 12 Threads, up to 4.55GHz)
RAM Memory	16 GB DDR5 (4800 MHz), upgradable to 64 GB
Storage	512 GB SSD

Feature	Specification
Display	16-inch WUXGA (1920 x 1200) IPS, 300 Nits, Anti-glare
Operating System	DOS
Graphics	Integrated AMD Graphics
Special Features	Backlit Keyboard, Fingerprint Reader
Ports	HDMI, USB (4 total)
Battery	47 Watt Hours Lithium Polymer
Weight	1.78 kg (1780 Grams)
Dimensions (L x W x T)	24.8L x 35.6W x 2Th Centimeters

6. WARRANTY AND SUPPORT

6.1 Warranty Information

Your Lenovo ThinkPad E16 comes with a **1-year Carry-In Warranty (1Y CCI)**. Please retain your proof of purchase for warranty claims. For detailed terms and conditions, refer to the warranty card included with your product or visit the official Lenovo support website.

6.2 Manufacturer and Importer Contact

For technical support, service, or warranty inquiries, please contact:

- **Manufacturer:** Lenovo, LCFC (HeFei) Electronics Technology Co., Ltd. No.3188-1, Yungu Road, Economics and Technology Development District, Hefei, Anhui-230601, China
- **Importer (India):** Lenovo India Pvt Ltd, RBD Icon, 2nd Floor, Doddenekundi, Marathaalli Outer Ring Road, Bangalore, India 560037

You can also visit the official Lenovo support website for drivers, FAQs, and further assistance support.lenovo.com