



Manuals.plus /

- › OKD /
- › OKD Modern 70-inch TV Stand User Manual (Model B0FDGKNN4N)

OKD B0FDGKNN4N

OKD Modern 70-inch TV Stand User Manual

Model: B0FDGKNN4N

[Assembly](#) [Operation](#) [Safety Information](#) [Components](#) [Setup & Specifications](#) [Warranty & Support](#)

INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your OKD Modern 70-inch TV Stand. Please read this manual thoroughly before beginning assembly and retain it for future reference. Proper assembly and care will ensure the longevity and safe use of your product.

SAFETY INFORMATION

WARNING: Failure to follow these safety instructions could result in serious injury or property damage.

- Assembly requires two adults. Do not attempt to assemble alone.
- Handle all components with care to prevent damage.
- Ensure the TV stand is placed on a flat, level, and stable surface.
- Do not exceed the maximum weight capacity of 300 lbs for the top surface.
- Do not allow children to climb on the TV stand or shelves.
- Keep small parts away from children to prevent choking hazards.
- Periodically check all fasteners to ensure they remain tight.
- Use anti-tip hardware (if included) to secure the TV stand to the wall, especially in homes with children or pets.

COMPONENTS AND HARDWARE

Before assembly, verify that all parts and hardware are present and undamaged. Refer to the included parts list in your package. If any parts are missing or damaged, contact customer service immediately.

Product Dimensions

Antique White Light Knotty Oak Dark Walnut Dark Rustic Oak



The item will be delivered in 2 Packages and may **NOT** arrived on same day



Image: An illustration detailing the overall dimensions of the TV stand (70"W x 15.7"D x 32.5"H) and internal shelf dimensions (8.7" and 7.8" heights, 36" width). It also indicates a weight capacity of 300 lbs and notes that the item ships in two packages.

SETUP AND ASSEMBLY

Assembly is recommended for two adults and typically takes 60 minutes or less. Follow the step-by-step instructions provided in the package. Ensure you have a clear, spacious area for assembly.

- Unpack and Identify:** Carefully unpack all components and hardware. Lay them out on a soft, clean surface to prevent scratches. Match each part to the corresponding label in the instruction manual.
- Assemble Base:** Begin by assembling the sturdy 3.5-inch one-piece plinth base according to the diagrams.
- Construct Frame:** Attach the side panels and internal dividers to form the main structure of the TV stand.
- Install Shelves:** Insert the adjustable shelves into the desired positions within the open compartments and side cabinets.
- Attach Doors:** Secure the side cabinet doors using the provided hinges. Adjust as necessary for proper alignment.
- Secure Top Panel:** Place and secure the 70"W x 16"D tabletop.

7. **Cable Management:** Utilize the four built-in cable holes located behind the center shelves and side cabinets to route and organize your electronic device cables.
8. **Final Placement:** Carefully move the assembled TV stand to its final location. Ensure it is stable and level.



Image: The OKD Modern 70-inch TV Stand in a living room, showcasing its light knotty oak finish, open storage, and side cabinets. A television is placed on top, and decorative items are arranged on the shelves.

36"W × 18"H – Spacious 2-Tier Open Shelf

Ideal for consoles, center speakers, storage bins, or decor



Image: A close-up view of the TV stand's hidden side cabinets with adjustable shelves, providing storage for media accessories and other items. The image highlights the functionality of the doors and internal space.

4 Cable Management Holes for a Clutter-Free Setup

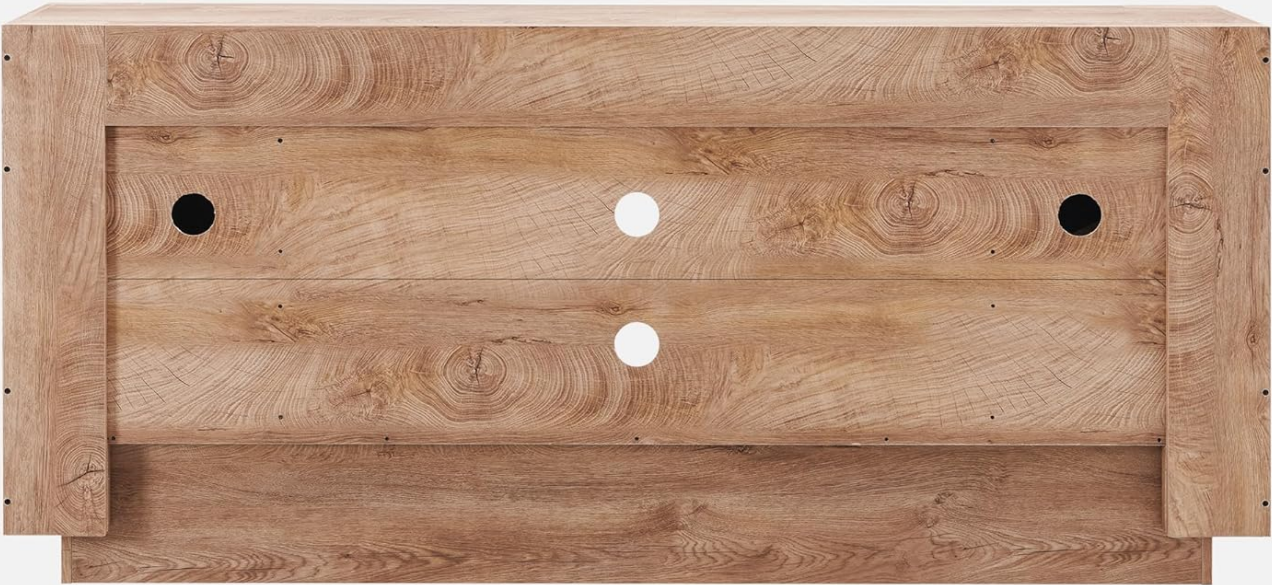


Image: The rear view of the TV stand, clearly showing the four strategically placed cable management holes designed to keep wires organized and out of sight.

OPERATION

The OKD Modern TV Stand is designed for versatile use in your living space.

- **Television Placement:** The top surface is designed to accommodate flat-screen TVs up to 80 inches and supports up to 300 lbs. Center your television for optimal balance and aesthetics.
- **Storage Utilization:**
 - The spacious open shelf (36"W x 16"D x 18"H, divided into two tiers) is ideal for media players, soundbars, decorative items, or books.
 - The two side cabinets with adjustable shelves provide hidden storage for remotes, game consoles, or other accessories.
- **Cable Organization:** Use the integrated cable holes to route power cords and signal cables, maintaining a tidy appearance and preventing tangles.

70" x 16" Spacious Tabletop with Rustic Wood Finish



Image: A top-down view of the TV stand's 70"W x 16"D tabletop, highlighting its rustic wood finish and ample space for a television and decorative elements.



Hidden Side Cabinets

Two side cabinets with adjustable shelves provide flexible storage for media accessories, remotes, and other essentials.

Thickened Sturdy Base

A 3.5-inch thick, one-piece base offers strong support with a sleek, seamless design that enhances any room's decor.



Image: A detailed view of the TV stand's 36"W x 18"H two-tier open shelf, showing its capacity for media devices, books, and decorative storage bins.

Suitable for TV size up to 80"



Image: A visual representation indicating that the TV stand is suitable for televisions up to 80 inches, with outlines for 65", 70", 75", and 80" TV sizes.

MAINTENANCE

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners, which can damage the finish.
- **Dusting:** Regularly dust with a dry, soft cloth to prevent buildup.
- **Spills:** Immediately blot any spills with a clean, dry cloth to prevent staining or water damage.
- **Fasteners:** Periodically check all screws and fasteners to ensure they are tight. Re-tighten if necessary.
- **Sunlight Exposure:** Avoid prolonged exposure to direct sunlight to prevent fading or discoloration of the wood finish.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Stand is wobbly or unstable.	Loose fasteners or uneven floor.	Check and tighten all screws. Ensure the stand is on a level surface; use shims if necessary.
Doors do not align properly.	Hinges are not adjusted correctly.	Adjust the screws on the hinges to align the doors. Refer to the assembly instructions for hinge adjustment details.
Scratches or minor damage to the finish.	Accidental impact or abrasion.	For minor scratches, use a wood repair marker or touch-up kit that matches the finish.

SPECIFICATIONS

- **Brand:** OKD
- **Model:** B0FDGKNN4N
- **Color:** Light Knotty Oak
- **Material:** Engineered Wood
- **Product Dimensions:** 16"D x 70"W x 33"H
- **Weight Limit (Top Surface):** 300 Pounds
- **Item Weight:** 138 Pounds
- **Recommended TV Size:** Up to 80 inches
- **Storage Options:** Open shelf (two tiers), two side cabinets with adjustable shelves
- **Special Features:** Adjustable shelves, 4 cable management holes, sturdy 3.5" one-piece plinth base
- **Assembly Required:** Yes (Recommended for two adults, 60 minutes or less)

WARRANTY AND SUPPORT

OKD provides professional customer service and support for any questions or concerns regarding your product. Please refer to your purchase documentation for specific warranty details. For assistance, contact OKD customer service directly. **Contact Information:** Please visit the official OKD website or refer to your purchase receipt for the most current customer service contact details.

PRODUCT VIDEOS

OKD Modern 70" TV Stand Overview

Your browser does not support the video tag.

Video Description: This video provides a comprehensive overview of the OKD Modern 70-inch TV Stand, highlighting its design, features, and storage capabilities. It showcases the product in various settings and demonstrates its functionality.

