

6 Liter 2400W Multifunction Touch Screen Air Fryer

Generic Silver Crest 6 Liter 2400W Multifunction Touch Screen Air Fryer Instruction Manual

Model: 6 Liter 2400W Multifunction Touch Screen Air Fryer

1. INTRODUCTION

Thank you for purchasing the Generic Silver Crest 6 Liter 2400W Multifunction Touch Screen Air Fryer. This appliance is designed to cook a variety of foods using rapid hot air circulation, offering a healthier alternative to traditional deep frying. Please read this manual thoroughly before use to ensure safe and efficient operation.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons.

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

- Ensure the appliance is placed on a stable, heat-resistant surface.
- Do not block any ventilation openings.

3. PRODUCT COMPONENTS

Familiarize yourself with the parts of your air fryer:

- Main Unit (housing)
- Removable Frying Basket
- Removable Crisper Plate/Rack
- Touch Screen Control Panel
- Handle
- Air Outlet Vent (rear)



Image: Front view of the air fryer, highlighting the touch screen control panel and the overall design. The display shows "8.8.8.8" and various cooking presets.



Image: The air fryer with its cooking basket partially removed, showing cooked french fries inside. This illustrates the removable basket design.

4. SETUP AND FIRST USE

1. **Unpacking:** Carefully remove all packaging materials and promotional labels from the air fryer.
2. **Cleaning:** Wash the frying basket and crisper plate with hot water, dish soap, and a non-abrasive sponge. Rinse thoroughly and dry completely. Wipe the inside and outside of the main unit with a damp cloth.
3. **Placement:** Place the air fryer on a stable, level, and heat-resistant surface. Ensure there is at least 10 cm (4 inches) of free space around the back and sides of the appliance for proper ventilation.
4. **Pre-heating (Initial Run):** For the first use, it is recommended to run the air fryer empty for about 10-15 minutes at 180°C (350°F) to eliminate any manufacturing odors. A slight smell or smoke may occur, which is normal. Ensure the area is well-ventilated.

5. OPERATING INSTRUCTIONS

5.1 General Operation

1. Place the crisper plate into the frying basket.
2. Place the food items into the frying basket. Do not overfill the basket to allow for proper air circulation.

3. Slide the frying basket back into the main unit until it clicks into place.
4. Plug the power cord into a grounded wall outlet.
5. The touch screen display will illuminate.

5.2 Using the Touch Screen Control Panel

The air fryer features a multifunction touch screen for easy control of cooking settings.

- **Power Button:** Press to turn the appliance on/off or to start/pause cooking.
- **Temperature Control:** Use the temperature icons (often +/- or up/down arrows) to adjust the cooking temperature. The range is typically between 80°C and 200°C (175°F - 400°F).
- **Timer Control:** Use the timer icons (often +/- or up/down arrows) to set the cooking time. The timer can usually be set up to 60 minutes.
- **Preset Functions:** The control panel may include preset icons for common foods like "Chips," "Meat," "Pizza," "Nut," and "Warm." Select a preset for automatic temperature and time settings, which can then be adjusted manually if needed.

5.3 Cooking Process

1. Select your desired cooking temperature and time using the touch controls or a preset.
2. Press the Power/Start button to begin cooking. The fan and heating element will activate.
3. During cooking, you may pull out the basket to shake or flip food for even cooking. The air fryer will automatically pause and resume when the basket is reinserted.
4. Once the timer reaches zero, the air fryer will beep, indicating cooking is complete.
5. Carefully pull out the basket and transfer the cooked food to a serving plate. Use heat-resistant tongs.
6. Unplug the appliance after use.



Image: The air fryer in operation, with its basket containing cooked chicken pieces, positioned on a table alongside other prepared dishes. This demonstrates the appliance's use in a meal preparation setting.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your air fryer.

1. **Before Cleaning:** Always unplug the air fryer and allow it to cool down completely before cleaning.
2. **Basket and Crisper Plate:** These parts are typically dishwasher safe, but hand washing with hot water, dish soap, and a non-abrasive sponge is recommended to preserve the non-stick coating. Do not use metal utensils or abrasive cleaning materials.
3. **Main Unit:** Wipe the exterior of the air fryer with a damp cloth. Do not immerse the main unit in water or any other liquid.
4. **Heating Element:** Use a cleaning brush to remove any food residue from the heating element inside the appliance.
5. **Storage:** Ensure all parts are clean and dry before storing the air fryer in a cool, dry place.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Air fryer does not turn on.	Not plugged in; power outlet malfunction; basket not fully inserted.	Check power cord connection; try a different outlet; ensure basket is securely closed.
Food is not cooked evenly.	Basket is overfilled; food not shaken/flipped.	Cook in smaller batches; shake or flip food halfway through cooking.
White smoke coming from the appliance.	Grease residue from previous use; high-fat food being cooked.	Clean the basket and crisper plate thoroughly; remove excess oil from food before air frying.
Food is not crispy.	Too much moisture in food; not enough oil (for certain foods); temperature too low.	Pat food dry before cooking; lightly brush with oil if desired; increase temperature or cooking time.

8. SPECIFICATIONS

- **Model:** 6 Liter 2400W Multifunction Touch Screen Air Fryer
- **Brand:** Generic (often marketed as Silver Crest)
- **Capacity:** 6 Liters
- **Power:** 2400W (Note: Some product listings may indicate 1400W. Please refer to your product's specific label.)
- **Material:** Polypropylene (PP)
- **Control Method:** Touch Screen
- **Special Features:** Temperature Control
- **Product Dimensions (approx.):** 35 cm (D) x 35 cm (W) x 35 cm (H)
- **Item Weight (approx.):** 350 g

Product Size Specification



Note: Please allow 1-2cm manual measurement error.

Image: A technical diagram illustrating the dimensions of the air fryer unit, its basket, and the crisper plate. Measurements are provided in centimeters and inches.

9. WARRANTY AND SUPPORT

As this product is listed under a "Generic" brand, specific warranty information may vary. Please refer to your purchase receipt or contact the retailer directly for details regarding warranty coverage and customer support.

For any operational issues or questions not covered in this manual, please consult the point of purchase or the seller for assistance.