

[Manuals.plus](#) /

› [Catstages](#) /

› Catstages Roll & Chase Robot Toy Instruction Manual

Catstages 72059

Catstages Roll & Chase Robot Toy Instruction Manual

MODEL: 72059

Brand: Catstages

INTRODUCTION

The Catstages Roll & Chase Robot Toy is an interactive electronic toy designed to engage your cat's natural hunting instincts. Featuring erratic rolling motion, sudden stops, LED lights, and a feather teaser tail, this toy provides mental stimulation and active play for indoor cats. It is USB rechargeable, eliminating the need for disposable batteries.



Image: The Catstages Roll & Chase Robot Toy, a blue and purple spherical robot with a long, fluffy yellow-green feather tail attached.

SAFETY INFORMATION

Please read and adhere to all safety warnings to ensure the well-being of your pet.

- **For cats only.** Not recommended for kittens under 12 weeks of age.
- Keep out of reach of children. Contains small parts.
- When choosing a toy, ensure it is the appropriate size for your cat.
- No toy is indestructible. Your pet's safety is your responsibility.
- **ALWAYS supervise your cat** when using any toy.
- Inspect toys regularly for damage. Remove and discontinue use if broken or if parts become separated, as serious injury may result.

PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x Catstages Roll & Chase Robot Toy
- 1 x Feather Teaser Tail (pre-attached or attachable)
- 1 x USB Charging Cable

SETUP

1. Charging the Toy

The Catstages Roll & Chase Robot Toy is equipped with a non-replaceable lithium-ion rechargeable battery. Before first use, or when the toy's movement becomes sluggish, charge the device using the included USB cable.

1. Locate the charging port on the toy.
2. Connect the small end of the USB charging cable to the toy's port.
3. Connect the larger end of the USB cable to a standard USB power adapter (not included) or a computer's USB port.
4. Allow the toy to charge fully. Charging time may vary, but typically takes approximately one hour. The LED lights on the toy may indicate charging status (refer to visual cues on the toy if available).



Image: A hand holding the Catstages Roll & Chase Robot Toy, which is lit up with green LEDs, next to a USB charging cable. This illustrates the toy's rechargeable nature.

2. Attaching the Feather Tail

Ensure the feather teaser tail is securely attached to the toy before use. If it becomes detached, re-attach it firmly to the designated slot on the robot toy.

OPERATING INSTRUCTIONS

Activating the Toy

To activate the Catstages Roll & Chase Robot Toy:

1. Press the power button located on the toy. The lights on the toy will flash briefly.
2. Roll the toy on a flat surface to initiate its movement. The toy is designed to activate upon being rolled after the power button is pressed.

Play Cycle

Once activated, the toy will:

- Roll erratically, stop suddenly, and change directions to mimic prey.
- Illuminate with LED lights during movement.
- Operate for approximately 3 minutes, then pause.
- After a pause, it will automatically resume rolling to re-engage your cat.

The Ultimate Chase

Rolls, stops, switches directions, rolls again.



Image: An orange cat intently watching the Catstages Roll & Chase Robot Toy as it moves across a wooden floor, illustrating its erratic motion.

Optimal Play Surface

For best performance, use the toy on hard, smooth surfaces such as wood, tile, or linoleum. The toy's movement may be limited or ineffective on thick carpets or rugs.

MAINTENANCE

Cleaning

To clean the toy, wipe it with a damp cloth. Do not submerge the toy in water. Ensure the charging port is dry before charging.

Feather Tail Replacement

The feather teaser tail is designed to be replaceable. If the feather tail becomes worn or damaged, replacement tails are available for purchase separately to ensure continued engagement and play.

Feathers? Say Less.

Satisfies their wild side—no birds required.



Image: An orange cat batting at the feather tail of the Catstages Roll & Chase Robot Toy on a wooden floor, highlighting the feather's role in attracting play.

TROUBLESHOOTING

- **Toy does not move after pressing the button:** Ensure the toy is fully charged. After pressing the power button, the toy requires a slight roll or push to initiate its erratic movement.
- **Toy moves slowly or gets stuck:** The toy performs best on hard, flat surfaces. It may struggle on thick carpets, rugs, or uneven terrain. Clear any obstacles in the play area.
- **Feather tail is damaged:** The feather tail is a consumable part designed to attract play. If it becomes too damaged, replacement tails are available for purchase separately.

- **Toy makes unexpected noises or movements:** If the toy exhibits unusual behavior, turn it off, inspect for damage, and ensure no foreign objects are interfering with its mechanism. If issues persist, discontinue use.

SPECIFICATIONS

Feature	Detail
Model Number	72059
Item Weight	0.13 Pounds (2.08 ounces)
Product Dimensions (LxWxH)	7.86 x 3.15 x 3.15 inches
Material	Plastic
Power Source	USB Rechargeable (Lithium-ion battery)
Target Audience	Cats (All Life Stages, All Breed Sizes)

Paw-Sized Fun

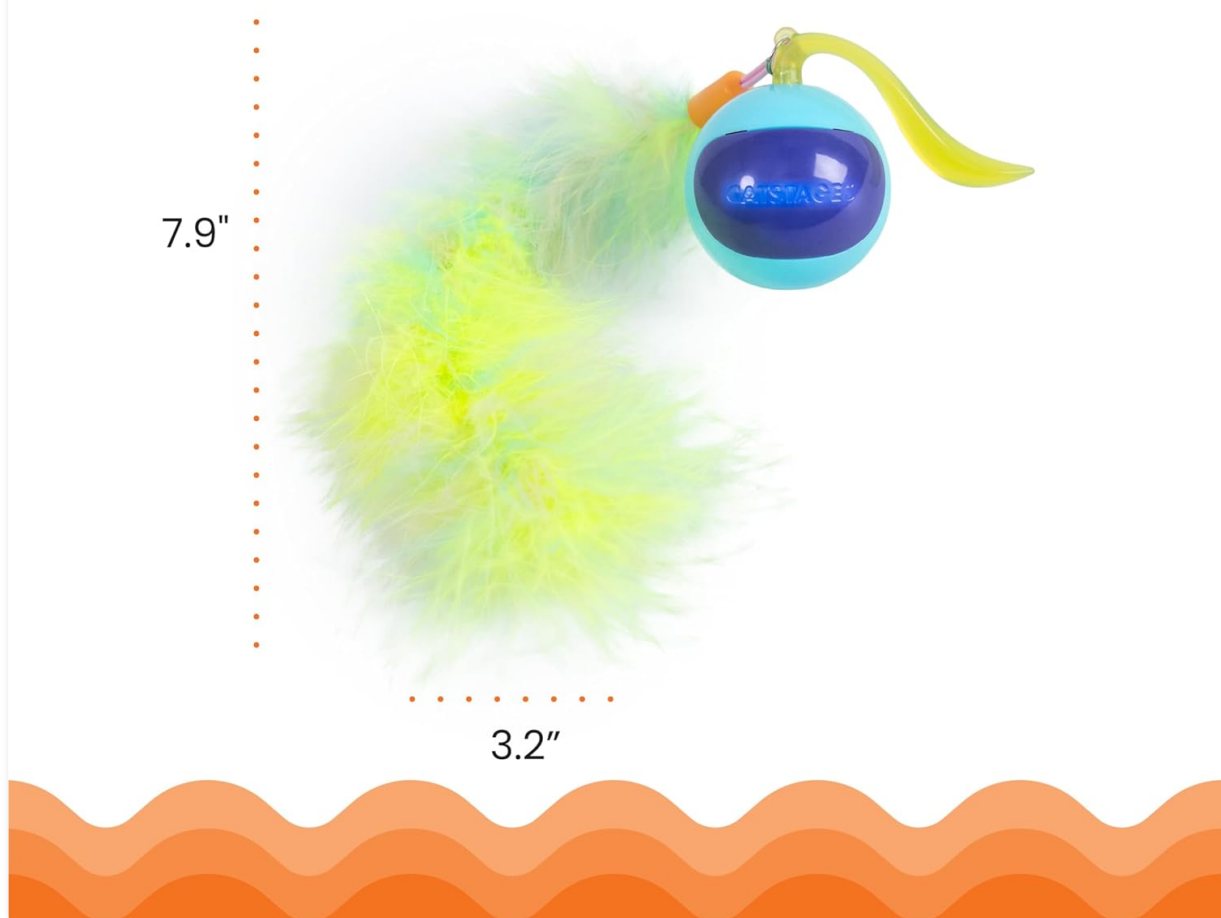


Image: The Catstages Roll & Chase Robot Toy shown with its approximate dimensions: 7.9 inches in length and 3.2 inches in width, indicating its paw-sized design.

WARRANTY AND SUPPORT

Specific warranty information for the Catstages Roll & Chase Robot Toy is not provided within this manual. For details regarding warranty coverage, product support, or to purchase replacement parts, please refer to the official Catstages website or contact their customer service directly.

© 2025 Catstages. All rights reserved.