

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [KIBTOY](#) /

› [KIBTOY Battery Operated Wall Sconces \(Model 360-CX04\) Instruction Manual](#)

KIBTOY 360-CX04

KIBTOY Battery Operated Wall Sconces

MODEL: 360-CX04

Introduction

Thank you for choosing the KIBTOY Battery Operated Wall Sconces. These wireless wall lights are designed to provide versatile and convenient lighting for various spaces in your home. Featuring a 10,000mAh rechargeable battery, multiple color options including 9 RGB colors and 4 white light temperatures, and remote control functionality, these sconces offer an elegant lighting solution without the need for complex wiring.

This manual provides essential information for the safe and efficient use of your new wall sconces. Please read it thoroughly before installation and operation, and retain it for future reference.

Safety Information

- **Battery Safety:** Do not expose the battery to extreme temperatures, direct sunlight, or fire. Do not disassemble, puncture, or modify the battery. Use only the provided USB-C cable for charging.
- **Installation:** Ensure the mounting surface is clean, dry, and capable of supporting the weight of the sconce. Avoid installing near heat sources or in excessively humid environments.
- **Cleaning:** Disconnect the light bulb before cleaning. Use a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Children:** Keep the remote control and small parts out of reach of children to prevent choking hazards.

Package Contents

Verify that all items are present in your package:

- Wall Sconce Unit (including lampshade, metal base, and rod)
- Rechargeable Magnetic LED Bulb (10,000mAh)
- Remote Control
- USB-C Charging Cable
- Mounting Hardware (screws, anchors, mounting bracket)
- User Manual

Setup and Installation

The KIBTOY Wall Sconces are designed for easy, wireless installation, requiring no electrical wiring.

1. Assemble the Sconce:



Image: An assembled KIBTOY wall sconce with its magnetic bulb and remote control shown separately.

- Carefully unpack all components.
- Attach the lampshade to the sconce arm.
- Insert the magnetic LED bulb into the lampshade. The bulb will securely attach to the magnetic base.

2. Mount the Sconce:



Image: A diagram illustrating the simple installation process, highlighting no need for complex wiring or electrical outlets.

- Choose a desired location on your wall.
- Use the provided mounting bracket as a template to mark the screw positions.
- Drill pilot holes and insert wall anchors if necessary.
- Secure the mounting bracket to the wall using the screws.
- Attach the sconce's base to the mounted bracket.

Your browser does not support the video tag.

Video: An official KIBTOY video demonstrating the installation steps for the wall sconce, including attaching the lampshade, inserting the magnetic bulb, and mounting the unit to the wall.

Operating Instructions

Your KIBTOY Wall Sconce can be operated using the included remote control or the button on the magnetic bulb.

Remote Control Functions:

OURS



VS

OTHE



360° illumination

10000mah

300lm

**Running for
20-80H(Max-Min)**

**Magnetic Bulb
Easy for Charging**

Lighting Angle

Battery Capacity

Brightness (lumens)

Lighting Time

Upgrade Design

**Only illuminate
the upper part**

2000mah

200lm

Only 8-20H

**Screw Bulb, More
Complicated**

Image: A visual guide to the remote control and the manual button on the bulb, detailing their respective functions.

- **ON/OFF:** Press the green 'ON' button to turn on, red 'OFF' button to turn off.
- **Brightness Adjustment:** Use the sun icon buttons (up/down) to increase or decrease brightness. There are 4 brightness levels (15%, 50%, 75%, 100%).
- **Color Temperature:** Select from 4 white light temperatures: 1800K (Warm Light), 3000K, 4000K, 6000K (Cold Light).
- **RGB Colors:** Choose from 9 vibrant RGB colors using the dedicated color buttons.
- **Timer Function:** Set the light to automatically turn off after 30, 60, or 120 minutes using the timer buttons.



Image: The magnetic bulb highlighting its timing function, with options for 30, 60, and 120 minutes.

- **Memory Function:** The sconce automatically remembers your last color and brightness settings when powered off and on again.

Bulb Button Control:

- **Single Click:** Turns the light ON/OFF.
- **Double Click:** Switches between different light functions (e.g., color temperatures, RGB modes).
- **Long Press:** Activates stepless dimming for static colors.

Your browser does not support the video tag.

Video: An official KIBTOY video demonstrating the remote control features, including brightness adjustment, color temperature changes, and cycling through 9 RGB colors.

Charging Instructions

The KIBTOY Wall Sconce features a 10,000mAh rechargeable magnetic bulb for extended use.

- **Easy Removal:** The magnetic bulb detaches easily from the sconce for convenient charging. No need to unscrew or remove the entire fixture.

- **USB-C Charging:** Connect the provided USB-C charging cable to the port on the bulb and to a compatible USB power adapter (not included).
- **Charging Time:** A full charge typically takes 4-5 hours.
- **Battery Life:** Enjoy up to 24 hours of illumination on maximum brightness or up to 80 hours on the lowest setting.



Image: The sconce with its dimensions, and a close-up of the magnetic bulb being charged via its USB-C port.

Maintenance

- **Cleaning:** To clean the sconce, gently wipe the surfaces with a soft, dry cloth. For the lampshade, a lint roller or soft brush can be used to remove dust. Ensure the bulb is removed or turned off before cleaning.
- **Battery Care:** For optimal battery longevity, avoid completely draining the battery frequently. Recharge the bulb when the light output noticeably diminishes.
- **Storage:** If storing the sconce for an extended period, ensure the battery is partially charged (around 50%) and store in a cool, dry place.

Troubleshooting

Problem	Possible Cause	Solution
Light does not turn on.	Battery is depleted.	Charge the magnetic bulb using the USB-C cable.
Light is dim or flashing.	Low battery.	Recharge the magnetic bulb.
Remote control not working.	Remote battery is depleted or line of sight is blocked.	Replace the remote control battery. Ensure direct line of sight to the bulb.
Bulb not charging.	Faulty cable or power adapter.	Try a different USB-C cable or power adapter. Ensure the cable is fully inserted.
Magnetic bulb detaches easily.	Improper seating or external force.	Ensure the bulb is properly seated on the magnetic base. Avoid bumping the sconce.

Specifications

- **Brand:** KIBTOY
- **Model Number:** 360-CX04
- **Material:** Metal
- **Light Fixture Form:** Sconce
- **Room Type:** Bedroom, Dining Room, Entryway, Living Room
- **Number of Light Sources:** 1
- **Item Weight:** 2.4 pounds (1.09 Kilograms)
- **Product Dimensions:** 16.54 x 12.6 x 22.64 inches
- **Battery:** 10,000mAh Lithium Ion (included)
- **Charging:** USB-C
- **Color Temperatures:** 1800K, 3000K, 4000K, 6000K
- **RGB Colors:** 9 options
- **Brightness:** Up to 300 lumens, 4 levels dimmable
- **Runtime:** 24-80 hours (depending on brightness)
- **Assembly Required:** No (minimal assembly for installation)

Warranty and Support

KIBTOY is committed to customer satisfaction. If you encounter any issues with your product, please contact our customer service team. We typically assist customers with the following:

- Defective item replacements.
- Lights flashing or turning off during use.
- Missing parts.
- Battery damage or charging problems.
- Installation guidance.

For support, please submit your order number to service01@kibtoy.com.

