



Manuals.plus /

› Ninja /

› Ninja Foodi 6.5 qt Everyday PossibleCooker (MC1100) Instruction Manual

Ninja MC1100

Ninja Foodi 6.5 qt Everyday PossibleCooker (MC1100) Instruction Manual

Model: MC1100

INTRODUCTION

Welcome to the Ninja Foodi 6.5 qt Everyday PossibleCooker user manual. This appliance is designed to simplify your cooking experience with its versatile 6-in-1 functionality. Please read these instructions carefully before using your PossibleCooker to ensure safe and optimal performance.

KEY FEATURES AND FUNCTIONS

The Ninja Foodi Everyday PossibleCooker offers multiple cooking modes to handle a variety of recipes:

- **6-in-1 Versatility:** Slow cook, Sear/Saute, Keep Warm, White Rice, Brown Rice, and Pasta.
- **Replaces 10 Kitchen Tools:** Functions as a Slow Cooker, Food Warmer, Nonstick Pot, Saute Pan, Cast Iron Skillet, Saucier, Saucepan, Stock Pot, Rice Cooker, and Dutch Oven.
- **Easy, One-Pot Cooking:** Designed for preparing mains and grains together or separately in one compact system.
- **Family-Sized Capacity:** 6.5-quart capacity accommodates up to four 6-oz chicken breasts or a 7-lb roast, serving up to 6 people.
- **Faster Cooking:** Cooks rice 50% faster than traditional rice cookers.
- **Cooker to Oven to Table:** The oven-safe pot (up to 500°F) allows for transfer from the cooker base to the oven for finishing, and then directly to the table for serving.
- **Space-Saving Design:** Compact footprint for convenient countertop use.
- **Adjustable Temperature Control:** Allows for precise heat adjustments for searing or slow cooking.



White Rice



Brown Rice



Pasta



Keep Warm



Sear/Sauté



Slow Cooker

6-in-1 versatility

Endless possibilities all in one pot.
Slow cook, sear, sauté, and more.

Image: Overview of the 6-in-1 versatility of the Ninja Foodi PossibleCooker, illustrating various cooking modes.



REPLACES

10
cooking
appliances

Rice Cooker

Food Warmer

Nonstick Pot

Sauté Pan

Cast Iron Skillet

Slow Cooker

Saucier

Sauce Pan

Stock Pot

Dutch Oven

Image: The Ninja Foodi PossibleCooker replaces 10 common kitchen appliances, reducing countertop clutter.

SETUP

- Unpack:** Carefully remove all components from the packaging. Ensure all parts are present: cooker base, cooking pot, glass lid, and rice spoon.
- Clean:** Before first use, wash the cooking pot, glass lid, and rice spoon in warm, soapy water. Rinse thoroughly and dry completely. The cooking pot, lid, and rice spoon are dishwasher safe.
- Placement:** Place the cooker base on a clean, dry, level, and heat-resistant surface. Ensure there is adequate space around the appliance for ventilation.
- Insert Pot:** Place the cooking pot securely into the cooker base.
- Power:** Plug the power cord into a grounded electrical outlet. The display will illuminate.



Perfectly cooked mains and grains

From slow-cooked meats and one-pot wonders, to fluffy rice and perfectly cooked pasta, the possibilities are endless.

Image: The Ninja Foodi PossibleCooker ready for use on a kitchen counter, demonstrating its compact design.

OPERATING INSTRUCTIONS

Follow these steps to operate your Ninja Foodi PossibleCooker:

1. **Add Ingredients:** Place your desired ingredients into the cooking pot.
2. **Select Function:** Use the control knob to select your desired cooking function (e.g., SLOW COOK, SEAR/SAUTE, STEAM, KEEP WARM, SOUS VIDE, BRAISE, BAKE, PROOF).
3. **Adjust Settings:**
 - o For **Slow Cook**, select HIGH or LOW temperature using the TEMP buttons.
 - o For **Sear/Saute**, adjust temperature as needed.
 - o For other functions, adjust temperature and time according to your recipe.
4. **Set Time:** Use the TIME buttons to set the desired cooking duration.
5. **Start Cooking:** Press the START/STOP button to begin the cooking process.
6. **Monitoring:** The clear glass lid allows you to monitor cooking progress without releasing heat.

7. **Keep Warm:** After cooking, the unit may automatically switch to a Keep Warm setting, if applicable to the selected function.
8. **Finish in Oven:** If your recipe requires a crispy finish, carefully remove the cooking pot from the base using oven mitts and transfer it to a preheated oven (up to 500°F).

Your browser does not support the video tag.

Video: An overview of the Ninja Foodi 6.5 qt Everyday PossibleCooker, demonstrating its features and ease of use.



Cooker to oven to table

Oven safe up to 500°F, the inner pot can be transferred to the oven for a crispy finish.

Image: Demonstrating easy one-pot cooking by adding ingredients directly into the cooker.



Easy, fast one-pot cooking

Cook full meals 30% faster than traditional cooking.
Just toss in your ingredients, set it, and forget it.

Image: The oven-safe cooking pot being transferred to an oven for a crispy finish.

CLEANING AND MAINTENANCE

Proper cleaning ensures the longevity and performance of your PossibleCooker:

- **Unplug:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
- **Cooking Pot, Lid, and Rice Spoon:** These components are dishwasher safe. For hand washing, use warm, soapy water and a non-abrasive sponge or cloth. Rinse thoroughly and dry completely.
- **Cooker Base:** Wipe the exterior of the cooker base with a clean, damp cloth. Do NOT immerse the cooker base in water or any other liquid.
- **Storage:** Store the cleaned and dried PossibleCooker in a cool, dry place.



Easy to clean

Cleanup is a breeze with a dishwasher-safe cooking pot, lid, and rice spoon.

Image: The cooking pot, lid, and rice spoon are dishwasher safe for easy cleanup.

TROUBLESHOOTING

If you encounter any issues, refer to the following common troubleshooting tips:

- **Appliance not turning on:** Ensure the power cord is securely plugged into a working electrical outlet. Check if the outlet is receiving power.
- **Food not cooking evenly:** Stir ingredients periodically, especially during longer cooking cycles. Ensure the cooking pot is properly seated in the base.
- **Food sticking to the pot:** Although the pot is non-stick, using a small amount of cooking oil or spray can further prevent sticking, especially for certain ingredients. Ensure the pot is clean and free of residue before use.
- **Error message on display:** Unplug the unit, wait a few minutes, and then plug it back in. If the error persists, consult Ninja customer support.

SPECIFICATIONS

Attribute	Detail
Brand	Ninja
Model Number	MC1100
Capacity	6.5 Quarts
Color	White / Stainless Steel
Material	Cast Iron, Glass, Stainless Steel
Product Dimensions	12"D x 16"W x 12"H
Wattage	1400 watts
Voltage	120 Volts
Item Weight	10 Pounds
Dishwasher Safe	No (Base), Yes (Pot, Lid, Spoon)
Control Method	Touch
Number of Settings	8

WARRANTY AND SUPPORT

For warranty information, product registration, or customer support, please visit the official Ninja website or refer to the warranty card included with your product.

You can also find recipe inspiration and community support by visiting Ninja Foodi Family on Facebook or EPNinjaKitchen on YouTube.