

[manuals.plus](#) /› [HIFI WALKER](#) /› [HIFI WALKER H2 Touch 128GB Hi-Res Portable Music Player User Manual](#)

HIFI WALKER H2 Touch

HIFI WALKER H2 Touch 128GB Hi-Res Portable Music Player User Manual

MODEL: H2 Touch

Brand: HIFI WALKER

1. Introduction

The HIFI WALKER H2 Touch is a high-fidelity portable music player designed to deliver studio-quality sound. Featuring an ESS9219Q DAC chip, it supports a wide range of Hi-Res audio formats, including FLAC, APE, WAV, ALAC, AIFF, and native DSD64/128. With Bluetooth 5.2 and aptX HD support, you can enjoy high-resolution wireless streaming. The intuitive touchscreen and physical buttons provide convenient control, while the durable zinc alloy body ensures portability and a premium feel. It comes with 128GB of expandable storage and offers versatile functions beyond music playback, such as voice recording and e-book reading.

2. Package Contents

Please check the box for the following items:

- HIFI WALKER H2 Touch Portable Music Player
- USB-C Charging/Data Cable
- User Manual
- 128GB MicroSD Card (pre-installed)
- Protective Pouch



USB-DAC High-Fidelity Decoding

Connecting via USB-DAC mode lets you enjoy music stored on your PC directly on the device without transferring it, ensuring the same high-quality audio experience.

Image: The HIFI WALKER H2 Touch player, USB cable, user manual, and protective pouch are shown laid out on a surface.

3. Device Layout and Controls

The H2 Touch features a 2.4-inch HD touchscreen for intuitive navigation, complemented by physical buttons for convenient control of playback and settings.

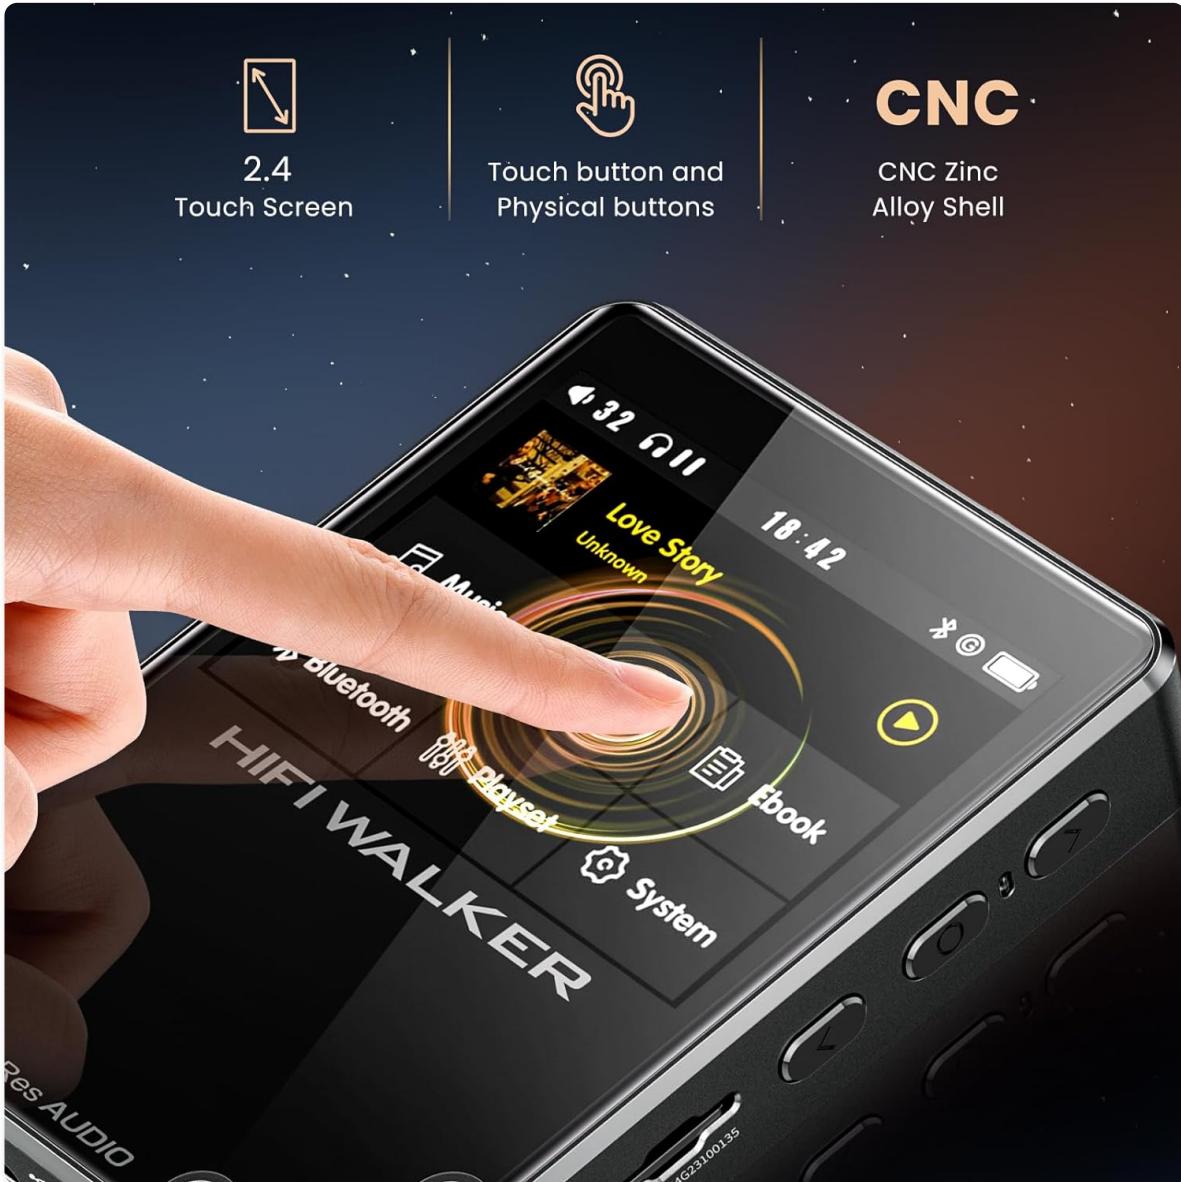


Image: Close-up of the HIFI WALKER H2 Touch highlighting its 2.4-inch HD touchscreen and the tactile physical buttons on the side for navigation and control.

The device includes various ports for connectivity and audio output:

- **3.5mm Single End:** Standard headphone jack for wired listening.
- **Type-C SPDIF:** USB-C port for charging, data transfer, and digital audio output.
- **Line Out (LO):** Dedicated output for connecting to external amplifiers or audio systems.
- **MicroSD Card Slot:** For expanding storage capacity.



Image: Detailed view of the bottom edge of the HIFI WALKER H2 Touch, illustrating the 3.5mm single-end headphone jack, Type-C SPDIF port, and Line Out (LO) port.

Video: A short demonstration showcasing the premium metal build and finish of the HIFI WALKER H2 Touch, highlighting its sleek design and tactile controls.

4. Setup

4.1. Charging the Device

Connect the H2 Touch to a power source using the provided USB-C cable. The device supports fast charging and has a 1500mAh battery, offering over 10 hours of playback time.

4.2. MicroSD Card Installation

The device comes with a 128GB microSD card pre-installed. You can expand the storage up to 512GB by replacing the card in the dedicated microSD card slot. Ensure the device is powered off before inserting or removing the microSD card.

Expandable Storage Up to 512GB

Built-in Micro SD card Slot allows you to expand storage at will



Image: The HIFI WALKER H2 Touch displaying its expandable storage capability, showing a microSD card being inserted into the slot, supporting up to 512GB.

5. Operating Instructions

5.1. Power On/Off

Press and hold the Power button on the side of the device to turn it on or off. A short press will toggle the screen on/off or lock/unlock the device.

5.2. Music Playback

Navigate through your music library using the touchscreen or physical buttons. The device supports various Hi-Res formats for authentic studio-quality sound.

5.3. Bluetooth Pairing

The H2 Touch features Bluetooth 5.2 with aptX HD for high-resolution wireless audio. To pair with a Bluetooth device:

1. Go to 'System Settings' on your player.

2. Select 'Bluetooth Settings'.
3. Choose 'Bluetooth Scan' to search for available devices.
4. Select your desired Bluetooth device from the list to pair.

Video: A demonstration of UI navigation and Bluetooth pairing process on a similar HIFI WALKER device (Surfans F20), illustrating how to access settings, scan for Bluetooth devices, and connect for wireless audio playback.

5.4. USB-DAC Mode

Connect the H2 Touch to your computer via the USB-C port to use it as an external DAC, enhancing your computer's audio output quality.

5.5. Voice Recording

Utilize the built-in DMIC to record studio-grade voice memos at 48kHz.

5.6. E-book Reading

The device supports e-book reading, allowing you to enjoy your favorite books with background music.

5.7. Equalizer Settings

Customize your audio experience with various custom EQ modes (Rock, Jazz, Pop, etc.) to tailor the sound to your preference.



Image: The HIFI WALKER H2 Touch displaying its custom equalizer modes, allowing users to select from various presets like Pop, Blues, Classic, and Rock to personalize their listening experience.

6. Media Management

To transfer music and other files to your H2 Touch, connect it to your computer using the USB-C cable. The device will appear as a removable storage device, allowing you to drag and drop files directly to the internal storage or the microSD card.

7. Maintenance

To ensure the longevity and optimal performance of your HIFI WALKER H2 Touch:

- Keep the device clean by wiping it with a soft, dry cloth.
- Avoid exposing the device to extreme temperatures, moisture, or direct sunlight.
- Store the device in its protective pouch when not in use to prevent scratches.
- Do not attempt to disassemble or repair the device yourself, as this will void the warranty.

8. Troubleshooting

If you encounter any issues with your HIFI WALKER H2 Touch, please refer to the following common solutions:

- **Device not powering on:** Ensure the battery is charged. Connect to a power source and try again.
- **No sound:** Check headphone connections, adjust volume levels, and ensure the correct output mode is selected.
- **Bluetooth connection issues:** Ensure Bluetooth is enabled on both devices and they are within range. Try unpairing and re-pairing the device.
- **MicroSD card not recognized:** Ensure the card is properly inserted. Try reformatting the card (this will erase all data).
- **Device unresponsive:** Perform a soft reset by pressing and holding the Power button for an extended period (e.g., 10-15 seconds).

If the problem persists, please contact customer support.

9. Specifications

Feature	Specification
---------	---------------

Brand	HIFI WALKER
Model Name	H2
Connectivity Technology	Bluetooth, USB
Memory Storage Capacity	128 GB (expandable up to 512 GB)
Color	Black
Screen Size	2.4 Inches
Compatible Devices	Laptop, Headphone, Personal Computer, Earphone
Media Type	Micro SD, SD Card
Display Technology	OLED
Supported Standards	MP3, AAC, FLAC, WAV, WMA, OGG, ALAC, AIFF, DSD64/128
DAC Chip	ESS9219Q
Battery Life	Over 10 hours
Item Weight	10.5 ounces
Package Dimensions	5.98 x 3.86 x 2.24 inches

10. Warranty and Support

For warranty information, technical support, or any inquiries regarding your HIFI WALKER H2 Touch, please refer to the official HIFI WALKER website or contact their customer service directly. Keep your purchase receipt as proof of purchase for warranty claims.