

[manuals.plus](#) /

› [Fame](#) /

› [Fame MMS-4 Bluetooth Active Studio Monitors User Manual](#)

Fame MMS-4

Fame MMS-4 Bluetooth Active Studio Monitors User Manual

Model: MMS-4

1. INTRODUCTION

Thank you for choosing the Fame MMS-4 Bluetooth Active Studio Monitors. This manual provides essential information for the safe and efficient operation of your new studio monitors. Please read this manual thoroughly before use and retain it for future reference.

2. SAFETY INSTRUCTIONS

- **Power Source:** Connect the unit only to the specified power supply voltage. Ensure the power cable is not damaged.
- **Ventilation:** Do not block ventilation openings. Ensure adequate airflow around the speakers to prevent overheating.
- **Moisture:** Do not expose the unit to rain or moisture. Do not place objects filled with liquids, such as vases, on the unit.
- **Heat:** Keep the unit away from heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- **Cleaning:** Clean only with a dry cloth. Do not use liquid cleaners or aerosols.
- **Servicing:** Do not attempt to service this product yourself. Refer all servicing to qualified service personnel.
- **Placement:** Place the speakers on a stable, level surface to prevent them from falling.
- **Hearing Protection:** Avoid prolonged exposure to high volume levels, which can cause permanent hearing damage.

3. PACKAGE CONTENTS

Please check that all items listed below are included in your package:

- 1x Fame MMS-4 Active Studio Monitor (Master)

- 1x Fame MMS-4 Passive Studio Monitor (Slave)
- 1x Speaker Connection Cable
- 1x Power Cable
- 1x User Manual

4. PRODUCT OVERVIEW

4.1 Front View



Image 1: Front view of the Fame MMS-4 studio monitors with protective grilles installed. Both speakers feature the 'FAME' logo at the bottom.



Image 2: Front view of the Fame MMS-4 studio monitors with grilles removed, revealing the tweeter and woofer components.

The front panel of the MMS-4 monitors features the speaker drivers (woofer and tweeter) and a removable protective grille. The active speaker also includes a small LED indicator for power and Bluetooth status.

4.2 Side Panel (Active Speaker)



Image 3: Side panel of the active Fame MMS-4 monitor, showing the control interface with USB port, volume, treble, bass knobs, and mode selection buttons.

The side panel of the active (master) speaker houses the main controls and additional connectivity options:

- **USB Port:** For playing audio files from a USB drive.
- **VOL (Volume) Knob:** Adjusts the overall output volume.
- **TRE (Treble) Knob:** Adjusts the high-frequency response.
- **BAS (Bass) Knob:** Adjusts the low-frequency response.

- **MODE Buttons:** Selects input source (Bluetooth, Line In, USB, Coaxial).

4.3 Rear Panel (Active Speaker)



Image 4: Rear panel of the active Fame MMS-4 monitor, displaying various input and output connections, power switch, and AC input.

The rear panel of the active speaker provides all necessary audio inputs and power connections:

- **INPUTS (RCA):** Stereo RCA inputs for connecting external audio devices.
- **COAXIAL Input:** Digital coaxial input.
- **OUTPUTS (Speaker):** Connects to the passive speaker.

- **AC INPUT:** Power cable connection (AC110-240V ~ 60Hz).
- **POWER Switch:** Turns the unit ON or OFF.

4.4 Rear Panel (Passive Speaker)

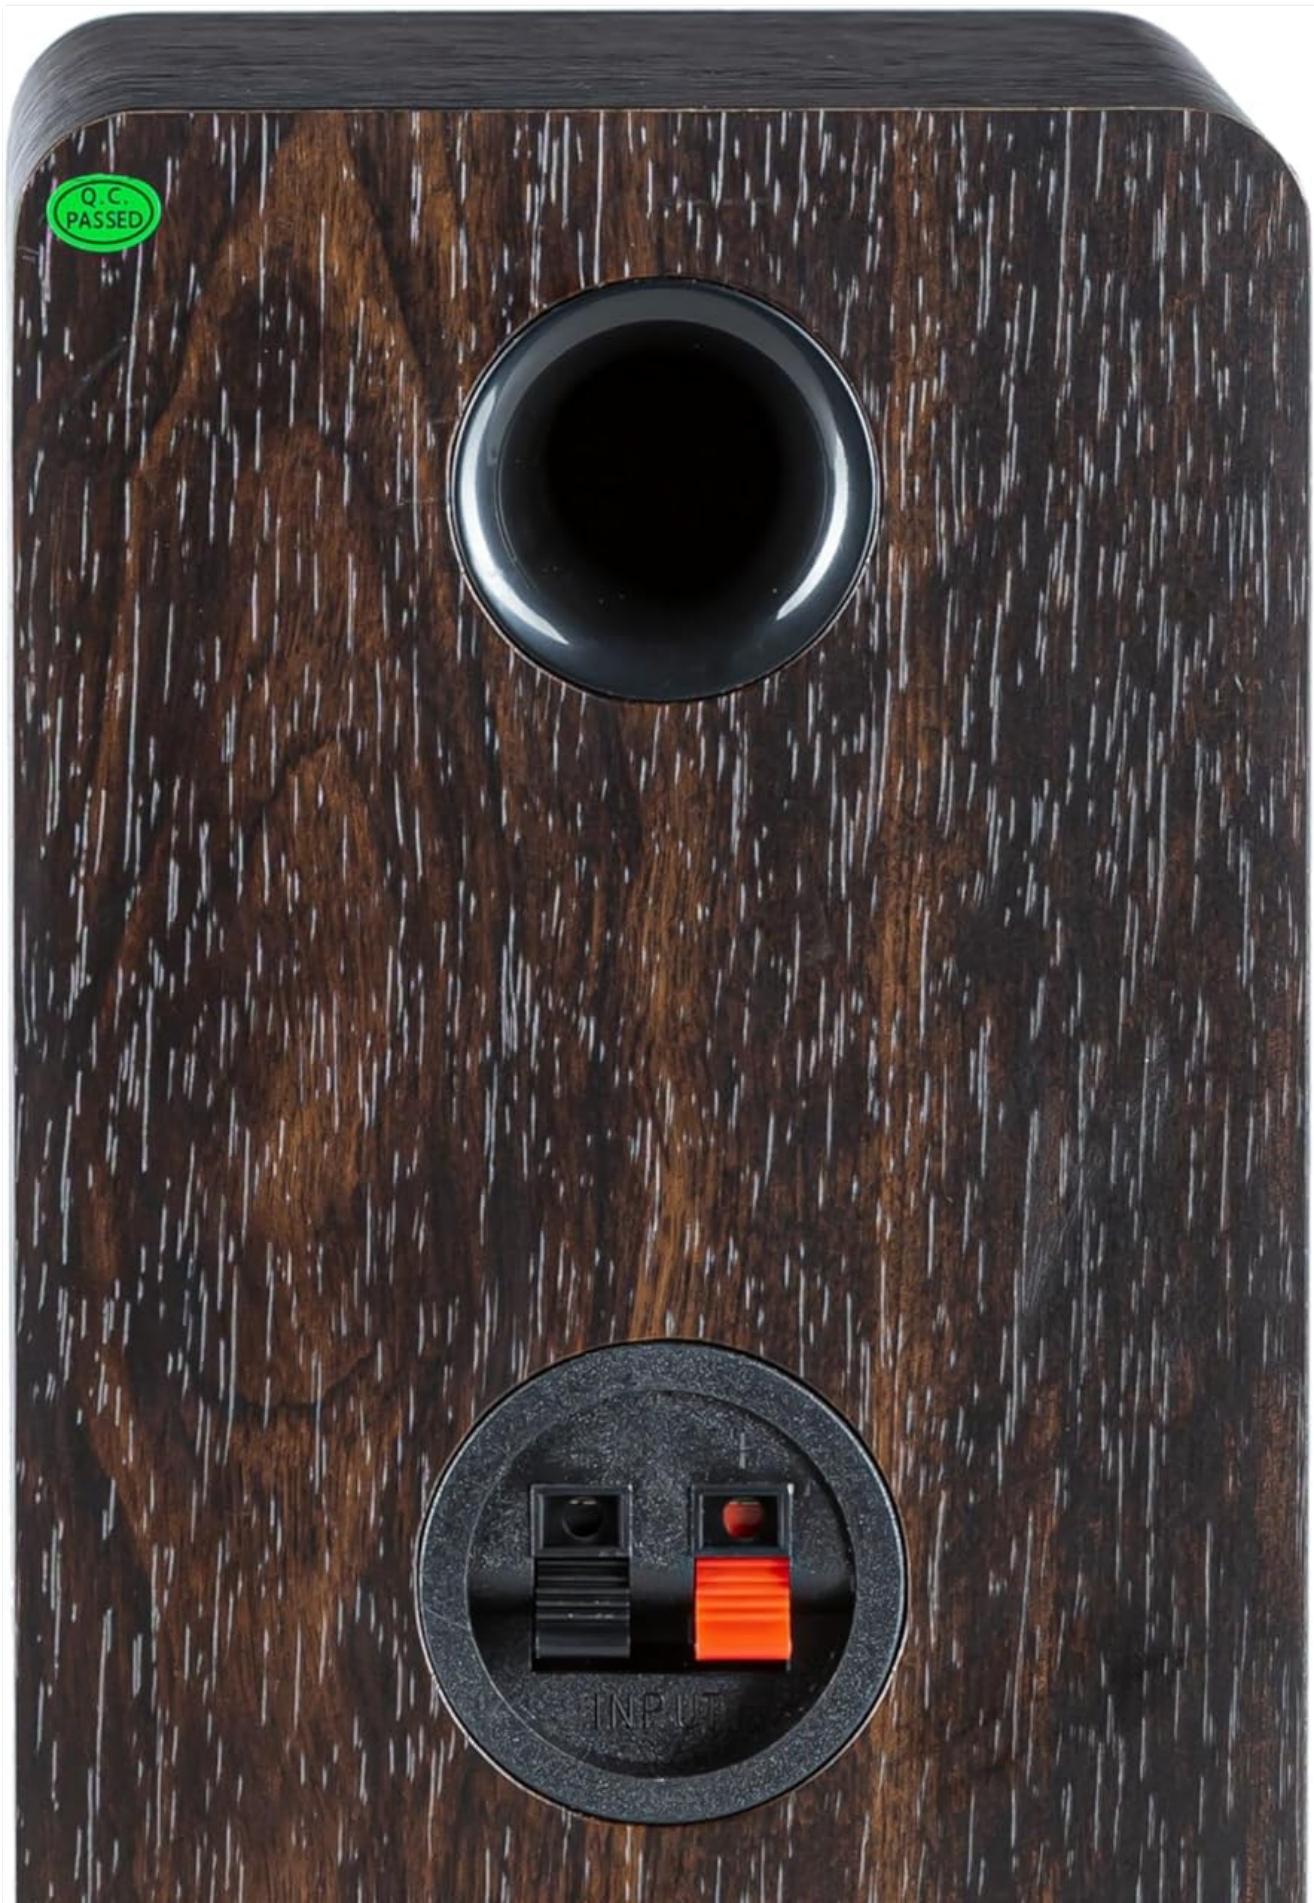




Image 5: Rear panel of the passive Fame MMS-4 monitor, showing the speaker input terminals for connection to the active speaker.

The passive speaker features speaker input terminals for connection to the active speaker using the provided speaker cable.

5. SETUP

- Placement:** Place the active and passive speakers on a stable surface, ideally at ear level, forming an equilateral triangle with your listening position for optimal stereo imaging.
- Connect Speakers:** Use the provided speaker cable to connect the "OUTPUTS (Speaker)" terminals on the active speaker to the "INPUT" terminals on the passive speaker. Ensure correct polarity (red to red, black to black).
- Connect Audio Source:**
 - RCA:** Connect your audio source (e.g., mixer, audio interface) to the "INPUTS (RCA)" on the active speaker.
 - Coaxial:** Connect a digital audio source to the "COAXIAL Input" on the active speaker.
 - USB:** Insert a USB drive with audio files into the USB port on the side panel.
- Connect Power:** Connect the power cable to the "AC INPUT" on the active speaker and then to a suitable wall outlet.
- Power On:** Flip the "POWER" switch on the rear panel of the active speaker to the "ON" position.

6. OPERATING INSTRUCTIONS

- Select Input Source:** Use the "MODE" buttons on the side panel of the active speaker to cycle through the available input sources (Bluetooth, Line In, USB, Coaxial). The LED indicator will change color or pattern to indicate the selected mode.
- Adjust Volume:** Rotate the "VOL" knob to adjust the overall listening volume. Start at a low volume and gradually increase it to a comfortable level.
- Adjust Tone:** Use the "TRE" (Treble) and "BAS" (Bass) knobs to fine-tune the high and low frequencies according to your preference or room acoustics.
- USB Playback:** When USB mode is selected, the system will automatically play audio files from the connected USB drive. Use the mode buttons to skip tracks or pause playback if supported.

7. BLUETOOTH PAIRING

To connect your Bluetooth-enabled device to the Fame MMS-4 monitors:

- Enable Bluetooth Mode:** Press the "MODE" button on the active speaker's side panel until the Bluetooth input is selected. The LED indicator will typically flash, indicating it's in pairing mode.

- Activate Bluetooth on Device:** On your smartphone, tablet, or computer, enable Bluetooth and search for available devices.
- Select "Fame MMS-4":** From the list of found devices, select "Fame MMS-4".
- Confirm Connection:** Once paired, the LED indicator on the active speaker will typically stop flashing and remain solid, indicating a successful connection. You can now play audio from your device through the monitors.

8. MAINTENANCE

- Cleaning:** Wipe the exterior surfaces of the speakers with a soft, dry, lint-free cloth. Do not use abrasive cleaners, waxes, or solvents.
- Dust:** Regularly remove dust from the grilles and ventilation openings using a soft brush or vacuum cleaner with a brush attachment.
- Storage:** If storing the speakers for an extended period, disconnect them from power, clean them, and store them in a cool, dry place, preferably in their original packaging.

9. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cable disconnected; Power switch off; Wall outlet faulty.	Ensure power cable is securely connected; Turn power switch ON; Test wall outlet with another device.
No sound	Incorrect input selected; Volume too low; Audio source not playing; Speaker cable loose.	Select correct input mode; Increase volume; Check audio source playback; Secure speaker cable connections.
Bluetooth not pairing	Speakers not in pairing mode; Device Bluetooth off; Device too far.	Ensure Bluetooth mode is selected and flashing; Enable Bluetooth on your device; Move device closer to speakers.
Distorted sound	Volume too high; Audio source signal too strong; Incorrect tone settings.	Reduce volume on speakers or audio source; Adjust Treble/Bass knobs.

10. SPECIFICATIONS

- Model:** Fame MMS-4
- Type:** Active Studio Monitors with Bluetooth
- Dimensions (per speaker):** Approximately 39 x 31.5 x 26 cm (15.35 x 12.4 x 10.24 inches)
- Weight (total):** Approximately 5.56 kg (12.26 lbs)
- Power Input:** AC110-240V ~ 60Hz
- Inputs:** Stereo RCA, Coaxial, USB, Bluetooth
- Controls:** Volume, Treble, Bass, Input Mode


11. WARRANTY AND SUPPORT

Fame products are designed for reliability and performance. For warranty information, technical support, or service inquiries, please refer to the documentation provided with your purchase or visit the official Fame website. Please retain your proof of purchase for warranty claims.

For further assistance, contact your retailer or the manufacturer's customer support.

© 2025 Fame. All rights reserved. Information in this manual is subject to change without notice.

Related Documents - MMS-4

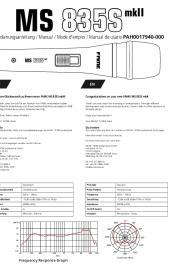	<p>FAME MS 835S mkII Microphone User Manual</p> <p>User manual for the FAME MS 835S mkII microphone, detailing its specifications, frequency response, and polar pattern. Provided by MUSIC STORE professional GmbH.</p>
	<p>FAME DD6600 Digital Drum Set User Manual</p> <p>Comprehensive user manual for the FAME DD6600 Digital Drum Set, covering features, operation, setup, safety guidelines, and troubleshooting.</p>
	<p>FAME G-3000 User Manual: Setup, Features, and Operation</p> <p>Comprehensive user manual for the FAME G-3000 home keyboard, covering setup, connections, playing features, safety instructions, and specifications. Learn to use your digital keyboard effectively.</p>
	<p>FAME Grand 3100 Digital Piano User Manual Setup, Features, and Operation</p> <p>Comprehensive user manual for the FAME Grand 3100 Digital Piano. Includes setup guides, feature explanations, operation instructions, troubleshooting, and specifications from Music Store professional GmbH.</p>
	<p>FAME Digital Drum DD6600 Operating Instructions</p> <p>Operating instructions for the FAME Digital Drum DD6600, covering setup, features, playing techniques, recording, coaching modes, and troubleshooting.</p>

Fame
TWIN LOOPER



GTF035025-000
02/2012

[Fame Twin Looper User Manual and Specifications](#)

This document provides comprehensive instructions, safety guidelines, and technical specifications for the Fame Twin Looper, a guitar effects pedal designed for sound manipulation.