

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- > [HOTO](#) /
- > [HOTO Grip Cordless Electric Spin Scrubber Instruction Manual](#)

HOTO QWQJA10

HOTO Grip™ Cordless Electric Spin Scrubber Instruction Manual

Model: QWQJA10 | Brand: HOTO

PRODUCT OVERVIEW

The HOTO Grip Cordless Electric Spin Scrubber is designed for efficient and effortless cleaning across various surfaces. Its lightweight design, powerful motor, and interchangeable brush heads make it suitable for a wide range of household tasks.

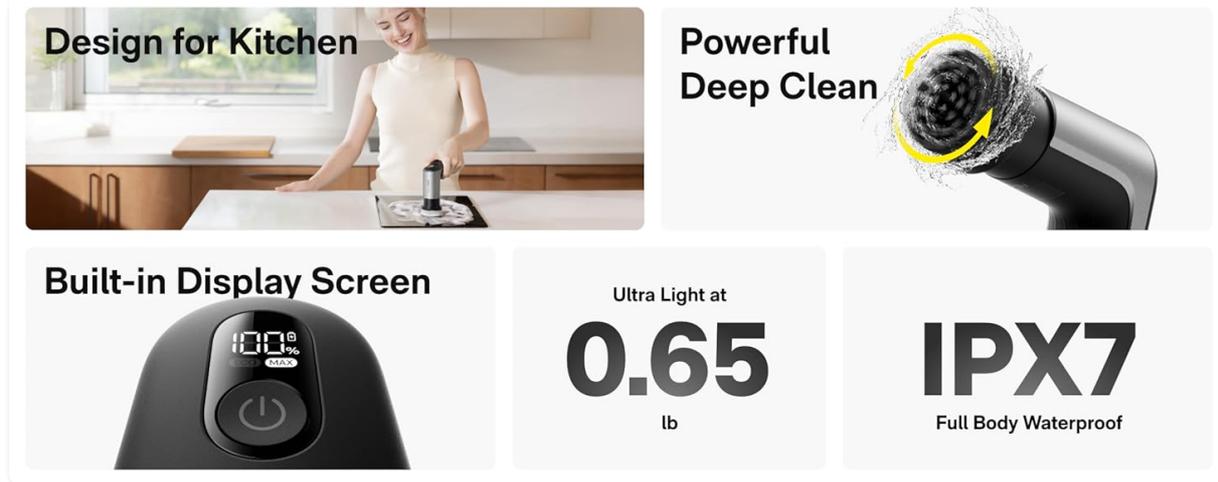


Image: The HOTO Grip scrubber demonstrating powerful cleaning on a kitchen surface.

Key Features:

- **Dual-Speed Power:** Offers 400 RPM for heavy-duty scrubbing and 270 RPM for daily cleaning, ensuring stability without stalling.
- **6 Magnetic Brush Heads:** Includes specialized heads for countertops, stovetops, tiles, cookware, sinks, grill pans, baking trays, tableware, and heavy-duty stove cleaning. Quick-attach magnetic design for easy swapping.
- **Ultra-Light & Ergonomic:** Weighs only 0.65 lb with a textured non-slip handle and angled design to reduce wrist fatigue.
- **IPX7 Fully Waterproof:** Safe to fully submerge in soapy water for deep cleaning.
- **Smart Display & Long-Lasting Battery:** Built-in screen shows battery level and ECO/MAX mode. Provides up to 110 minutes of runtime on a single charge.

- **Space-Saving Design:** Features a built-in hook for convenient storage.

WHAT'S IN THE BOX

Your HOTO Grip Cordless Electric Spin Scrubber package includes the following components:

- HOTO Grip Cordless Electric Spin Scrubber Unit
- Small Flat Brush
- Sisal Brush
- Pointed Brush
- Sponge Pad
- Scour Pad
- Metal Cloth Pad
- Velcro Adapter for Pads
- Brush Head Bag
- USB-C Charging Cable



Image: All components included in the HOTO Grip package.

SETUP

1. Charging the Device

Before first use, fully charge the HOTO Grip scrubber. Connect the provided USB-C charging cable to the charging port on the device and to a suitable USB power source. The smart display will indicate the battery level during charging. A red light indicates low battery.

① USB-C Charging

Red Light = Low Battery
Auto Screen-off 30s after Full Charge



Image: USB-C charging port on the HOTO Grip scrubber.

2. Attaching Brush Heads

Select the appropriate brush head for your cleaning task. The brush heads attach magnetically to the main unit. Simply align the brush head with the device's attachment point and it will snap into place. For pads (Sponge, Scour, Metal Cloth), first attach the Velcro adapter to the unit, then press the desired pad onto the adapter.

② Assemble the Brush Head

Snap On. Swap Out.
Magnetic Brush Head for Easy Replacement



Image: Step-by-step guide on assembling the brush heads.

OPERATING INSTRUCTIONS

1. Power On/Off and Speed Selection

To power on the device, long-press the power button. The smart display will illuminate, showing the current battery level and speed mode (ECO/MAX). Tap the power button to switch between ECO mode (270 RPM for daily cleaning) and MAX mode (400 RPM for heavy-duty scrubbing). Long-press the power button again to turn off the device.

③ Press and Start

Long Press to Start, Tap to Switch Speed



Image: Powering on and selecting speed on the HOTO Grip scrubber.

2. General Cleaning Guidelines

Apply a suitable cleaning solution to the surface or brush head. Hold the scrubber firmly and gently guide it over the area to be cleaned. Avoid excessive pressure, allowing the spin action to do the work. The IPX7 waterproof rating allows for use in wet conditions, including submersion in soapy water for thorough cleaning.

Your browser does not support the video tag.

Video: Official HOTO video demonstrating the Cordless Electric Spin Scrubber in various kitchen cleaning scenarios, highlighting its ease of use and effectiveness.

3. Specific Brush Head Applications

- **Small Flat Brush:** Ideal for general cleaning of flat surfaces such as countertops, stovetops, and tiles.



Image: Small Flat Brush in use on a countertop.

- **Sisal Brush:** Best for daily cleaning of tableware and cooking utensils.



Image: Sisal Brush effectively cleaning a pan.

- **Sponge Brush:** Suitable for sensitive cookware and countertops, designed to prevent scratches.



Image: Sponge Brush cleaning a plate.

- **Scour Pad Brush:** For tough grime. *Caution: Not recommended for use on coated surfaces or high-gloss surfaces.*



Image: Scour Pad Brush in action on an oven surface.

- **Metal Cloth Brush:** For heavy-duty cleaning. *Caution: Not recommended for use on coated surfaces or high-gloss surfaces.*



Image: Metal Cloth Brush cleaning a pot.

- **Pointed Brush:** Designed for reaching dirt in narrow areas, corners, crevices, grooves, and sinks.



Image: Pointed Brush cleaning a sink.

MAINTENANCE

Cleaning the Device

Thanks to its IPX7 waterproof design, the HOTO Grip scrubber can be safely rinsed under running water or even fully submerged in soapy water for cleaning. After use, detach the brush head and rinse both the head and the main unit thoroughly. Allow all components to air dry completely before storage.

Storage

Store the HOTO Grip scrubber and its accessories in a cool, dry place. The built-in hook allows for convenient hanging storage. Use the provided brush head bag to keep all brush heads organized and prevent loss.



Image: Convenient storage of the HOTO Grip scrubber and its accessories.

SPECIFICATIONS

Brand	HOTO
Model Number	QWQJA10
Color	Black
Handle Material	Plastic
Product Dimensions	1.97"L x 4.46"W x 6.51"H
Material	Acrylonitrile Butadiene Styrene (ABS), Metal
Special Features	110 Mins Cordless Running Time, IPX7 Full Body Waterproof, Kitchen-Specific Brushes, Smart Display, Ultra-Light
Included Components	Attachment, Handle, 6 Brush Heads, USB-C Charging Cable, Brush Head Bag
Surface Recommendation	Dish, Sink, Grill Pan, Countertop, Stovetop, Tile, Cookware
Item Weight	10.2 ounces
Batteries	1 Lithium Polymer batteries required (included)

TROUBLESHOOTING

Device Not Turning On:

- Ensure the device is fully charged. Connect it to the charger and check the battery indicator on the smart display.
- Confirm that the power button is long-pressed for a few seconds to activate the device.

Reduced Performance/Stalling:

- Check the battery level; low battery can affect motor performance.
- Avoid applying excessive pressure during scrubbing. The device is designed to work effectively with light to moderate pressure.

- Ensure the correct brush head is used for the surface and type of grime.

Brush Head Detaches During Use:

- Verify that the magnetic brush head is securely attached to the unit.
- For Velcro pads, ensure the Velcro adapter is firmly attached to the unit and the pad is pressed securely onto the adapter.

WARRANTY AND SUPPORT

For warranty information, product support, or to purchase replacement parts and accessories, please refer to the official HOTO website or contact HOTO customer service. Keep your purchase receipt for warranty claims.