

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Garvee](#) /
- › [Garvee 70 Inch TV Stand User Manual](#)

Garvee 347WEM5520250804

Garvee 70" TV Stand User Manual

Model: 347WEM5520250804

INTRODUCTION

Thank you for choosing the Garvee 70" TV Stand. This farmhouse-style entertainment center is designed to accommodate TVs up to 75 inches, featuring practical storage solutions with sliding barn doors and a built-in power outlet. This manual provides essential information for assembly, operation, and maintenance to ensure safe and optimal use of your new TV stand.

SAFETY INFORMATION

WARNING:

- Exercise caution around the corners of the TV stand, especially in households with active children or pets, as the chamfered design reduces but does not eliminate all risk of accidental bumps or injuries.
- Ensure the TV stand is placed on a stable, level surface to prevent tipping.
- Do not overload shelves or the top surface beyond recommended weight limits.
- Keep all electrical connections dry and away from liquids.
- Always follow assembly instructions carefully to ensure structural integrity.

PRODUCT OVERVIEW

The Garvee 70" TV Stand is a versatile and stylish addition to any living space, offering both aesthetic appeal and practical functionality.

Key Features:

- **Sliding Barn Doors:** Classic barn doors provide easy access to storage cabinets while concealing clutter.
- **Adjustable Shelves:** Two-side storage racks feature shelves with three height settings for customizable storage.
- **Built-in Power Outlet:** Includes 2 standard AC outlets, 1 USB port, and 1 Type-C port for convenient device charging and power.

- **Chamfered Corners:** Designed to eliminate sharp edges, reducing the risk of accidental bumps.
- **Durable Construction:** Made from MDF board with a smooth, scratch-resistant coating for long-lasting reliability.
- **Ample Storage:** Central open shelves and side cabinets provide generous space for media devices, books, and decor.



Figure 1: Front view of the Garvee 70" TV Stand with a television and decorative items.



**Sliding Bin
Door Design**



**Built-in 2 AC Sockets
2 USB Ports**



**Position
Adjustable Shelf**

Figure 2: Detailed view highlighting the sliding door design, integrated power outlet, and adjustable shelf positions.

Product Size

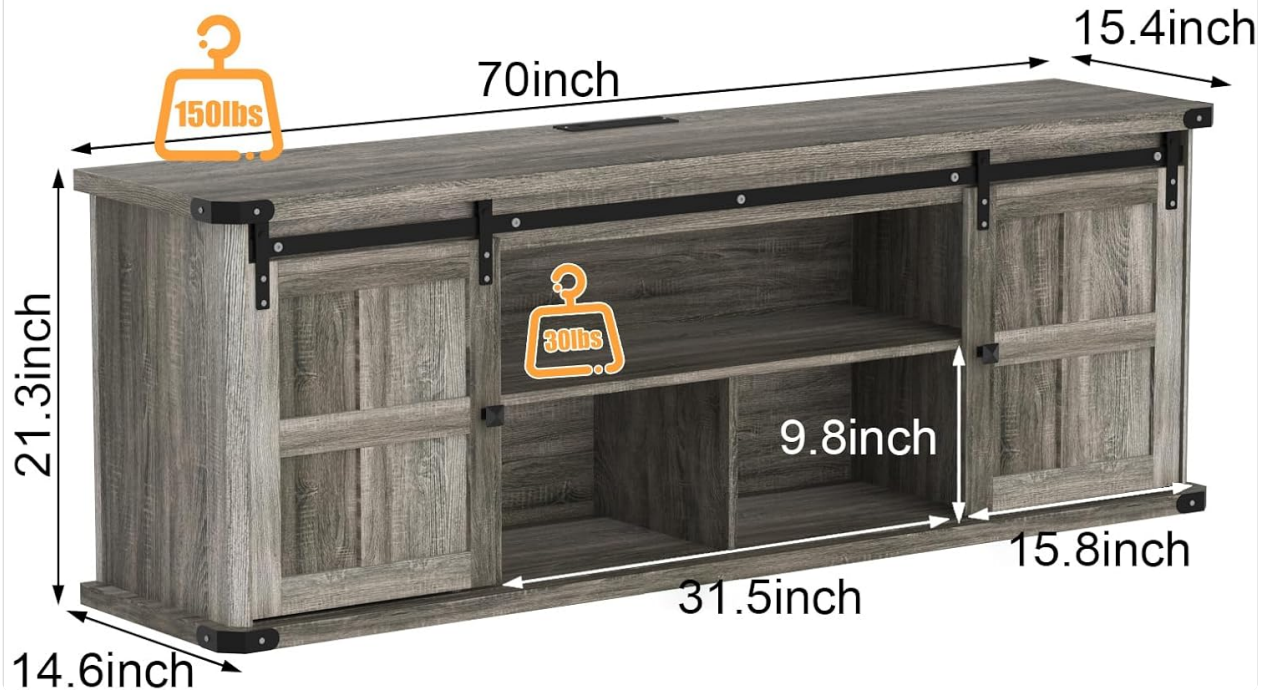


Figure 3: Product dimensions and weight capacities for the Garvee TV Stand.

SPECIFICATIONS

Attribute	Detail
Brand	Garvee
Model Number	347WEM5520250804
Dimensions (L x W x H)	70 x 15.4 x 21.3 inches
Item Weight	103 pounds
Material	Metal, Wood (MDF Board)
Color	Grey
Number of Shelves	3 (adjustable)
Power Outlet	2 AC Outlets, 1 USB Port, 1 Type-C Port
TV Size Compatibility	Up to 75 inches

SETUP AND ASSEMBLY

The Garvee TV Stand is designed for easy assembly. Please follow the detailed, step-by-step instructions provided in the separate assembly manual included with your product. All necessary hardware is included and parts are clearly labeled.

1. **Unpack Components:** Carefully remove all parts from the packaging and verify against the parts list in the assembly manual.
2. **Identify Hardware:** Separate and identify all screws, dowels, and other hardware.
3. **Follow Step-by-Step Instructions:** Assemble the stand according to the numbered steps in the provided manual. Pay close attention to diagrams.
4. **Secure Connections:** Ensure all screws and fasteners are tightened securely, but do not overtighten.
5. **Install Power Outlet:** Integrate the power outlet unit into the designated slot as per instructions.
6. **Place on Level Surface:** Once assembled, place the TV stand on a flat, stable surface.

Note: Two people are recommended for assembly to ensure stability and ease of handling larger components.

OPERATING INSTRUCTIONS

Using the Sliding Barn Doors:

The barn doors are designed to slide smoothly along the top track. Gently push or pull the doors to open or close the side storage compartments or to cover the central open shelves as desired.

Adjusting Shelves:

The shelves in the side cabinets are adjustable. To change the shelf height:

1. Empty the shelf of any items.
2. Carefully lift the shelf to disengage it from the support pins.
3. Remove the support pins from their current holes.
4. Reinsert the support pins into the desired height holes.
5. Place the shelf back onto the support pins, ensuring it is level and secure.

Using the Built-in Power Outlet:

The integrated power strip provides convenient access to power for your electronic devices.

- Plug the TV stand's main power cord into a standard wall outlet.
- Use the 2 AC outlets for televisions, game consoles, or other appliances.
- Use the USB-A and Type-C ports for charging smartphones, tablets, and other compatible USB devices.

CAUTION:

- Do not exceed the maximum power rating of the built-in outlet.
- Avoid plugging in high-power appliances that may draw excessive current.
- Ensure cables are routed neatly through the cable management holes to prevent tangling or damage.

MAINTENANCE

To keep your Garvee TV Stand in excellent condition, follow these simple maintenance guidelines:

- **Cleaning:** Wipe the surface with a dry, soft cloth. Avoid using harsh chemicals, abrasive cleaners, or

excessive moisture, as these can damage the finish.

- **Spills:** Immediately wipe up any spills with a dry cloth to prevent staining or water damage.
- **Dusting:** Regularly dust the stand to prevent buildup.
- **Hardware Check:** Periodically check all screws and fasteners to ensure they remain tight. Retighten if necessary.
- **Avoid Direct Sunlight:** Prolonged exposure to direct sunlight can cause fading or discoloration of the finish.
- **Heat Sources:** Keep the stand away from direct heat sources like radiators or fireplaces.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Stand is wobbly/unstable.	Loose fasteners; uneven floor.	Check and tighten all assembly screws. Ensure the stand is on a level surface; use shims if necessary.
Sliding doors are stiff or not moving smoothly.	Debris in the track; misaligned track/rollers.	Clean the track of any dust or debris. Check if the track or rollers are properly aligned and secured.
Power outlet not working.	Not plugged into wall; tripped circuit breaker; faulty device.	Ensure the TV stand's power cord is securely plugged into a working wall outlet. Check your home's circuit breaker. Test with a different device.
Missing parts during assembly.	Packaging error.	Contact Garvee customer support with your purchase details and the specific missing parts.

WARRANTY AND SUPPORT

For warranty information, product support, or to inquire about replacement parts, please contact Garvee customer service. Refer to your purchase documentation for specific warranty terms and contact details. You can also visit the official Garvee Store on Amazon for more information and support: [Garvee Store](#)