

whall KST088

WHALL KST088 Long Slot 4-Slice Toaster

Instruction Manual

1. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions before operating the toaster.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical shock, do not immerse cord, plug, or toaster in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. To disconnect, turn any control to 'off', then remove plug from wall outlet.
12. Do not use appliance for other than intended use.
13. Oversize foods, metal foil packages, or utensils must not be inserted in a toaster as they may involve a risk of fire or electric shock.
14. A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
15. Do not attempt to dislodge food when toaster is plugged in.
16. Do not operate unattended.

2. PRODUCT OVERVIEW

The WHALL KST088 Long Slot 4-Slice Toaster is designed for efficient and versatile toasting. It features a touch screen with a projection display for easy operation, extra-wide slots, and multiple settings for various bread types and browning preferences.

Components:

- Long, Wide Toasting Slots (1.5 inches wide)
- Touch Screen Control Panel
- Projection Display
- Toasting Lever
- Built-in Warming Rack
- Slide-Out Crumb Tray
- Cord Storage (underneath the unit)



Image: Overview of the WHALL KST088 Long Slot 4-Slice Toaster, showing its stainless steel body, control panel, and bread slots.

3. SETUP

1. **Unpacking:** Carefully remove the toaster and all packaging materials. Retain packaging for future storage or transport.
2. **Placement:** Place the toaster on a stable, flat, heat-resistant surface, away from flammable materials such as curtains or walls. Ensure adequate ventilation around the unit.
3. **First Use:** Before toasting food for the first time, operate the toaster empty for one cycle at the highest browning setting. This will burn off any manufacturing residues and eliminate odors. A slight smoke or odor is normal during this process.
4. **Power Connection:** Plug the power cord into a standard 120V AC electrical outlet.

4. OPERATING INSTRUCTIONS

The WHALL KST088 Toaster features an intuitive touch screen and projection display for easy control.

Your browser does not support the video tag.

Video: This video demonstrates the key features and operation of the WHALL Long Slot 4-Slice Toaster, including loading bread, using the touch screen, and activating various functions.

Basic Toasting:

1. **Load Bread:** Place up to four slices of bread, bagels, or other items into the 1.5-inch wide slots. The long slots accommodate various bread sizes.

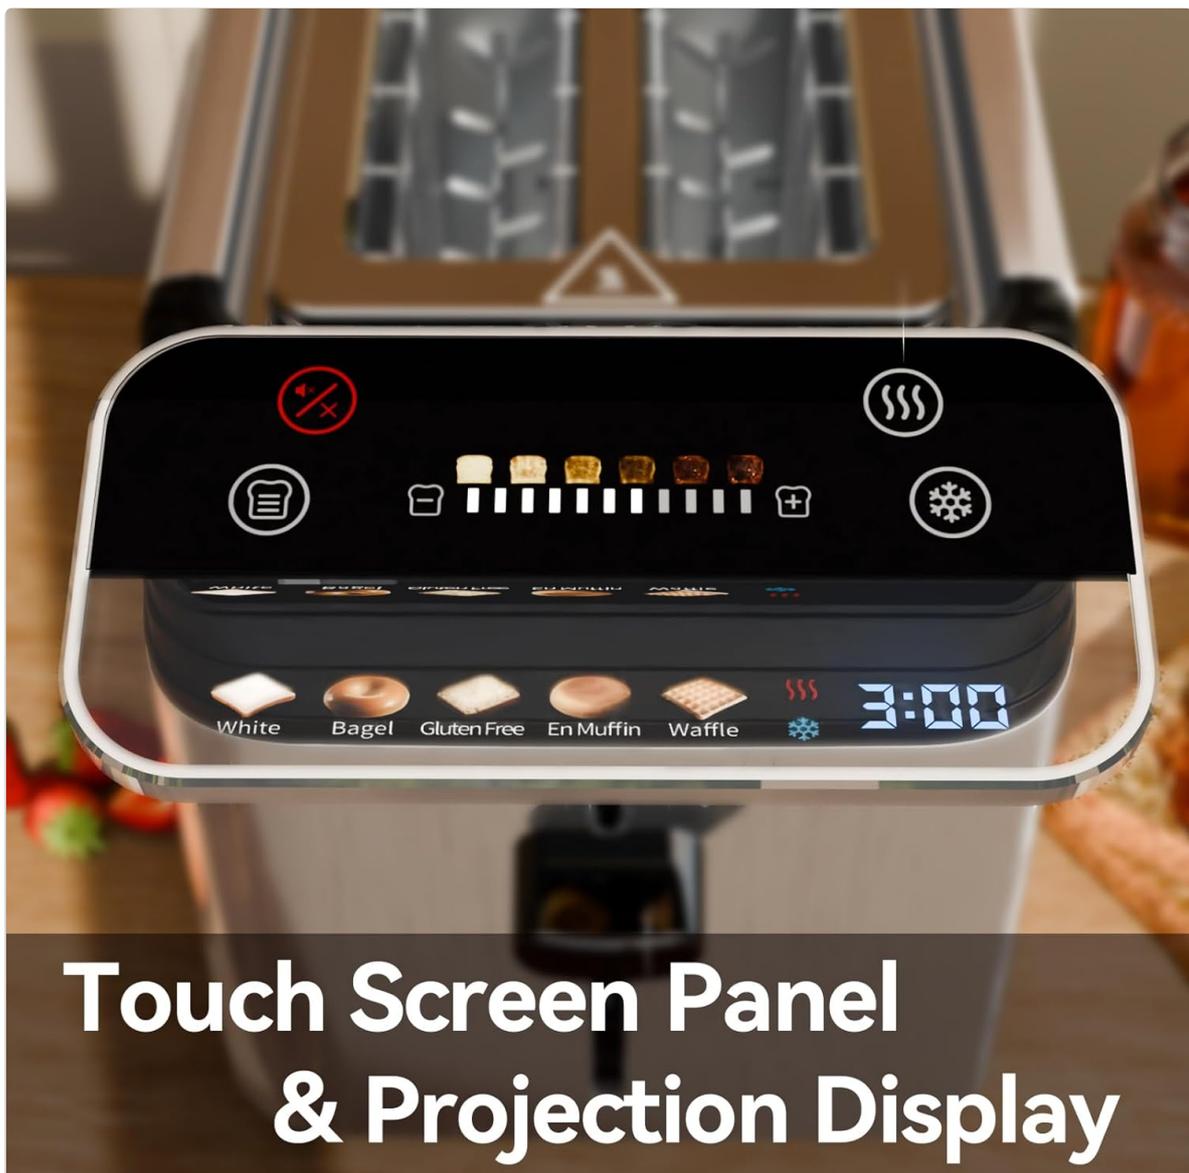


Image: Demonstrates placing bread slices into the extra-wide slots of the toaster.

2. **Select Bread Type:** Use the touch screen panel to select the appropriate bread type. Options include White, Bagel, Gluten-Free, English Muffin, and Waffle. The selected type will be projected onto the display.



Image: Close-up of the touch screen control panel and projection display, showing bread type selections and browning levels.

3. **Choose Shade Setting:** Swipe or click on the touch screen to select your desired browning shade from the 11 available settings. The projection display will show the chosen level.

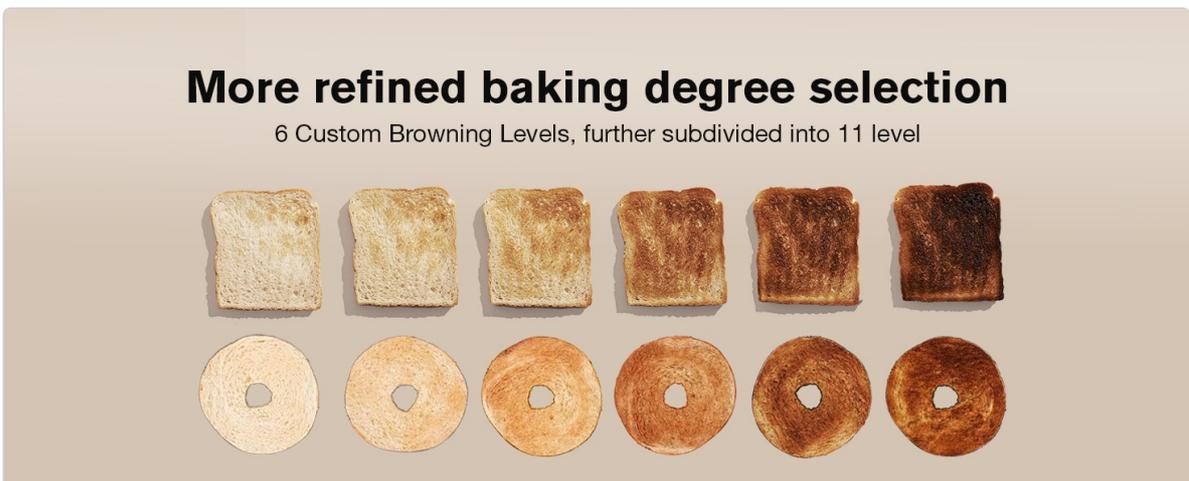


Image: Visual representation of the 11 browning shade settings available on the toaster's display.

4. **Lower Lever:** Push the toasting lever down until it locks into place. The toasting cycle will begin, and the digital timer on the projection display will count down.
5. **Cancel:** To stop the toasting cycle at any time, press the 'Cancel' button on the touch screen.

Special Functions:

- **Reheat:** Select the 'Reheat' function on the touch screen to warm previously toasted items without further browning.
- **Defrost:** Select the 'Defrost' function for frozen bread. This setting automatically adjusts the toasting time to account for thawing.

Using the Warming Rack:

The built-in warming rack is ideal for heating pastries, croissants, rolls, and other items that should not be directly toasted.

1. Gently pull up the warming rack from the top of the toaster until it locks into position.
2. Place items on the warming rack.
3. Select a low heat setting or use the 'Reheat' function.
4. Monitor items closely to prevent burning.
5. Once warmed, push the rack back down for storage.



BUILT- IN WARMING RACK

Simpler Heating Of Croissants, Bagels and Other Breads

Image: The WHALL KST088 Toaster with its built-in warming rack extended, holding croissants for warming.

5. MAINTENANCE

Regular cleaning ensures optimal performance and extends the life of your toaster.

Cleaning the Crumb Tray:

1. **Unplug:** Always unplug the toaster from the power outlet and allow it to cool completely before cleaning.
2. **Remove Tray:** Locate the slide-out crumb tray at the back of the toaster. Pull it out to remove accumulated crumbs.
3. **Clean Tray:** Dispose of crumbs. Wash the tray with warm, soapy water, rinse thoroughly, and dry completely before reinserting.
4. **Reinsert Tray:** Slide the clean, dry crumb tray back into its position until it clicks securely.

Easy to Operation



Step 1: Put breads into slots



Step 2: Press icon for bread type to choose bread type and **swipe or click** to choose shape level, press icon defrost or reheat if needed



Step 3: Press the lever down to the bottom



Step 4: Enjoy delicious bread every day

Image: A hand removing the slide-out crumb tray from the WHALL KST088 Toaster for cleaning.

Cleaning the Exterior:

- Wipe the exterior of the toaster with a soft, damp cloth. Do not use abrasive cleaners or metal scouring pads, as these can scratch the stainless steel finish.
- Ensure the toaster is completely dry before plugging it back in.

Storage:

- When not in use, the power cord can be neatly wrapped around the cord groove and secured with clips located on the bottom of the toaster.
- Store the toaster in a cool, dry place.

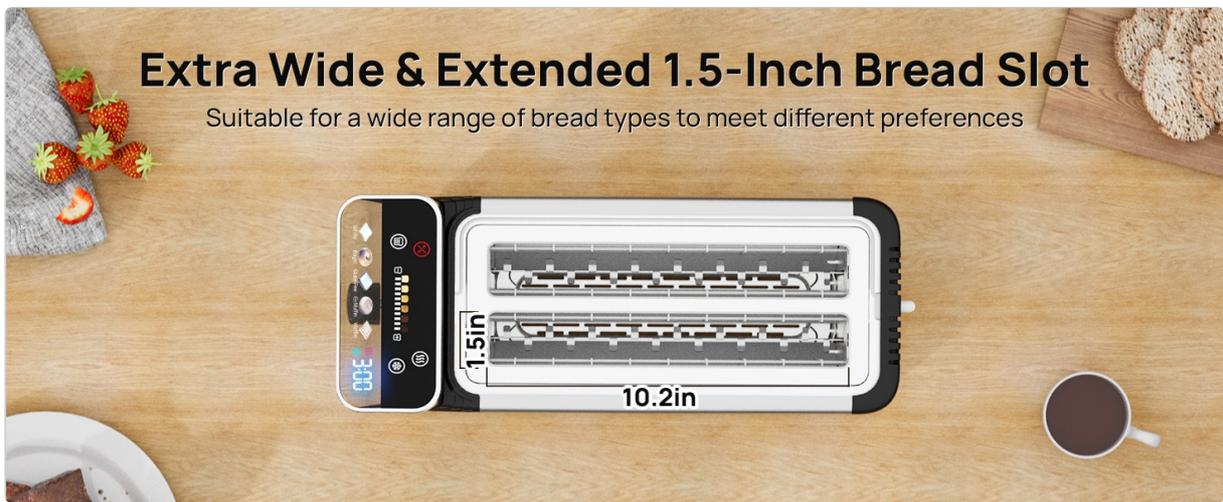


Image: Underside view of the toaster showing the integrated cord storage feature.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Toaster does not turn on.	Not plugged in; power outage; faulty outlet.	Ensure toaster is securely plugged in. Check circuit breaker. Try a different outlet.
Bread does not toast evenly.	Uneven bread thickness; inconsistent bread type; crumb buildup.	Ensure bread slices are of similar thickness. Clean crumb tray regularly. Adjust shade setting.
Smoke or burning smell.	Crumb buildup; food stuck in slots; first use residue.	Immediately unplug. Clean crumb tray. Remove any trapped food (only when cool and unplugged). First use smoke is normal.
Lever does not stay down.	Toaster not plugged in; internal malfunction.	Ensure toaster is plugged into a live outlet. If problem persists, contact customer support.
Touch screen unresponsive.	Temporary software glitch; dirty screen.	Unplug the toaster for 30 seconds, then plug back in. Clean the touch screen with a soft, dry cloth.

7. SPECIFICATIONS

- **Brand:** WHALL
- **Model Number:** KST088
- **Color:** Silver
- **Material:** Stainless Steel
- **Product Dimensions:** 16.77"D x 7.24"W x 9.76"H
- **Wattage:** 1200 watts
- **Number of Slices:** 4 (Long Slot)
- **Slot Width:** 1.5 inches
- **Special Feature:** Touchscreen, Projection Display, Warming Rack, Reheat/Defrost
- **Voltage:** 120 Volts

- **Number of Settings:** 11 Shade Settings
- **Item Weight:** 4 Pounds
- **UPC:** 810118488252



Image: Diagram showing the dimensions of the WHALL KST088 Long Slot 4-Slice Toaster.

8. WARRANTY AND SUPPORT

WHALL offers a 12-month guarantee for this product. If you encounter any issues during use, please do not hesitate to contact our after-sales support team. We are committed to resolving your problem in a satisfactory manner within 24 hours.

For support, please refer to the contact information provided with your purchase or visit the official WHALL website.