

Homall 0083-0225

Homall 10'x30' Gazebo Party Tent Instruction Manual

Model: 0083-0225

1. SAFETY INFORMATION

Please read and understand all safety warnings and instructions before assembly and use of this product. Failure to follow these instructions may result in injury or damage to the product.

- Always assemble and secure the tent according to the instructions provided.
- Do not use this gazebo in high winds, heavy rain, thunderstorms, or snowy conditions. Disassemble the tent before severe weather to prevent damage and ensure safety.
- Ensure all poles are properly connected and secured, and all stakes and guylines are firmly anchored to the ground.
- Keep all flame and heat sources away from the tent fabric. The fabric is not fireproof.
- Supervise children around the tent to prevent accidents.
- Do not hang heavy objects from the tent frame.

2. PRODUCT OVERVIEW

The Homall 10'x30' Gazebo Party Tent is designed for outdoor events, providing a spacious and adaptable shelter. It features a durable frame and a waterproof, UV-resistant canopy with removable sidewalls for versatile use.



Image: The Homall 10'x30' Gazebo Party Tent fully assembled, suitable for various outdoor gatherings.

Key Features:

- **Spacious Design:** 10'x30' footprint, accommodating up to 40 people.
- **Durable Construction:** Powder-coated steel frame with reinforced joints for stability.
- **All-Weather Protection:** 100g polyethylene canopy, waterproof and UV-resistant.
- **Removable Sidewalls:** Includes 8 sidewalls (6 with mesh windows, 2 with zip doors) for customizable privacy and airflow.
- **Easy Assembly:** Designed for quick setup with no tools required (two-person assembly recommended).

3. COMPONENTS LIST

Before beginning assembly, ensure all components are present and undamaged. Refer to the diagram below for identification.



Image: Key structural and fastening components of the gazebo, including corner joints, steel tubes, base plates, ropes, ground nails, double sewing on panels, and hook & loop fasteners.

Main Parts:

- **Canopy Top:** 100g polyethylene fabric.
- **Frame Poles:** Powder-coated steel tubes (various lengths for roof and legs).
- **Connectors:** Corner joints with buckles, various plastic/metal connectors.
- **Sidewalls:** 8 removable sidewalls (6 with mesh windows, 2 with zip doors).
- **Base Plates:** Solid plates for leg stability.
- **Anchoring Kit:** 16 metal stakes and 8 guylines.

4. SETUP INSTRUCTIONS

Assembly requires two people. No tools are required for basic frame assembly. Choose a flat, level surface for setup.


Step-by-Step Assembly:

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out. Verify all components are present against the parts list.
2. **Assemble Roof Frame:** Connect the shorter steel tubes using the appropriate connectors to form the rectangular roof frame. Ensure all connections are secure.
3. **Attach Canopy Top:** Drape the canopy fabric over the assembled roof frame. Secure it to the frame using the attached hook and loop fasteners or ties. Ensure the canopy is centered and taut.
4. **Attach Leg Poles:** Insert the longer leg poles into the corner and mid-section connectors of the roof frame. Lift the structure carefully, one side at a time, and attach the remaining leg poles.
5. **Secure Base Plates:** Place solid base plates at the bottom of each leg pole for added stability.
6. **Anchor the Tent:** Use the provided metal stakes to secure each leg to the ground. Attach guylines to the roof frame corners and stake them into the ground at an angle, pulling the lines taut. This is crucial for wind resistance.
7. **Install Sidewalls:** Attach the removable sidewalls using the hook and loop fasteners along the top and sides of the frame. The sidewalls can be arranged as needed for privacy, wind protection, or open-air access.

PRODUCT DIMENSIONS

— Peaktop Party Tent —

Up to
40
People

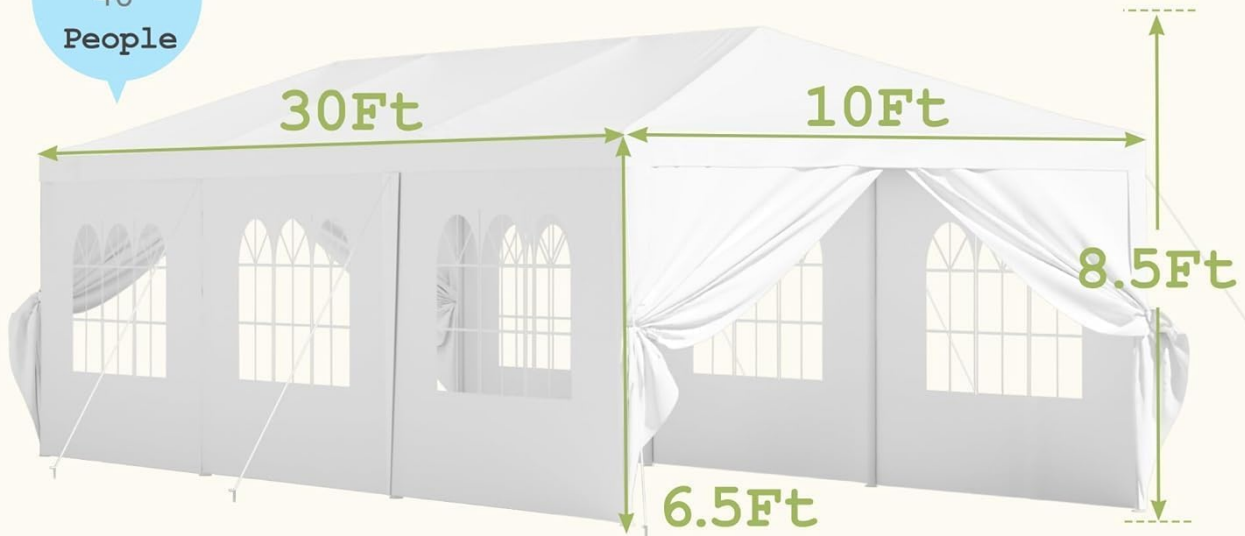

Wedding



Party



Pool Scene

Image: Exploded view illustrating the frame structure and the modular attachment of the 8 removable sidewalls, highlighting ventilation, brightness, and zippered access.

5. OPERATING INSTRUCTIONS

The Homall Gazebo is designed for flexible use in various outdoor settings.

Using the Sidewalls:

- **Privacy and Protection:** Attach all 8 sidewalls to create an enclosed space, offering privacy and protection from light wind or sun.
- **Ventilation and Visibility:** Utilize the 6 sidewalls with mesh windows for airflow while maintaining some enclosure.
- **Easy Access:** The 2 sidewalls with zip doors allow for convenient entry and exit. These can be rolled up and secured when not needed.
- **Open-Air Configuration:** Remove some or all sidewalls to create an open canopy structure, ideal for clear weather and maximum guest flow.

Weather Considerations:


- While the canopy is waterproof and UV-resistant, it is not designed for extreme weather. Always monitor weather conditions.
- In case of strong winds, heavy rain, or storms, disassemble the tent immediately to prevent damage to the structure and potential injury.

6. MAINTENANCE

Proper maintenance will extend the life of your Homall Gazebo Party Tent.

- **Cleaning:** Wipe down the canopy and sidewalls with a damp cloth and mild soap. Do not use harsh chemicals or abrasive cleaners. Rinse thoroughly and allow to air dry completely before storage.
- **Frame Care:** Inspect the steel frame periodically for any signs of rust or damage. Clean any dirt or debris from the poles and connectors.
- **Storage:** Always ensure the canopy, sidewalls, and frame components are completely dry before packing them away. Store in a cool, dry place to prevent mold, mildew, and rust.
- **Inspection:** Before each use, inspect all parts for wear and tear, especially connectors, fabric tears, and bent poles. Replace any damaged parts immediately.

8 REMOVABLE SIDEWALLS

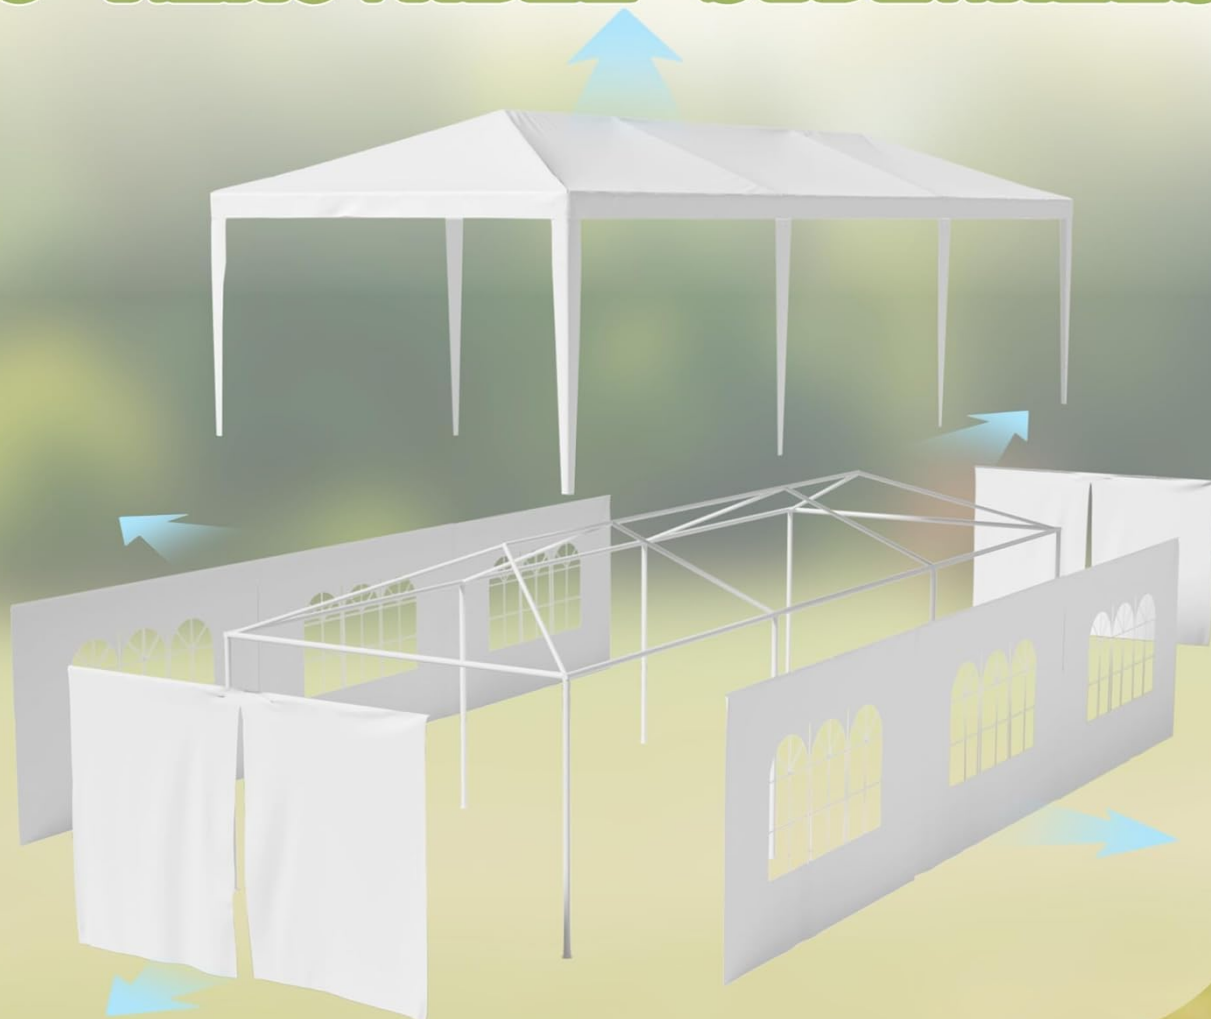

Well-ventilated



Bright



Zippered

Image: The gazebo's canopy provides sun protection with anti-UV coating and is waterproof, effectively stopping rainwater intrusion. Not recommended for use in thunderstorms and windy weather.

7. TROUBLESHOOTING

Here are solutions to common issues you might encounter:

- **Tent is unstable:** Ensure all poles are fully inserted into connectors. Verify all 16 stakes are firmly driven into the ground and all 8 guylines are taut and properly anchored. Check for uneven ground.
- **Water pooling on canopy:** Ensure the canopy is stretched tightly over the frame and that the frame is fully extended. Water pooling can occur if the canopy sags, especially after heavy rain. Gently push up from underneath to release pooled water.
- **Difficulty connecting poles:** Ensure you are using the correct poles for each section. Some poles may require a firm push to snap into place. Do not force connections if they do not align.
- **Sidewalls do not fit:** Ensure the sidewalls are oriented correctly and that the hook and loop fasteners are aligned with the frame.

8. SPECIFICATIONS

Feature	Specification
Brand	Homall
Model Number	0083-0225
Product Dimensions (L x W x H)	360"L x 120"W x 102"H (10' x 30' x 8.5')
Frame Material	Powder-coated Alloy Steel
Canopy Material	100g Polyethylene
Water Resistance Level	Water Resistant
UV Protection	Yes
Item Weight	52.9 pounds
Occupancy	Up to 40 People
Color	White



Image: Product dimensions of the Homall Peaktop Party Tent, indicating a length of 30ft, width of 10ft, peak height of 8.5ft, and side height of 6.5ft. Suitable for weddings, parties, and pool scenes.

9. WARRANTY AND SUPPORT

Homall is committed to providing quality products and customer satisfaction.

- For any questions, missing parts, or issues with your product, please contact Homall customer service.
- Refer to your purchase documentation for specific warranty details and contact information.
- Dedicated after-sales service is available to assist with any concerns.