



Manuals.plus /

› **truke** /

› truke Mega 10 True Wireless Earbuds User Manual

## **truke Mega 10**

# **truke Mega 10 True Wireless Earbuds User Manual**

Model: Mega 10 (F41)

## **1. INTRODUCTION**

---

This manual provides detailed instructions for the safe and efficient use of your truke Mega 10 True Wireless Earbuds. Please read this manual thoroughly before using the product and retain it for future reference.

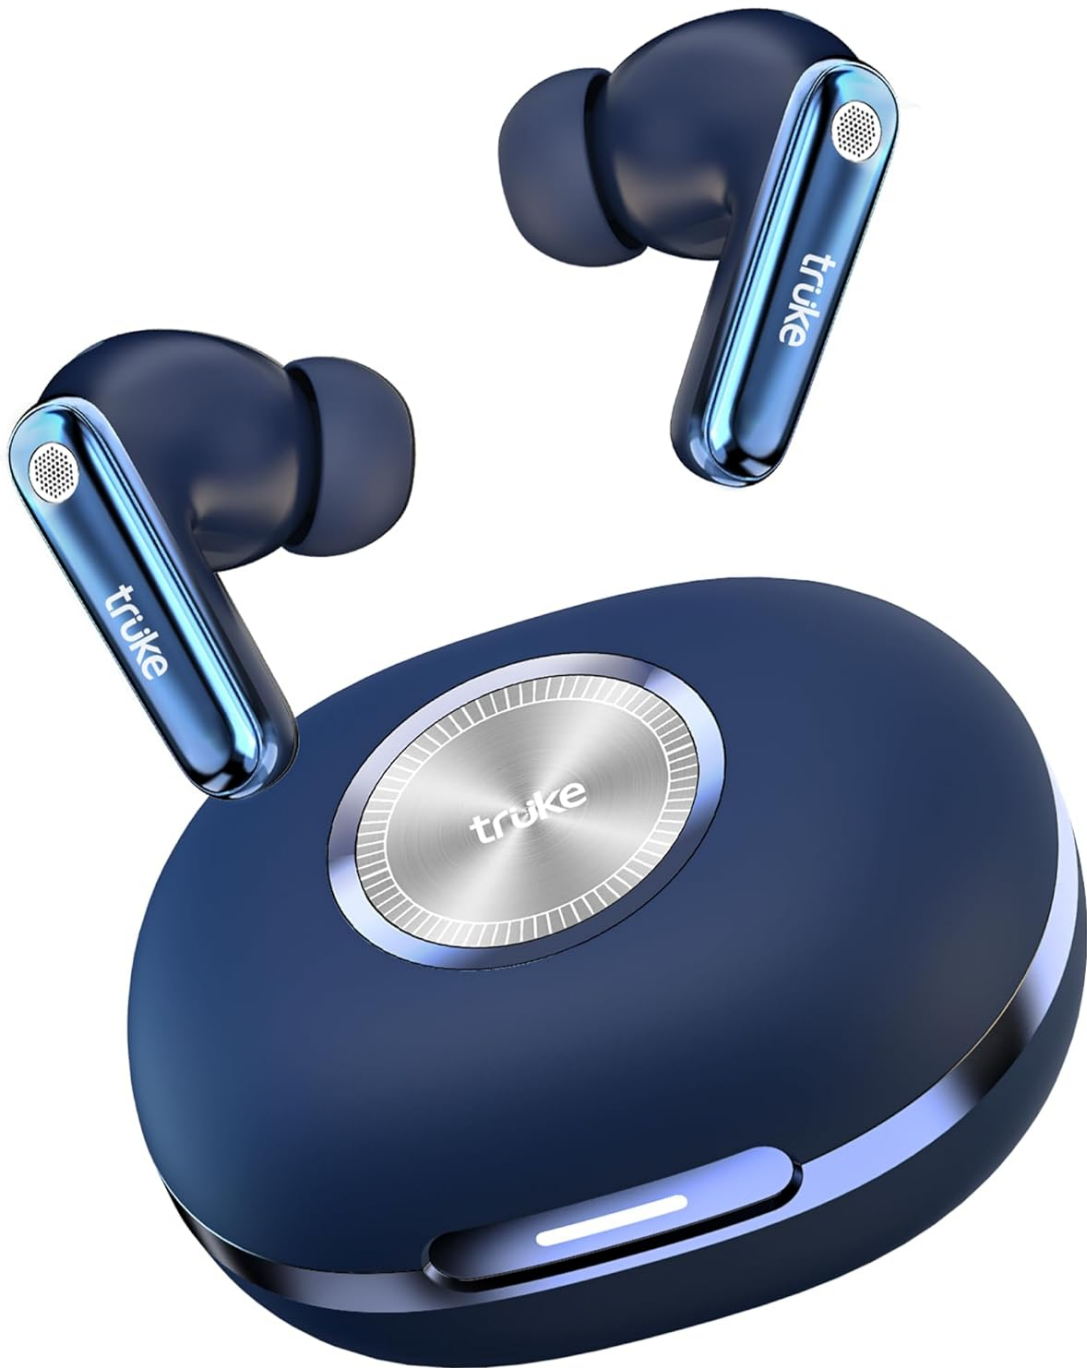 


Image: truke Mega 10 True Wireless Earbuds in Royal Blue, shown with their charging case.

## 2. PACKAGE CONTENTS

---

Ensure all items are present in the package:

- truke Mega 10 True Wireless Earbuds (Left and Right)
- Wireless Charging Case
- USB Type-C Charging Cable
- Eartips (various sizes)
- User Manual (this document)

## 3. PRODUCT OVERVIEW

---

Familiarize yourself with the components of your truke Mega 10 earbuds.

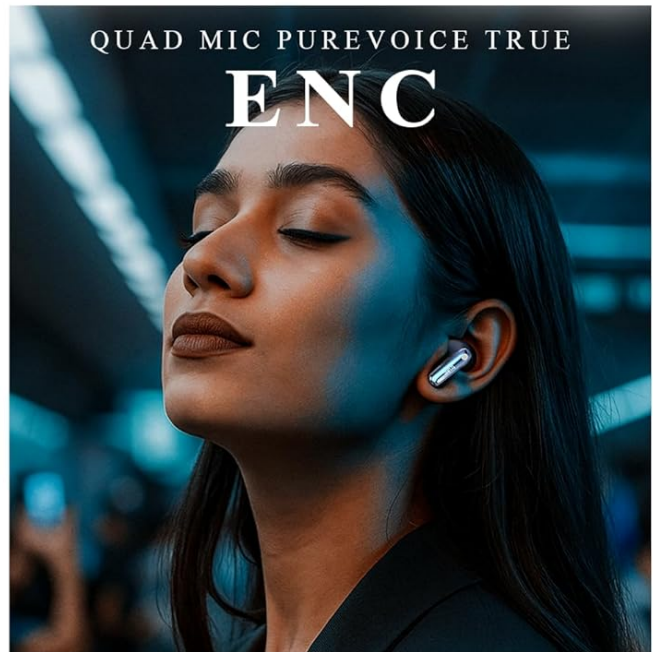 


Image: A visual summary highlighting key features of the truke Mega 10 earbuds, including 24-bit Spatial Sound, Environmental Noise Cancellation (ENC), Bluetooth 5.4 connectivity, and IPX5 splash & sweat resistance.

### Key Features:

- **24-bit Lossless Spatial Audio:** Delivers immersive and precise sound.
- **13mm Titanium Drivers:** For dynamic audio with deep bass and clear highs.
- **70-Hour Total Playtime:** Extended battery life with the charging case.
- **IPX5 Water Resistance:** Protects against splashes and sweat.
- **Dual Device Connectivity:** Seamlessly switch between two connected devices.
- **40ms Ultra-Low Latency:** Optimized for gaming and video streaming.
- **Bluetooth 5.4:** Ensures stable connection and power efficiency.
- **Quad Mic PureVoice ENC:** Enhances call clarity by reducing background noise.

## 4. SETUP AND FIRST USE

## 4.1 Charging the Earbuds and Case

Before first use, fully charge the earbuds and the charging case.

1. Place the earbuds into the charging case, ensuring they are correctly seated.
2. Connect the USB Type-C charging cable to the charging port on the case and the other end to a USB power adapter (not included) or a computer's USB port.
3. The indicator lights on the case will show charging status. Once fully charged, the lights will indicate a full charge or turn off.



Image: Illustration of the truke Mega 10 earbuds and case, emphasizing the 70-hour total music playtime and fast charging capability (10 minutes charge for 150 minutes playtime).

## 4.2 Pairing with a Device

The earbuds will automatically enter pairing mode when taken out of the case.

1. Open the charging case and remove both earbuds. They will automatically power on and enter pairing mode.
2. On your device (smartphone, tablet, laptop), enable Bluetooth.
3. Search for "truke Mega 10" in the list of available Bluetooth devices.
4. Select "truke Mega 10" to connect. Once connected, you will hear a confirmation tone.

For dual device connectivity:

1. Connect the earbuds to the first device as described above.
2. Disconnect the earbuds from the first device's Bluetooth settings. The earbuds will re-enter pairing mode.
3. Connect the earbuds to the second device.
4. Reconnect the earbuds to the first device from its Bluetooth history. The earbuds should now be connected to both devices simultaneously, allowing seamless switching.



Image: An illustration demonstrating the dual device connectivity feature of the truke Mega 10 earbuds, showing them connected to both a smartphone and a laptop.

## 5. OPERATING INSTRUCTIONS

### 5.1 Touch Controls

The truke Mega 10 earbuds feature intuitive touch controls. The specific functions may vary slightly based on the device and application.

Action	Function
Single Tap (Left/Right Earbud)	Play/Pause Music, Answer/End Call
Double Tap (Right Earbud)	Next Track
Double Tap (Left Earbud)	Previous Track
Triple Tap (Left/Right Earbud)	Activate Voice Assistant
Long Press (Left/Right Earbud, 2 seconds)	Reject Call
Long Press (Left/Right Earbud, 3 seconds)	Toggle Gaming Mode (Low Latency)

### 5.2 Gaming Mode (Low Latency)

The truke Mega 10 features an ultra-low latency mode (40ms) for an optimized gaming and video streaming experience.

- To activate Gaming Mode: Long press either earbud for 3 seconds. You will hear an audio prompt.
- To deactivate Gaming Mode: Long press either earbud for 3 seconds again.



Image: A visual representation of the truke Mega 10 earbuds' 40ms ultra-low latency feature, ideal for gamers to ensure audio-visual synchronization.

### 5.3 Environmental Noise Cancellation (ENC)

The Quad Mic PureVoice ENC technology reduces background noise during calls, ensuring clear communication.

- ENC is automatically active during calls.
- This feature primarily benefits the person on the other end of the call by making your voice clearer.

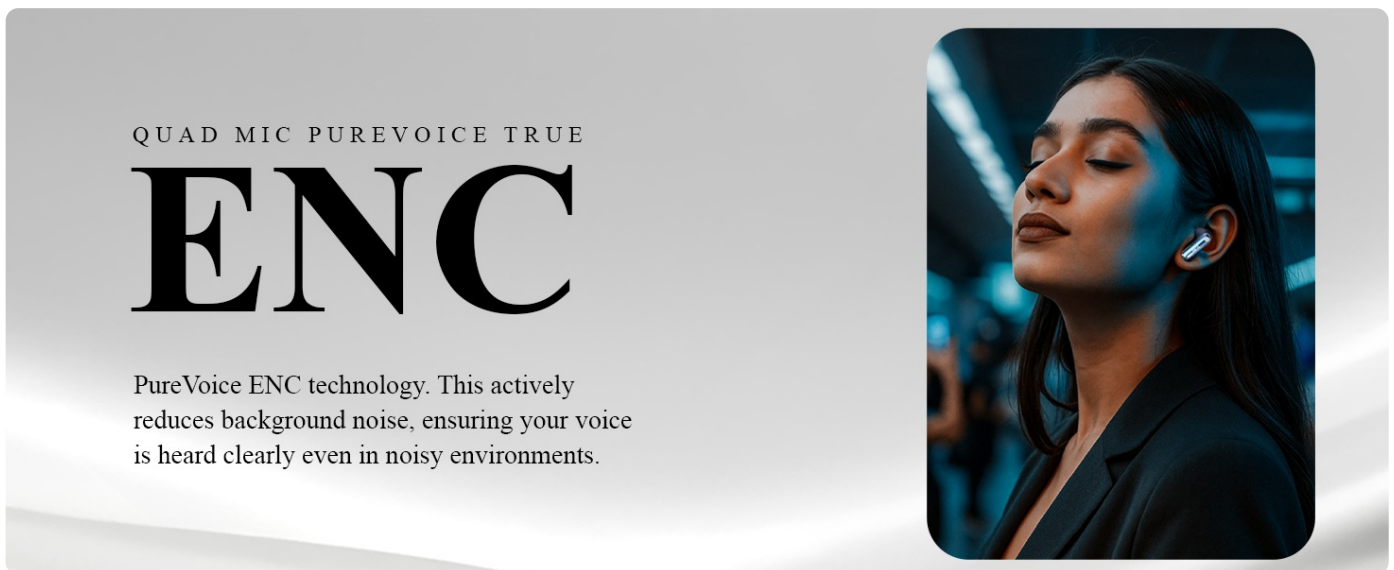 


Image: A depiction of the truke Mega 10 earbuds' Quad Mic PureVoice ENC technology, illustrating its effectiveness in providing crystal clear calls by reducing ambient noise.

## 6. MAINTENANCE AND CARE

- **Cleaning:** Regularly clean the earbuds and charging case with a soft, dry, lint-free cloth. Do not use harsh chemicals or abrasive materials.
- **Eartips:** Remove and clean the eartips periodically with water and mild soap. Ensure they are completely dry before reattaching.
- **Storage:** When not in use, store the earbuds in their charging case to protect them and keep them charged.
- **Water Resistance:** The earbuds are IPX5 water resistant, meaning they can withstand splashes and sweat. Do not submerge them in water or expose them to heavy rain. Dry them thoroughly if they get wet.

- **Temperature:** Avoid exposing the earbuds to extreme temperatures (hot or cold) or high humidity.

## 7. TROUBLESHOOTING

If you encounter issues with your truke Mega 10 earbuds, refer to the following common solutions:

Problem	Possible Solution
Earbuds not pairing/connecting	<ul style="list-style-type: none"> <li>◦ Ensure earbuds are charged.</li> <li>◦ Turn off and on Bluetooth on your device.</li> <li>◦ Forget "truke Mega 10" from your device's Bluetooth list and re-pair.</li> <li>◦ Place earbuds back in the case, close, wait a few seconds, then remove them to re-enter pairing mode.</li> </ul>
Only one earbud working	<ul style="list-style-type: none"> <li>◦ Ensure both earbuds are charged.</li> <li>◦ Place both earbuds back in the case, close, then remove them simultaneously.</li> <li>◦ Try resetting the earbuds (refer to manufacturer's website for specific reset instructions if needed).</li> </ul>
Low volume or poor sound quality	<ul style="list-style-type: none"> <li>◦ Adjust volume on both the earbuds and your connected device.</li> <li>◦ Ensure eartips are properly sealed in your ear canal. Try different sized eartips.</li> <li>◦ Clean any debris from the earbud speakers.</li> <li>◦ Ensure no obstructions between earbuds and device.</li> </ul>
Microphone not working during calls	<ul style="list-style-type: none"> <li>◦ Ensure earbuds are properly connected and selected as the audio input device.</li> <li>◦ Check for any debris blocking the microphone ports.</li> <li>◦ Test in a quieter environment to assess ENC performance.</li> </ul>
Charging case not charging	<ul style="list-style-type: none"> <li>◦ Try a different USB cable and power adapter.</li> <li>◦ Ensure the charging cable is securely connected.</li> </ul>

## 8. SPECIFICATIONS

Feature	Detail
Model Name	Mega 10
Model Number	F41
Connectivity	Bluetooth 5.4
Driver Size	13mm Titanium Drivers
Audio Technology	24-bit Lossless Spatial Audio
Latency	40ms (Ultra-Low Latency Gaming Mode)
Microphone	Quad Mic with PureVoice ENC
Total Playtime	Up to 70 hours (with charging case)
Water Resistance	IPX5 (Splash & Sweat Resistant)
Charging Port	USB Type-C
Item Weight	41 Grams
Product Dimensions	6.2 x 5 x 3 cm
Battery Type	Lithium Polymer

## 9. WARRANTY AND SUPPORT

---

truke products are designed for reliability and performance. For warranty information and customer support, please visit the official truke website or contact their customer service.

- **Official Website:** [www.truke.in](http://www.truke.in)
- **Customer Service:** Refer to the contact information provided on the product packaging or the official website for support.

Please retain your proof of purchase for warranty claims.