

[Manuals.plus](#) /

> [WLIVE](#) /

> WLIVE 65-inch TV Stand (Model AD SG089&090) Instruction Manual

WLIVE AD SG089&090

WLIVE 65-inch TV Stand (Model AD SG089&090) Instruction Manual

For models AD SG089 and AD SG090

PRODUCT OVERVIEW

The WLIVE 65-inch TV Stand is designed to accommodate televisions up to 70 inches, providing a functional and organized entertainment solution. This unit features a modern farmhouse style, integrated power outlets, and various storage options including cabinets, open shelves, and drawers. It is constructed from engineered wood and includes an anti-tip kit for enhanced safety. This specific model includes a fireplace feature.



Image 1: Front view of the WLIVE 65-inch TV Stand in Gray Oak. This image displays the overall design, including the two side cabinets, three open central compartments, and two top drawers. A television is shown placed on top, with various decorative items

SETUP AND ASSEMBLY

This TV stand requires assembly. Please follow the instructions carefully to ensure proper construction and stability.

Before You Begin:

- **Unpack All Components:** Carefully remove all parts from the packaging and lay them out on a clean, soft surface to prevent scratches.
- **Verify Parts:** Compare the included parts with the parts list provided in your assembly manual. Contact customer support immediately if any parts are missing or damaged.
- **Gather Tools:** Ensure you have the necessary tools for assembly (e.g., screwdriver, hammer).

Assembly Steps:

1. **Follow Numbered Instructions:** Refer to the detailed, step-by-step instructions and diagrams included in the separate assembly manual. Each part is typically numbered or labeled for easy identification.
2. **Secure Connections:** Ensure all screws, cam locks, and dowels are securely fastened. Do not overtighten.
3. **Install Adjustable Shelves:** Position the adjustable shelves in the central compartments according to your storage needs. The shelf pins can be moved to different pre-drilled holes.
4. **Integrate Power Outlet:** Install the power outlet strip into the designated area on the rear panel.
5. **Install Fireplace Insert:** Carefully insert the electric fireplace unit into its designated opening, following the specific instructions provided with the fireplace.
6. **Attach Anti-Tip Kit:** For safety, securely attach the anti-tip kit to the TV stand and to a wall stud using the provided hardware. This is crucial to prevent accidental tipping, especially in households with children or pets.

OPERATING INSTRUCTIONS

The WLIVE TV Stand is designed for convenient use and organization of your entertainment devices.

- **TV Placement:** Place your television centrally on the top surface of the stand. Ensure the TV base fits within the dimensions of the stand's top. This stand is suitable for TVs up to 70 inches.
- **Power Outlet Usage:** Utilize the built-in power outlets to connect your TV, media players, gaming consoles, and other electronic devices. This helps in managing cables and provides a centralized power source.
- **Cable Management:** Route power cords and signal cables through the cable management grommets located on the rear panel to maintain a tidy appearance and prevent tangles.
- **Fireplace Operation:** Refer to the separate manual provided with the electric fireplace insert for detailed operating instructions, including power on/off, heat settings, and LED flame effects.
- **Storage Compartments:**
 - **Cabinets:** Use the two side cabinets for larger items such as game consoles, soundbars, or media collections.
 - **Open Shelves:** The three open central shelves are ideal for devices requiring remote control access or for displaying decorative items. Adjust their height as needed.
 - **Drawers:** The two top drawers are suitable for storing smaller accessories like remote controls, batteries, or instruction manuals.

MAINTENANCE

Proper care will help maintain the appearance and longevity of your WLIVE TV Stand.

- **Cleaning:** Wipe the surfaces with a dry, soft cloth. Avoid using abrasive cleaners, harsh chemicals, or excessive moisture, as these can damage the finish.
- **Spills:** Immediately wipe up any spills with a dry cloth to prevent water damage or staining.
- **Inspection:** Periodically check all fasteners and connections to ensure they remain tight. Retighten if necessary.
- **Anti-Tip Kit:** Regularly inspect the anti-tip kit to ensure it is securely attached to both the stand and the wall.
- **Fireplace Maintenance:** Refer to the fireplace insert's manual for specific cleaning and maintenance instructions.

TROUBLESHOOTING

If you encounter issues with your TV stand, refer to the following common solutions.

Problem	Possible Cause	Solution
Stand is wobbly or unstable.	Loose fasteners; uneven floor; anti-tip kit not installed or improperly secured.	Ensure all screws and connections are tightened. Move the stand to a level surface or use shims if necessary. Verify the anti-tip kit is correctly installed and secured to a wall stud.
Power outlets are not working.	Power strip not plugged into wall outlet; circuit breaker tripped; faulty power strip.	Check if the power strip's main plug is securely inserted into a functional wall outlet. Reset the circuit breaker if it has tripped. Test the power strip with another device or consider replacing it if it's faulty.
Drawers do not slide smoothly.	Improper drawer slide installation; debris in slides; drawer overloaded.	Review the assembly manual for correct drawer slide installation. Clear any debris from the drawer slides. Reduce the weight in the drawer.
Fireplace not turning on or functioning.	Power issue; unit not properly connected; internal fault.	Ensure the fireplace is plugged into a working outlet. Check its power switch and remote control. Refer to the fireplace's specific manual for troubleshooting steps.
Missing or damaged parts during assembly.	Packaging error; shipping damage.	Do not proceed with assembly. Contact WLIVE customer support with your purchase details and a list of missing/damaged parts for assistance.

SPECIFICATIONS

Feature	Detail
Brand	WLIVE
Model Numbers	ADSG089, ADSG090
Color	Gray Oak
Material	Engineered Wood

Feature	Detail
Mounting Type	Floor Mount
Number of Drawers	2
Number of Shelves	3 (open shelves, plus adjustable shelves within cabinets)
Required Assembly	Yes
Style Name	Farmhouse
Item Weight	81.3 Pounds
Item Dimensions (L x W x H)	64.96 x 15.35 x 29.37 inches
Waterproof	True (Note: Refers to material properties, not suitable for outdoor use or prolonged water exposure)
Special Feature	Integrated Power Outlet, LED (for fireplace effects)

WARRANTY INFORMATION

Specific warranty details for the WLIVE 65-inch TV Stand are not provided in this manual. For information regarding product warranty, including coverage duration and terms, please refer to the documentation included with your purchase or contact WLIVE customer support directly. Keep your proof of purchase for warranty claims.

CUSTOMER SUPPORT

If you require further assistance, have questions about assembly, or need to report missing/damaged parts, please contact WLIVE customer support.

- **Contact Information:** Refer to the contact details provided in your product packaging or on the official WLIVE website.
- **Before Contacting:** Please have your model number (ADSG089&090) and purchase information readily available to expedite support.