



Manuals.plus /

› Sunseeker /

› Sunseeker V3 Robotic Lawn Mower User Manual

## Sunseeker V3

# Sunseeker V3 Robotic Lawn Mower User Manual

Model: V3 | Brand: Sunseeker

## INTRODUCTION

---

This manual provides essential information for the safe and efficient operation, setup, maintenance, and troubleshooting of your Sunseeker V3 Robotic Lawn Mower. The Sunseeker V3 is designed for areas up to 600 m<sup>2</sup>, featuring advanced Vision AI, a dual camera system for obstacle detection, and the ability to handle slopes up to 42%.

# Naviga ed Evita Più di 360 Ostacoli



The Sunseeker V3 Robotic Lawn Mower, ready for operation on a well-maintained lawn.

Its wire-free perimeter system and intuitive app control make lawn care effortless, allowing for one-click mowing and continuous updates for optimal performance.

## SETUP

Setting up your Sunseeker V3 is designed to be quick and straightforward, allowing you to start mowing in as little as 3 minutes.

1. **Install the Charging Station:** Place the charging station in a suitable location within your lawn area. Ensure it is in a Wi-Fi covered area for optimal connectivity.



The charging station being set up on the lawn, ready for the robotic mower.

2. **Connect Power:** Plug the charging station into an outdoor power outlet.
3. **Position the Mower:** Roll your V3 Sunseeker into the charging station. A green light will indicate it is correctly positioned and charging.
4. **Define Boundaries (Optional):** For areas without clear boundaries or to create specific no-mow zones, use the provided magnetic strips. Hammer the stakes to secure the strips in place. The mower's Vision AI will recognize these boundaries.



The robotic mower approaching a magnetic boundary strip, which helps define mowing areas.

5. **App Registration:** Download the Sunseeker app. Scan the QR code located on the back of your lawn mower to register your device and connect it to your Wi-Fi network.

Once these steps are completed, your Sunseeker V3 is ready for operation.

## OPERATING INSTRUCTIONS

The Sunseeker V3 offers flexible operating modes, including one-click mowing, app control, and manual adjustments.

### One-Click Mowing

For immediate mowing, simply press the 'Start' button on the mower's control panel or within the app. The mower will begin its operation based on its intelligent algorithm.

Your browser does not support the video tag.

Official Sunseeker V3 product video demonstrating easy setup and operation. This video highlights the mower's ability to navigate various terrains and obstacles, and its smart features like automatic return to base and rain detection.

## App Control and Scheduling

The Sunseeker app provides comprehensive control over your mower:

- **Schedule Mowing:** Set specific times and days for the mower to operate.
- **Customize Settings:** Adjust cutting height, edge mowing preferences, and rain delay settings.
- **Monitor Status:** View battery level, Wi-Fi connectivity, and current operational status.
- **Manual Control:** Use the app to manually steer the mower for precise control in specific areas.

## Installazione Rapida



Passo 01

Installazione della Stazione di Ricarica



Passo 02

Posizionamento della Striscia Magnetica (Opzionale)



Passo 03

Scansione del Codice QR per Aggiungere il V3



Passo 04

Premere «Avvia» – Pronto all'Uso!

The Sunseeker app displaying control options and scheduling for the robotic lawn mower.

## Blade Level Adjustment

The cutting height can be adjusted manually using the dial located under the mower's lid. Rotate the dial to select your desired cutting height, ranging from 20 mm to 60 mm.



Close-up of the Sunseeker V3's control panel, showing the dial for adjusting blade cutting height.

## Intelligent Navigation and Obstacle Avoidance

The V3 Sunseeker utilizes Vision AI and a dual camera system to navigate your lawn. It can recognize over 160 obstacles, from garden tools to toys, ensuring no area is missed while avoiding collisions. Its floating cut system adjusts to go over pathways, and it can handle slopes up to 42%.

# Soluzione Pratica per Prati Complessi



The Sunseeker V3 robotic mower intelligently navigating around various garden obstacles.

## Dati Tecnici

	V3	V3 Plus
Tecnologia	Vision AI	Vision AI
Telecamera	Binocolo	Binocolo
Area di Taglio Max.	600 m <sup>2</sup>	1000 m <sup>2</sup>
Altezza di Taglio	2-6 cm	2-6 cm
Larghezza di Taglio	18 cm	18 cm
Capacità della Batteria	2.5 Ah	4.0 Ah
Caricatore	1,1 A	3A
Pendenza Max.	42%/22°	42%/22°
Livello Sonoro	55 dB(A)	55 dB (A)
Resistenza all'Acqua	IPX5	IPX5
Dimensioni	62.6*37*29.7 cm	62.6*37*29.7 cm
Peso	9,2 kg	9,4 kg

The Sunseeker V3 demonstrating its capability to mow on a steep incline of up to 42%.

## MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your Sunseeker V3.

- **Cleaning:** The mower is IPX5 water resistant, allowing for easy cleaning with a hose. Ensure the mower is powered off before cleaning.

## sunseeker



E-mail: [lorenzo.tramarin@pratoverde.it](mailto:lorenzo.tramarin@pratoverde.it)  
Assistenza via e-mail: Lun-Dom 09:00-21:00  
Telefono: +39 049 6720011  
Assistenza telefonica:  
Lun-Ven 09:00-18:00 Sab 10:00-16:00

A user cleaning the underside of the Sunseeker V3 robotic mower with a water hose.

- **Blade Replacement:** Periodically check the blades for wear and tear. Replace them as needed to maintain cutting efficiency. Replacement blades are available from Sunseeker.



A package of Sunseeker V3 & V3 Plus robotic lawnmower replacement blades.

- **Software Updates (OTA):** The mower supports Over-The-Air (OTA) updates, ensuring its intelligent algorithm and software are always up-to-date for improved performance and new features.

## TROUBLESHOOTING

---

If you encounter any issues with your Sunseeker V3, please refer to the following common solutions:

- **Mower not starting:** Ensure the mower is correctly seated in the charging station and fully charged. Check Wi-Fi connectivity.
- **Mower getting stuck:** Verify that the magnetic boundary strips are correctly placed around obstacles or uneven terrain. Clear any large debris from the mowing area.
- **Uneven cutting:** Check the blade level adjustment and ensure blades are sharp and free from damage.
- **Mower not returning to base:** Confirm the charging station is powered on and within Wi-Fi range.
- **Rain detection:** The mower automatically returns to its base when it detects rain. It will resume its schedule once the weather clears.

For further assistance, please contact Sunseeker customer support.

## SPECIFICATIONS

---

Feature	Specification (V3)
Brand	Sunseeker
Power Source	Battery Powered
Material	Plastic, Polypropylene
Item Weight	9.2 Kilograms
Cutting Width	18 Centimeters
Operating Mode	Automatic
Product Dimensions (DxWxH)	62P x 37l x 30H cm
Assembly Required	No
Model Number	V3
Manufacturer	SUNSEEKER
Product Type Name	SUNSEEKER V3 Robotic Lawnmower
Country of Origin	China
Minimum Adjustable Cutting Height	20 Millimeters
Maximum Adjustable Cutting Height	60 Millimeters

## WARRANTY AND SUPPORT

Sunseeker is committed to providing high-quality products and excellent customer service.

- **Warranty:** The Sunseeker V3 comes with a 2+1 year warranty, totaling 3 years of after-sales assistance.
- **Customer Support:** Local EU customer support is available with a dedicated team for technical assistance and advice.
- **Global Presence:** Sunseeker products are sold in over 55 countries worldwide, backed by extensive media coverage and industry recognition.

## Scelto e apprezzato dai clienti



**2M+**

unità OPE e robot  
prodotte ogni anno

**2300+**

dipendenti, di cui **360+ ingegneri**

**600+**

brevetti di prodotto

Sunseeker's global reach and recognition, highlighting its commitment to innovation and customer satisfaction.

For specific support inquiries, please refer to the contact information provided with your product packaging or visit the official Sunseeker website.