

GR PN040001993

Replacement Remote Control BN59-01175N User Manual

Model: PN040001993 | Brand: GR

1. INTRODUCTION

This manual provides instructions for the GR Replacement Remote Control, model BN59-01175N. This remote is designed as a direct replacement for the original Samsung BN59-01175N remote control, offering stable performance and covering all essential functions. Its lightweight and ergonomic design ensures comfortable handling for all users.

Compatibility: This remote control is specifically designed to work only with Samsung BN59-01175N compatible devices. It is not intended for use with other brands or models.

2. SETUP

The GR Replacement Remote Control is designed for immediate use without complex programming. Follow these simple steps to begin operation:

- Battery Installation:** Locate the battery compartment on the back of the remote control. Open the cover and insert two AAA batteries (not included), ensuring correct polarity (+ and -). Close the battery cover securely.
- No Configuration Required:** This remote control is a direct replacement and does not require any programming codes or setup with your television or device. Once batteries are installed, it is ready for use.

HIGH QUALITY REPLACEMENT REMOTE CONTROL



- ✓ EASY TO SETUP
- ✓ NO PROGRAMMING REQUIRED



Image: The GR Replacement Remote Control, highlighting its ease of setup and no programming requirement. The remote is shown from the front, emphasizing its user-friendly nature.

3. OPERATING INSTRUCTIONS

Familiarize yourself with the main functions of your new remote control:



FUNCTION KEYS

 Turns the TV on and off

VOL +/- : Adjust the sound volume

P </> : Changes Channels

CH LIST : Launches the Channel List

PRE-CH : Returns to the previous channel

MUTE : Turns the sound on/off

COLOR BUTTONS: Shortcut keys for interactive functions 



Image: A detailed view of the GR Replacement Remote Control, with key functions labeled for easy identification and use.

- **Power Button (red circle with vertical line):** Turns the TV or device on and off.
- **SOURCE Button:** Selects the input source (e.g., HDMI1, TV, AV).
- **Number Buttons (0-9):** Directly input channel numbers.
- **VOL +/-:** Adjusts the sound volume up or down.
- **CH P </>:** Changes channels up or down.
- **MUTE:** Toggles sound on and off.
- **CH LIST:** Launches the channel list.
- **PRE-CH:** Returns to the previous channel.
- **MENU:** Accesses the main menu of the TV or device.
- **SMART HUB:** Opens the Smart Hub interface for smart TV features.
- **GUIDE:** Displays the electronic program guide.
- **TOOLS:** Provides quick access to common tools and settings.
- **INFO:** Displays information about the current program or input.
- **Navigation Buttons (Up, Down, Left, Right, Enter):** Used to navigate menus and select options.
- **RETURN:** Returns to the previous screen or menu.

- **EXIT:** Exits the current menu or application.
- **Color Buttons (Red, Green, Yellow, Blue):** Shortcut keys for interactive functions, often context-dependent.
- **Playback Controls (REC, Play, Pause, Stop, Fast Forward, Rewind):** Control media playback.

4. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your remote control.

- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type (AAA).
- **Cleaning:** Use a soft, dry cloth to clean the remote control. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not use harsh chemicals or immerse the remote in water.
- **Storage:** Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, it is advisable to remove the batteries to prevent leakage.
- **Handling:** Avoid dropping the remote control or subjecting it to strong impacts, as this can damage internal components.

5. TROUBLESHOOTING

If you experience issues with your remote control, try the following troubleshooting steps:

Problem	Possible Cause	Solution
Remote not responding.	Dead or incorrectly inserted batteries.	Replace batteries with new ones, ensuring correct polarity.
Remote works intermittently.	Low battery power; obstruction between remote and device; infrared sensor blocked.	Replace batteries. Ensure clear line of sight to the device's sensor. Clean any dust or debris from the remote's IR emitter and the device's sensor.
Certain buttons do not work.	Dirt or debris under the button; internal damage.	Clean the remote surface. If the issue persists, the remote may be damaged and require replacement.
Remote range is poor.	Low battery power; interference from other electronic devices.	Replace batteries. Move away from sources of strong electromagnetic interference.

6. SPECIFICATIONS

Brand: GR

Model Number: PN040001993

Compatible Remote: Samsung BN59-01175N

Power Source: 2 x AAA Batteries (not included)

ASIN: B0FDMJ8WDF

Material: High-quality ABS plastic

Design: Lightweight and ergonomic

7. WARRANTY AND SUPPORT

This GR Replacement Remote Control is designed for stable and reliable performance as a direct substitute for the original Samsung BN59-01175N remote. As a replacement part, specific warranty details may vary based on your purchase location and retailer policies. Please refer to your purchase receipt or contact the seller directly for information regarding warranty coverage and support.

For any operational issues not covered in the troubleshooting section, ensure batteries are fresh and correctly inserted, and that there are no obstructions between the remote and your device. If problems persist, contact your point of purchase for further assistance.