



[Manuals.plus](#) /

› [DCS](#) /

› DCS 257629P Gas Valve Grill Green Instruction Manual

DCS 257629P

DCS 257629P Gas Valve Grill Green Instruction Manual

Model: 257629P

1. INTRODUCTION

This instruction manual provides essential information for the safe and proper installation, operation, and maintenance of your DCS 257629P Gas Valve Grill Green. This component is designed as a replacement part for compatible DCS grill models. Please read this manual thoroughly before attempting any installation or service.

2. SAFETY INFORMATION

WARNING: Improper installation, adjustment, alteration, service, or maintenance can cause property damage, injury, or death. Read the installation, operating, and maintenance instructions thoroughly before installing or servicing this equipment.

- Always disconnect the gas supply and electrical power (if applicable) to the grill before installing or servicing the gas valve.
- Installation and service must be performed by a qualified installer, service agency, or the gas supplier.
- Check for gas leaks after installation using a soap solution. Never use an open flame to check for leaks.
- Ensure proper ventilation when working with gas appliances.
- Keep flammable materials away from the grill and gas connections.

3. PACKAGE CONTENTS

Verify that all components are present and undamaged upon unpacking. If any parts are missing or damaged, do not proceed with installation and contact your supplier.

- 1 x DCS 257629P Gas Valve Grill Green



Image of the DCS 257629P Gas Valve Grill Green, showing its compact design and green-colored component. This is the primary component included in the package.

4. SETUP AND INSTALLATION

Installation of the DCS 257629P Gas Valve should only be performed by a qualified technician or service professional. Incorrect installation can lead to gas leaks, fire hazards, and serious injury.

4.1 Pre-Installation Checks

1. Ensure the grill is completely cool and disconnected from its gas supply and any electrical power.
2. Confirm that the replacement valve (DCS 257629P) matches the specifications of the original valve being replaced.
3. Gather necessary tools, which may include wrenches, screwdrivers, and leak detection solution.

4.2 Installation Steps

1. **Access the Valve:** Carefully disassemble the grill components (e.g., control panel, burner grates, heat shields) to gain access to the existing gas valve. Refer to your specific grill model's service manual for detailed disassembly instructions.
2. **Disconnect Old Valve:** Disconnect the gas line from the old valve. Be prepared for a small amount of residual gas. Remove any mounting screws or clips securing the old valve.
3. **Install New Valve:** Position the DCS 257629P Gas Valve in the correct orientation. Secure it with the appropriate mounting hardware.
4. **Connect Gas Line:** Carefully connect the gas line to the new valve. Ensure all connections are tight but do not overtighten.
5. **Leak Test:** Before reassembling the grill, turn on the gas supply and apply a soap and water solution to all new connections. Look for bubbles, which indicate a leak. If a leak is detected, turn off the gas, tighten the connection, and retest. Repeat until no bubbles appear.
6. **Reassemble Grill:** Once all connections are secure and leak-free, reassemble the grill components in reverse order of disassembly.

5. OPERATING INSTRUCTIONS

The DCS 257629P Gas Valve controls the flow of gas to the grill burner. Its operation is integrated with the grill's control knob system.

1. **Gas Supply:** Ensure the main gas supply to the grill is open.
2. **Ignition:** Push and turn the corresponding control knob to the "HIGH" or "LIGHT" position. This opens the gas valve, allowing gas to flow to the burner.
3. **Ignite Burner:** Activate the grill's igniter (usually by pressing a button or turning the knob further). The burner should ignite. If it does not ignite within a few seconds, turn off the gas, wait five minutes, and try again.
4. **Adjust Flame:** Once ignited, adjust the control knob to regulate the gas flow and achieve the desired flame intensity (e.g., LOW, MEDIUM, HIGH).
5. **Shut Down:** To turn off the burner, turn the control knob to the "OFF" position. This closes the gas valve, stopping the gas flow. For extended periods of non-use, it is recommended to close the main gas supply valve.

6. MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your gas valve. Always ensure the grill is cool and the gas supply is off before performing any maintenance.

- **Annual Inspection:** Have a qualified technician inspect the gas valve and all gas connections annually for wear, corrosion, or leaks.
- **Cleaning:** If the valve becomes dirty, gently wipe the exterior with a damp cloth. Do not use abrasive cleaners or solvents, as these can damage the valve components.
- **Lubrication:** Gas valves are typically sealed units and do not require user lubrication. If a valve becomes stiff or difficult to turn, it may indicate internal wear and should be inspected by a professional. Do not attempt to lubricate it yourself.
- **Leak Checks:** Periodically perform a leak check using a soap solution on all gas connections, especially after moving the grill or replacing gas components.

7. TROUBLESHOOTING

This section addresses common issues related to gas valve operation. For problems not listed here, or if solutions do not resolve the issue, contact a qualified service technician.

| Problem | Possible Cause | Solution |
|------------------------|---|--|
| No gas flow to burner. | Main gas supply valve closed. Gas line kinked or blocked. Faulty gas valve. | Ensure main gas supply is open. Inspect gas line for obstructions or damage. If valve is faulty, professional replacement is required. |

| Problem | Possible Cause | Solution |
|---|---|--|
| Gas leak detected (smell of gas, bubbling soap solution). | Loose connection. Damaged gas line or valve. | Immediately turn off gas supply. Tighten connections. If leak persists or valve is damaged, do not use and contact a professional. |
| Control knob is stiff or hard to turn. | Internal wear or debris. Corrosion. | Do not force the knob. The valve may need to be replaced by a qualified technician. |

8. SPECIFICATIONS

Key specifications for the DCS 257629P Gas Valve Grill Green:

- **Brand:** DCS
- **Model Number:** 257629P
- **Manufacturer Part Number:** 257629P
- **Included Components:** GAS VALVE GRILL GREEN
- **Item Dimensions (L x W x H):** 6 x 6.25 x 3.5 inches
- **UPC:** 822843968381
- **ASIN:** B0FDP8Z1MK

9. WARRANTY AND SUPPORT

For specific warranty information regarding the DCS 257629P Gas Valve, please refer to the documentation provided with your original grill purchase or contact the manufacturer, DCS (Fisher & Paykel), directly. Warranty terms may vary based on purchase location and date.

For technical support or service inquiries, please contact your authorized DCS dealer or visit the official DCS website for contact information.