

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [chartustriable](#) /

› [chartustriable 70-inch 10-Drawer Dresser with Charging Station Instruction Manual](#)

chartustriable Dresser

chartustriable 70-inch 10-Drawer Dresser with Charging Station Instruction Manual

Brand: chartustriable | Model: Dresser

INTRODUCTION

Thank you for choosing the chartustriable 70-inch 10-Drawer Dresser with Charging Station. This manual provides essential information for the safe assembly, operation, and maintenance of your new furniture. Please read it thoroughly before beginning assembly and retain it for future reference.

Key Features:

- **Spacious Storage:** Features 10 drawers, including 4 deep drawers (9.8 inches) and 6 standard drawers (5.4 inches), providing ample space for various items.
- **Integrated Charging Station:** Equipped with 2 AC outlets, 1 USB port, and 1 fast-charging USB port for convenient device charging.
- **Versatile Design:** Can function as a long dresser, TV stand (accommodates TVs up to 80 inches), or a vanity dresser.
- **Sturdy Construction:** Made from engineered wood with a stable base and anti-toppling devices for enhanced safety and durability.
- **Dimensions:** 70"W x 15.7"D x 36"H.

IMPORTANT SAFETY INFORMATION

Please read and understand all safety warnings and instructions before assembling and using this product. Failure to follow these instructions may result in serious injury or property damage.

- **Anti-Toppling Device:** Always install the included anti-toppling device to prevent the dresser from tipping over. This is crucial for safety, especially in households with children.
- **Weight Limits:** Do not exceed the recommended weight limits for the dresser top or individual drawers. Overloading can compromise stability and cause damage.
- **Assembly:** Assemble the dresser on a soft, clean surface to prevent scratches. Ensure all fasteners are securely tightened before use. Periodically check and re-tighten fasteners as needed.
- **Electrical Safety:** The integrated charging station is designed for indoor use only. Do not expose it to moisture.

Ensure the power cord is not pinched or damaged during assembly or use.

- **Placement:** Place the dresser on a level surface. Avoid placing heavy objects on top that could cause instability.

PACKAGE CONTENTS

Verify that all components and hardware are present before beginning assembly. If any parts are missing or damaged, please contact customer support.

Note: Specific part numbers and quantities are detailed in the assembly video.

ASSEMBLY INSTRUCTIONS

Assembly requires careful attention to detail. It is recommended to have at least two people for assembly. A power drill (low torque setting) and a screwdriver will be helpful.

Assembly Video Guide:

Your browser does not support the video tag.

Video Description: This comprehensive video provides step-by-step instructions for assembling the 10-drawer dresser. It covers attaching drawer slides, assembling drawer frames, connecting main panels, and installing the charging station. Follow along carefully for a smooth assembly process.

General Assembly Steps (Refer to video for detailed visuals):

1. **Prepare Components:** Unpack all parts and lay them out on a soft, clean surface. Identify each part using the labels provided in the video.
2. **Assemble Drawer Slides:** Attach the drawer slides to the side panels of the dresser frame using the specified screws (e.g., M3.5*12 screws). Ensure they are aligned correctly.
3. **Construct Side Frames:** Connect the vertical side panels (e.g., parts 5, 6, 7, 8) using cam locks and dowels.
4. **Attach Horizontal Supports:** Secure the horizontal support bars (e.g., parts 9, 10) between the vertical side frames using cam locks and dowels.
5. **Install Top Panels:** Carefully place and secure the top panels (e.g., parts 1, 2) onto the assembled frame using cam locks and screws.
6. **Assemble Drawers:** For each drawer, attach the side panels to the front and back panels using screws and dowels. Slide the bottom panel into the grooves.
7. **Install Drawer Handles:** Attach the handles to the front of each drawer.
8. **Integrate Charging Station:** Insert the charging station into the pre-cut opening on the top panel and secure it with screws. Route the power cord as instructed.
9. **Insert Drawers:** Carefully slide each assembled drawer into its designated slot on the dresser frame.
10. **Install Anti-Toppling Device:** Securely attach the anti-toppling device to the back of the dresser and to a wall stud, following the instructions provided with the device.

OPERATING INSTRUCTIONS

Using the Charging Station:

- Plug the dresser's main power cord into a standard wall outlet.
- Use the 2 AC outlets for devices requiring standard power.
- Utilize the 1 USB port and 1 fast-charging USB port for charging compatible electronic devices such as smartphones, tablets, or smartwatches.
- Ensure devices are compatible with the charging station's output specifications (e.g., 5V/2A for USB ports, 20W for

fast charging).

Drawer Usage:

- Open and close drawers gently using the handles.
- Avoid slamming drawers to prevent damage to the slides and contents.
- Distribute weight evenly within drawers to maintain balance and smooth operation.

MAINTENANCE

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners that could damage the finish.
- **Dusting:** Regularly dust the dresser with a dry, soft cloth.
- **Hardware Check:** Periodically inspect all screws, cam locks, and other fasteners. Tighten any loose hardware to ensure stability and safety.
- **Drawer Slides:** If drawers become stiff, a small amount of silicone-based lubricant can be applied to the drawer slides.
- **Avoid Direct Sunlight:** Prolonged exposure to direct sunlight can cause fading or discoloration of the wood finish.
- **Moisture:** Protect the dresser from excessive moisture and humidity. Wipe up spills immediately.

TROUBLESHOOTING

- **Drawers not closing smoothly:** Check if the drawer slides are properly aligned and free of obstructions. Ensure all assembly hardware for the drawers and frame is tightened.
- **Dresser feels wobbly:** Verify that the dresser is on a level surface. Re-tighten all cam locks and screws in the main frame. Ensure the anti-toppling device is securely installed.
- **Charging station not working:** Check if the dresser's main power cord is securely plugged into a functional wall outlet. Test the charging station with different devices to rule out device-specific issues.
- **Missing parts:** If any parts are missing upon arrival, please contact chartustriable customer support for assistance.

SPECIFICATIONS

Brand	chartustriable
Model Name	Dresser
Material	Engineered Wood
Finish Type	Painted
Product Dimensions (D x W x H)	15.7" x 70" x 36"
Number of Drawers	10 (4 deep, 6 standard)
Item Weight	193 Pounds
Charging Station	2 AC Outlets, 1 USB Port, 1 Fast Charging USB Port
Color	Rustic Brown (This manual refers to the Rustic Brown model, but other colors may be available)

WARRANTY AND SUPPORT

For any questions, missing parts, or warranty claims, please contact chartustriable customer support directly. Please have your purchase information and model number ready for faster service.

PRODUCT OVERVIEW IMAGES



Image Description: An overhead view of the dresser with several drawers open, highlighting the different depths of the 4 deep (8.2 inches) and 6 standard (5.5 inches) drawers. Items like folded clothes and accessories are neatly stored inside, demonstrating the ample storage capacity.



Image Description: A close-up shot of the dresser's top surface, focusing on the integrated charging station. It shows two AC outlets, one USB port, and one fast-charging USB port, with a phone, tablet, and smartwatch connected for charging.

Multiple Applications



Image Description: A collage demonstrating the dresser's versatility in different settings. One panel shows it as a TV stand accommodating a large television, another as a beauty vanity with a mirror, and a third as a general large 10-drawer dresser.



Image Description: A diagram illustrating the precise dimensions of the dresser (70.86"W x 15.7"D x 36"H) and its individual drawers, including their width, depth, and height (e.g., 8.2" and 5.5" deep drawers).