

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [AIRMSEN](#) /

› [AIRMSEN 6.3 QT Glass Air Fryer Instruction Manual](#)

AIRMSEN PAF-6002BD-1A

AIRMSEN 6.3 QT Glass Air Fryer Instruction Manual

Model: PAF-6002BD-1A | Brand: AIRMSEN

INTRODUCTION

Thank you for choosing the AIRMSEN 6.3 QT Glass Air Fryer. This appliance is designed to provide a healthier and more efficient way to cook your favorite meals. Featuring a non-toxic glass bowl and stainless steel components, it offers versatile cooking options with precise temperature control and quiet operation. Please read this manual thoroughly before first use to ensure safe and optimal performance.

SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury.

- **Read All Instructions:** Familiarize yourself with the appliance's operation before use.
- **Hot Surfaces:** The appliance surfaces, especially the glass bowl, become hot during operation. Use oven mitts or the stay-cool handle when handling.
- **Electrical Safety:** Do not immerse the main unit (heating element) in water or other liquids. Ensure the power cord is not damaged.
- **Placement:** Place the air fryer on a stable, heat-resistant surface. Ensure adequate ventilation around the unit.
- **Overheat Protection:** The unit features built-in overheat protection and auto shut-off for safety.
- **Auto-Pause:** The Smart Auto-Pause feature stops cooking when the lid is lifted and resumes when closed.
- **Children:** Keep the appliance out of reach of children.

PRODUCT OVERVIEW AND COMPONENTS

The AIRMSEN Glass Air Fryer consists of several key components designed for ease of use and versatility.

- **Main Heating Unit:** Contains the 1600W Turbo Heating System and control panel.

- **6.3 QT Heat-Resistant Glass Bowl:** The primary cooking container, offering a 360° clear view.
- **18/8 Food-Grade Stainless Steel Tray:** Sits inside the glass bowl for air frying.
- **Stay-Cool Handles:** Integrated into the glass bowl holder for safe handling.
- **Heat-Insulated Base:** Protects countertops from heat.

100% No-Toxic Food-Contact Materials

Heat-Resistant Tempered Glass
& 304 Stainless Steel

- ✓ No Coatings
- ✓ Lead-Free
- ✓ BPA-Free
- ✓ PFAS-Free
- ✓ Microplastic-Free



Image: All components of the AIRMSEN 6.3 QT Glass Air Fryer, including the main heating unit, glass bowl, stainless steel tray, and lids.

SETUP

1. **Unpack:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.

2. **Clean:** Before first use, wash the glass bowl and stainless steel tray with warm, soapy water. Rinse thoroughly and dry completely. Wipe the main heating unit with a damp cloth.
3. **Assemble:** Place the glass bowl securely into its insulated base. Insert the stainless steel tray into the glass bowl. Position the main heating unit on top of the glass bowl, ensuring it sits flush.
4. **Placement:** Place the assembled air fryer on a flat, stable, heat-resistant surface, away from walls or other appliances to allow for proper air circulation.



Image: The AIRMOSEN 6.3 QT Glass Air Fryer fully assembled on a kitchen counter, ready for use.

OPERATING INSTRUCTIONS

The AIRMOSEN Glass Air Fryer offers both preset functions and manual control for versatile cooking.

Basic Operation:

1. **Prepare Food:** Place your ingredients on the stainless steel tray inside the glass bowl. For best results, avoid overcrowding.
2. **Secure Lid:** Ensure the main heating unit is properly seated on the glass bowl.
3. **Power On:** Plug the appliance into a grounded electrical outlet. The display will illuminate.
4. **Select Cooking Mode:**
 - **Preset Functions:** Choose from 4 smart presets: Fries, Steak, Chicken, and Bake. Press the corresponding button on the control panel. The appliance will automatically set the optimal temperature and time.
 - **Manual Control:** Use the temperature and time adjustment buttons (+/-) to set your desired cooking temperature (105–400°F) and time (1–60 minutes).
5. **Start Cooking:** Press the Start/Pause button to begin the cooking cycle.
6. **Monitoring:** Utilize the 360° clear glass bowl to monitor cooking progress without opening the lid.
7. **Flip Reminder:** For certain foods, the appliance may beep halfway through the cooking cycle to remind you to flip or shake the food for even cooking.
8. **Completion:** The appliance will beep when the cooking cycle is complete. Carefully remove the heating unit and use oven mitts to handle the hot glass bowl.

Tips for Best Results:

- Preheat the air fryer for 3-5 minutes for optimal results, especially for crispy foods.
- Shake or flip food halfway through the cooking time for even browning.
- For extra crispy results, lightly spray food with oil before air frying.
- Do not overfill the basket; cook in batches if necessary.

4-in-1 Versatile Cooking



Image: Close-up of the AIRMSEN 6.3 QT Glass Air Fryer's intuitive control panel, showing the four preset options (Fries, Steak, Chicken, Bake) and manual temperature/time adjustments.

360° Stable, Even Heating

1600w



Adjustable Temp: 105–400°F
(5°F increments)



Time: 1–60 min
(1-min increments)

Image: Chicken drumsticks cooking inside the transparent glass bowl of the AIRMSEN Air Fryer, demonstrating the 360° clear view feature.

Your browser does not support the video tag.

Video: Official product video demonstrating the AIRMSEN 6.3QT Glass Air Fryer in action, highlighting its features and ease of use.

MAINTENANCE & CLEANING

Proper cleaning and maintenance will extend the life of your AIRMSEN Glass Air Fryer.

- **Unplug:** Always unplug the appliance and allow it to cool completely before cleaning.
- **Dishwasher Safe:** The glass bowl and 18/8 stainless steel tray are 100% dishwasher safe. They can

also be hand-washed with warm, soapy water.

- **No Non-Stick Coatings:** Since there are no fragile non-stick coatings, you can scrub the tray with a brush without worrying about scratches.
- **Main Unit:** Wipe the exterior of the main heating unit with a damp cloth. Do not immerse it in water.
- **Storage:** Store the clean and dry appliance in a cool, dry place.



Image: The glass bowl and stainless steel tray of the AIRMSEN Air Fryer being placed into a dishwasher, illustrating their dishwasher-safe design.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outage; lid not properly seated.	Check power connection; ensure lid is securely placed.
Food is not cooked evenly.	Overcrowding; food not flipped/shaken.	Cook in smaller batches; flip or shake food halfway through.
Food is not crispy.	Not enough oil (if applicable); temperature too low.	Lightly spray food with oil; increase cooking temperature.
White smoke coming from appliance.	Cooking fatty foods; residue from previous use.	This is normal for fatty foods. Clean the appliance thoroughly after each use.

SPECIFICATIONS

Feature	Detail
Model Name	PAF-6002BD-1A
Capacity	6.3 Quarts
Material	Borosilicate Glass, Stainless Steel
Output Wattage	1600 Watts

Feature	Detail
Voltage	120 Volts
Control Method	Push Button
Min Temperature Setting	105 Degrees Fahrenheit
Max Temperature Setting	400 Degrees Fahrenheit
Is Dishwasher Safe	Yes (Glass Bowl, Stainless Steel Tray)
Product Dimensions	10.6"D x 12.8"W x 13.8"H
Item Weight	11 Pounds

WARRANTY & SUPPORT

The AIRMSEN 6.3 QT Glass Air Fryer comes with a **1-Year Manufacturer's Warranty** from the date of purchase, covering defects in materials and workmanship under normal use.

For warranty claims, technical support, or any questions regarding your product, please contact AIRMSEN customer service. Refer to the contact information provided in your product packaging or visit the official AIRMSEN website for assistance.

Please have your model number (PAF-6002BD-1A) and proof of purchase ready when contacting support.