

## pofoto PD10

# pofoto PD10 12.5" Portable DVD Player User Manual

Model: PD10

		<a href="#">Introduction</a>	<a href="#">What's in the Box</a>	<a href="#">Product</a>		
<a href="#">Overview</a>	<a href="#">Setup</a>	<a href="#">Operation</a>	<a href="#">Maintenance</a>	<a href="#">Troubleshooting</a>	<a href="#">Specifications</a>	<a href="#">Warranty &amp; Support</a>

## 1. INTRODUCTION

---

This manual provides essential instructions for the safe and efficient operation of your pofoto PD10 12.5" Portable DVD Player. Please read this manual thoroughly before using the device and retain it for future reference.

## 2. WHAT'S IN THE BOX

---

Verify that all items listed below are included in your package:

- 1x 12.5" Portable DVD Player (Model: PD10)
- 1x AC Charger
- 1x Car Charger
- 1x 3-in-1 AV Cable
- 1x Car Headrest Mount
- 1x Remote Control
- 1x User Manual

Your browser does not support the video tag.

**Video: Official Unboxing POFOTO 10.5-inch Portable DVD Player PD10**

This video demonstrates the unboxing process and shows all included accessories for the pofoto PD10 Portable DVD Player.

## 3. PRODUCT OVERVIEW

---

### 3.1. 10.5" HD Swivel Screen

The pofoto PD10 features a 10.5-inch HD LCD screen with a resolution of 1024x600 pixels, offering clear

visuals. The screen can rotate 270 degrees and flip 180 degrees, allowing for flexible viewing angles.



## Portable DVD Player

Entertainment On the Move – Boredom Stays Behind!

Image: Vivid Swivel Screen

The 10.5-inch HD LCD screen provides clear visuals and can be swiveled for optimal viewing.

### 3.2. Intuitive Button Design

The player includes two sets of operating controls: one for general use and another for on-board viewing. Buttons located below the screen allow for easy control of playback, pause, and volume, even when the device is mounted.



Image: Control Buttons

Detailed view of the intuitive control buttons located on the player's base.

### 3.3. Extended Battery Life

Equipped with a 2500 mAh battery, the pofoto PD10 offers up to 6 hours of continuous playback. Charging options include an AC adapter and a car charger for convenience.



#### Image: Exceptional Battery Life

The player features a 2500 mAh battery for up to 6 hours of continuous use, with AC and car charging options.

### 3.4. Region-Free & Multiple Format Support

The player supports direct playback of various disc formats including DVD, DVD±R, DVD±RW, CD, CD-R, CD-RW, VCD, and SVCD. It also supports multimedia files via USB and SD card (up to 32GB), including VOB, AVI, MP3, WMA, JPG, JPEG, MPG1/MPG2 (resolution 720x756). Blu-ray and pirated discs are not supported. The region-free design allows playback from any region.




#### Image: All Regions & Multiple Formats

The device supports various DVD, CD, video, audio, and image formats from any region.

### 3.5. Seamless Big-Screen Sync

Connect the portable DVD player to a TV or projector using the included AV cable for a larger viewing experience. The auto-resume playback function ensures that content continues from where it was last stopped.

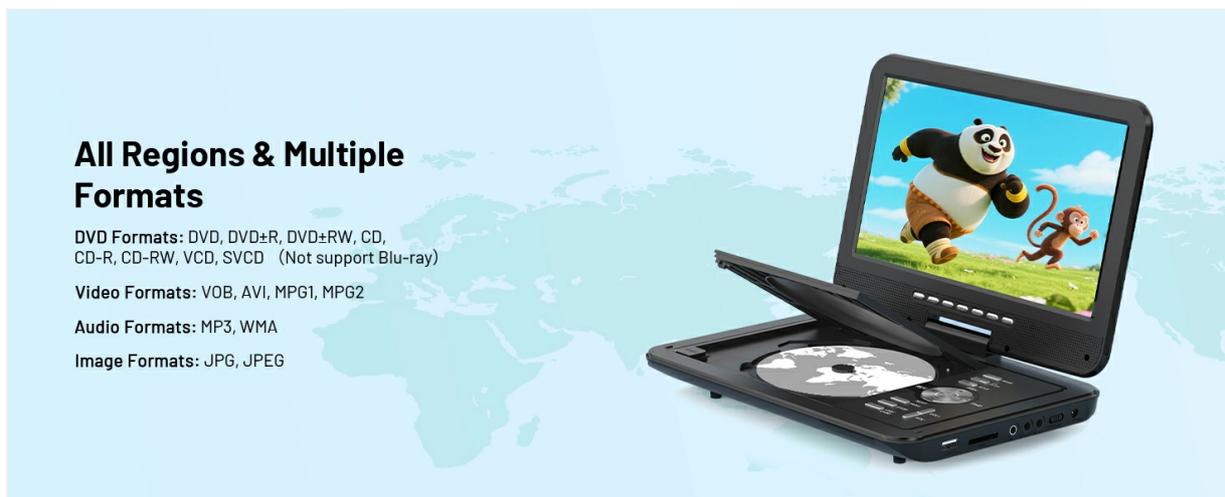

#### Image: Sync to a Larger Screen

The portable DVD player can be connected to a TV or projector for an enhanced viewing experience.

### 3.6. Audio Options

The player features built-in dual speakers for direct audio output. For private listening, headphones can be connected via the 3.5mm audio port. External speakers can also be connected.



## Vivid Swivel Screen

The 10.5" HD LCD (1024×600) delivers 1.56× sharper visuals than standard displays, with vibrant, vivid colors.



10.5 in HD LCD



1024\*600 Pixels



Swivelable Screen

### Image: Your Sound, Your Way

The player offers built-in dual speakers, headphone connectivity, and the option to connect external speakers.

## 4. SETUP

---

### 4.1. Initial Charging

Before first use, fully charge the portable DVD player using the provided AC adapter. This ensures optimal battery performance.

Your browser does not support the video tag.

**Video: Fully charge the portable DVD player before using it.**

This video demonstrates the initial charging process for the portable DVD player.

### 4.2. Inserting a DVD

Open the disc cover, carefully place the DVD onto the spindle with the label side facing up, and gently press down to secure it. Close the disc cover. The player will automatically detect and begin playing the DVD.

Your browser does not support the video tag.

**Video: Features of POFOTO 10-inch portable DVD player**

This video includes a demonstration of inserting a DVD and other features.

### 4.3. Car Headrest Mount Installation

To install the player in the car headrest mount:

1. Fold the DVD player into its compact form.
2. Open the hook-and-loop straps on the car headrest mount.
3. Insert the folded portable DVD player into the mount.
4. Secure the player by closing the hook-and-loop straps.
5. Attach the mount to the car headrest using the adjustable straps and buckles. Ensure a snug fit to prevent movement during travel.

Your browser does not support the video tag.

**Video: How to mount portable DVD player to car headrest?**

This video provides a step-by-step guide on how to securely mount the portable DVD player to a car headrest.

Your browser does not support the video tag.

## Video: How to install portable DVD player into a car headrest mount

This video demonstrates the installation process of the portable DVD player into the car headrest mount.

## 5. OPERATION

---

### 5.1. Basic Playback Controls

Use the intuitive buttons located on the player or the remote control for functions such as Play, Pause, Stop, Volume Up, and Volume Down. Refer to the user manual for a detailed diagram of all controls.

### 5.2. Connecting to External Displays

To connect the player to a television or projector, use the included 3-in-1 AV cable. Connect the yellow plug to the video input of your TV/projector, and the red and white plugs to the audio inputs. Select the correct AV input source on your external display.

### 5.3. Last Memory Function

The player is equipped with a last memory function, which automatically resumes playback from the exact point where it was last powered off. This feature ensures an uninterrupted viewing experience.

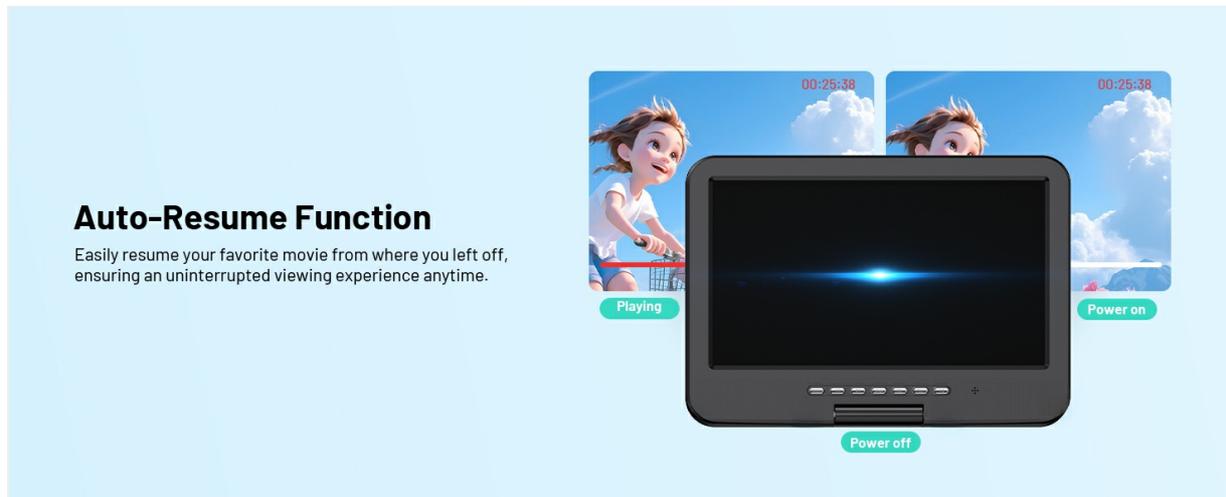


Image: Auto-Resume Function

The player automatically resumes playback from where you left off, ensuring an uninterrupted viewing experience.

### 5.4. USB and SD Card Playback

Insert a USB drive or SD card (up to 32GB) into the designated ports to play supported multimedia files. Use the player's menu to navigate and select files.

## 6. MAINTENANCE

---

- **Cleaning:** Use a soft, dry cloth to clean the player's exterior. For the screen, use a screen-specific cleaning solution and a microfiber cloth. Avoid abrasive cleaners.
- **Disc Care:** Handle discs by their edges. Store them in their cases to prevent scratches. Clean dirty discs with a soft, lint-free cloth, wiping from the center outwards.
- **Storage:** When not in use, store the player in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery:** To prolong battery life, avoid fully discharging the battery frequently. Charge it regularly, even if not in constant use.

## 7. TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Player does not turn on	Low battery or power adapter issue	Ensure the player is fully charged or connected to a working power source. Check the power adapter and cable for damage.
No disc playback	Disc is dirty, scratched, or unsupported format	Clean the disc, try a different disc, or ensure the disc format is supported (Blu-ray and pirated discs are not supported).
No sound	Volume too low, headphones connected, or external speaker issue	Increase volume. Disconnect headphones if using internal speakers. Check connections if using external speakers.
Poor picture quality on TV	Incorrect AV connection or TV input	Ensure AV cable is correctly connected (yellow to video, red/white to audio). Select the correct AV input on your TV.

## 8. SPECIFICATIONS

---

Feature	Detail
Screen Size	10.5 Inches
Display Type	LCD
Screen Resolution	1024x600 pixels
Product Dimensions	10.24 x 7.09 x 1.18 inches
Item Weight	3.52 pounds
Battery	2500 mAh Lithium Polymer (up to 6 hours playback)
Supported Disc Media	DVD, DVD±R, DVD±RW, CD, CD-R, CD-RW, VCD, SVCD
Supported Digital Media	USB, SD Card (up to 32GB)
Supported Formats	VOB, AVI, MP3, WMA, JPG, JPEG, MPG1/MPG2 (720x756 resolution)
Color	Black
Model Number	PD10

## 9. WARRANTY & SUPPORT

---

Your pofoto PD10 Portable DVD Player comes with a 24-month warranty. If you encounter any issues or require assistance, please contact pofoto customer support. Your satisfaction is our priority, and we aim to respond to inquiries within 24 hours.



**Image: Guaranteed Service**

Information on customer support response times, warranty duration, and return policy.