

[Manuals.plus](#) /

› [PRETZI](#) /

› PRETZI 70-inch Modern Fireplace TV Stand with 36-inch Electric Fireplace User Manual

PRETZI 70-inch Modern Fireplace TV Stand

PRETZI 70-inch Modern Fireplace TV Stand with 36-inch Electric Fireplace User Manual

Model: 70-inch Modern Fireplace TV Stand (White + Gold Posts With White Fireplace)

1. INTRODUCTION

Thank you for purchasing the PRETZI 70-inch Modern Fireplace TV Stand. This manual provides essential information for the safe assembly, operation, and maintenance of your new entertainment center. Please read all instructions carefully before beginning assembly and retain this manual for future reference.

2. SAFETY INFORMATION

Please observe the following safety precautions:

- Handle all components with care due to the product's weight.
- Ensure both packages (TV stand and fireplace insert) have arrived before starting assembly. They may arrive on different days.
- Exercise caution around the electric fireplace to avoid burns, especially when the heating function is active.
- Always follow the provided assembly instructions for safe and secure installation.
- Do not overload the TV stand. The tabletop has a load capacity of 250 lbs.
- Keep children and pets away from the electric fireplace when it is in operation.

3. PACKAGE CONTENTS

Your PRETZI TV Stand and Electric Fireplace are shipped in two separate packages. Please verify all parts are present before assembly. Refer to the detailed parts list included in your assembly guide for specific component identification.

3.1. TV Stand Components

Includes all wooden panels, stainless steel brackets, hardware, and LED light strips for the TV stand.

3.2. Electric Fireplace Components

Includes the 36-inch electric fireplace insert, remote control, and decorative crystals.

PRODUCT SIZE

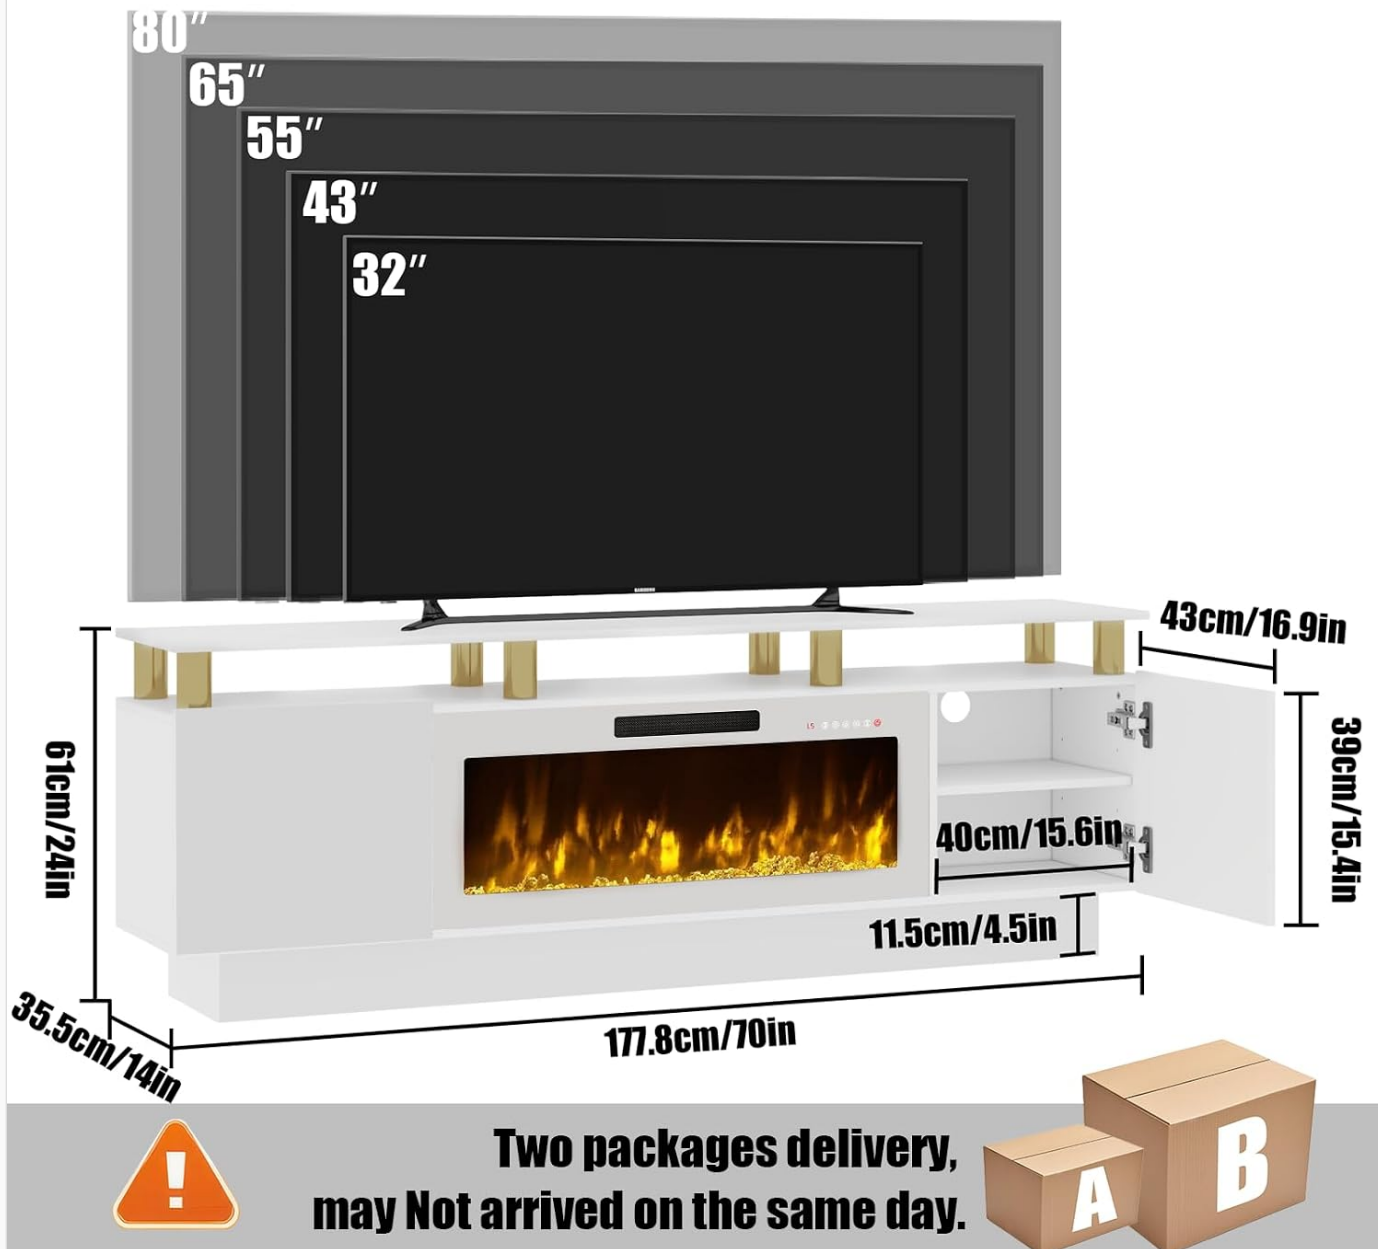


Figure 1: Product dimensions and indication of two-package delivery. The TV stand measures 70 inches (177.8cm) in width, 14 inches (35.5cm) in depth, and 24 inches (61cm) in height. The fireplace opening is 15.6 inches (40cm) high and 4.5 inches (11.5cm) deep. The image also shows a TV up to 80 inches can be supported.

4. PRODUCT OVERVIEW

The PRETZI 70-inch Modern Fireplace TV Stand is designed to accommodate TVs up to 80 inches, offering both aesthetic appeal and practical functionality. It features a 36-inch electric fireplace and integrated LED lighting.

- **2-in-1 Design:** Combines a TV stand with an electric fireplace.
- **Premium Materials:** Constructed from modern MDF and fine wood grain particle board for durability, scratch resistance, and a waterproof, odor-free finish. The tabletop has a special textured design.
- **Ample Storage:** Features cabinets with mirrored doors and robust stainless steel brackets for open storage of entertainment devices and decor.
- **Cable Management:** Integrated cable holes help maintain an organized and clutter-free appearance.
- **LED Lighting:** Offers 20 LED color combinations for customizable ambiance.
- **Electric Fireplace:** 36-inch insert with 750W and 1500W heating modes, a 1-8 hour timer, and 12 realistic flame

effects with 5 levels of brightness.



Figure 2: Key features of the TV stand, including cable management holes, open shelving, storage cabinets with adjustable shelves, a thickened base for stability, and high-gloss doors.

5. SETUP

Assembly is required for this product. It is recommended that two people assemble the unit. Detailed instructions, pre-drilled holes, and labeled parts are included to facilitate the process.

5.1. Pre-Assembly Checks

- Unpack all components and verify against the parts list.
- Ensure you have all necessary tools (e.g., screwdriver, hammer).
- Clear a spacious area for assembly.

5.2. Assembly Steps

1. Follow the step-by-step instructions provided in the separate assembly manual.
2. Pay close attention to the orientation of parts, especially when installing the LED lighting strips. Ensure USB lighting connections are installed inward to reach the fireplace.
3. Before fully inserting the fireplace, place the decorative crystals inside the glass frame. This is done by removing one screw to access the interior.
4. Once assembled, ensure all connections are secure and the stand is stable.

Video 1: An overview of the 70-inch Modern Fireplace TV Stand, showcasing its features and design. This video provides a visual guide to the product's appearance and functionality.

6. OPERATING INSTRUCTIONS

6.1. Electric Fireplace Operation

The electric fireplace can be controlled via the integrated panel or the included remote control.

- **Power On/Off:** Press the power button on the unit or remote.
- **Heat Settings:** Select between 750W and 1500W heating modes. The fireplace can operate with or without heat.
- **Flame Effects:** Choose from 12 realistic flame effects.
- **Flame Brightness:** Adjust the flame brightness through 5 levels (L1-L5).
- **Timer:** Set the operational timer for 1 to 8 hours.



8-Hour Timer




65°F /95°F
36"



750W/1500W
Heater



Overheating
Protection
4.45"

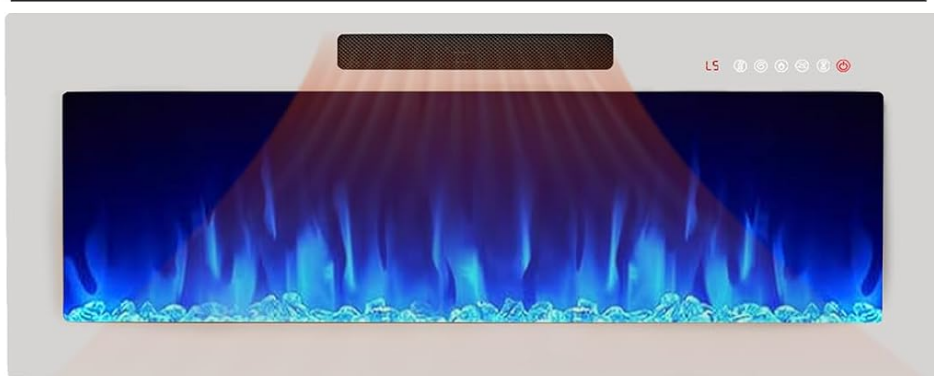

13.31"



13.78"

12 Flame Colors + 5 Level Flame Brightness



Dim **L1** **L2** **L3** **L4** **L5** **Bright**

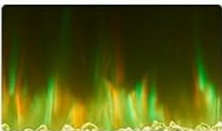


Figure 3: Controls for the 36-inch electric fireplace, illustrating the 8-hour timer, temperature settings (65°F/95°F), 750W/1500W heater, overheating protection, 12 flame colors, and 5 levels of flame brightness (Dim to Bright).

6.2. LED Light Operation

The integrated LED lights offer 20 color combinations to enhance your viewing experience.

- Use the dedicated remote control (if separate) or integrated controls to cycle through the 20 color options.
- Adjust brightness as desired.



Figure 4: The TV stand illuminated by its 20-color LED lights, demonstrating the range of available colors and the remote control used to select them.

7. MAINTENANCE

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners.
- **Fireplace:** Periodically check the air intake/output vents of the electric fireplace for dust accumulation and clean as needed to ensure proper airflow.
- **General Care:** Ensure all screws and connections remain tight. Re-tighten if any looseness is detected.

8. TROUBLESHOOTING

- **Fireplace Not Turning On:** Check if the power cord is securely plugged into a working outlet. Ensure the power button on the unit or remote is pressed.
- **No Heat from Fireplace:** Verify that the heating mode is selected and not just the flame effect. Check for any

obstructions in the heater vents.

- **LED Lights Not Working:** Ensure the LED light strip is properly connected and powered. Check the remote control batteries if applicable.
- **Assembly Difficulties:** If instructions are unclear, refer to the diagrams carefully. Contact customer support for assistance if you encounter persistent issues.
- **Damaged Parts:** If any parts arrive damaged or become damaged during assembly, contact customer support for replacements.

9. SPECIFICATIONS

Feature	Specification
Brand	PRETZI
Model	70-inch Modern Fireplace TV Stand
Color	White + Gold Posts With White Fireplace
TV Stand Dimensions (L x W x H)	70 x 14 x 24 inches (177.8 x 35.5 x 61 cm)
Electric Fireplace Size	36 inches (width)
Item Weight	76.7 Pounds
Material Type	Alloy Steel, Wood (MDF, Particle Board)
Load Capacity (Tabletop)	250 lbs
Heater Power	750W / 1500W
Flame Effects	12 colors, 5 brightness levels
LED Lights	20 color combinations
Assembly Required	Yes



Figure 5: Visual representation of the product's detailed specifications, including load capacity, TV stand size, and electric fireplace size, along with a reminder about two-package delivery.

10. WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the documentation included with your purchase or contact PRETZI customer service directly. 24-hour customer support is available for assistance with any questions or issues you may encounter.

© 2026 PRETZI. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question