

[Manuals.plus](#) /

> [TELESIN](#) /

> TELESIN S2 POV Neck Mount + Magnetic Chest Mount Quick Release User Manual

TELESIN S2

TELESIN S2 POV Neck Mount + Magnetic Chest Mount Quick Release User Manual

Model: S2

1. INTRODUCTION

The TELESIN S2 POV Neck Mount and Magnetic Chest Mount Quick Release system is designed to provide stable, hands-free camera mounting for action cameras and smartphones. This manual provides instructions for proper setup, operation, and maintenance of your device to ensure optimal performance and longevity.

2. SAFETY INFORMATION

- Ensure all connections are secure before use to prevent accidental detachment of your camera.
- Do not use the mount in situations where it could interfere with your movement or safety.
- Avoid exposing the product to extreme temperatures or corrosive substances.
- Keep out of reach of children.

3. PACKAGE CONTENTS

Please verify that all items are present in your package:

- TELESIN S2 POV Neck Mount
- Magnetic Chest Mount Quick Release Harness
- Quick Release Mount Adapter
- Mounting Screw

4. PRODUCT OVERVIEW

The TELESIN S2 system offers two primary mounting options: a flexible neck mount and an adjustable chest harness, both featuring a quick-release mechanism for easy camera attachment and detachment.



Image 1: Overview of the TELESIN S2 POV Neck Mount and Magnetic Chest Mount Quick Release system with an action camera attached.

5. SETUP INSTRUCTIONS

5.1. Assembling the Chest Mount

1. Unpack the chest mount harness.
2. Adjust the straps to fit your body comfortably. The harness features an adaptive fit silicone liner and adjustable buckles for a secure fit over various clothing layers.
3. Secure the harness using the one-handed quick-release buckle. Ensure it is snug but not restrictive.

Soft & Stable Shooting



Image 2: A person wearing the TELESIN S2 chest mount harness, illustrating the comfortable and stable fit provided by the elastic straps and padded design.

5.2. Attaching Your Camera

1. Attach your action camera or smartphone holder (not included) to the quick-release mount adapter using the provided mounting screw.
2. Align the quick-release mount adapter with the magnetic base on either the neck mount or the chest harness.
3. Press the adapter firmly into the base until it clicks into place, indicating a secure connection.

One-Handed Quick Operation Crisp & Clear Audio Feedback

One-Handed Assembly, Effortless and Simple



Image 3: A close-up view demonstrating the one-handed quick release operation for attaching or detaching the camera from the mount.

5.3. Using the Neck Mount

1. Place the flexible neck mount around your neck.
2. Attach your camera to the quick-release adapter on the neck mount as described in section 5.2.
3. For increased stability during strenuous activities, utilize the included chest strap to secure the neck mount to your body. This prevents shaking and ensures stable shooting.

STABILIZING STRAPS AGAINST SHAKING

Stabilizes without
wobbling
even in motion

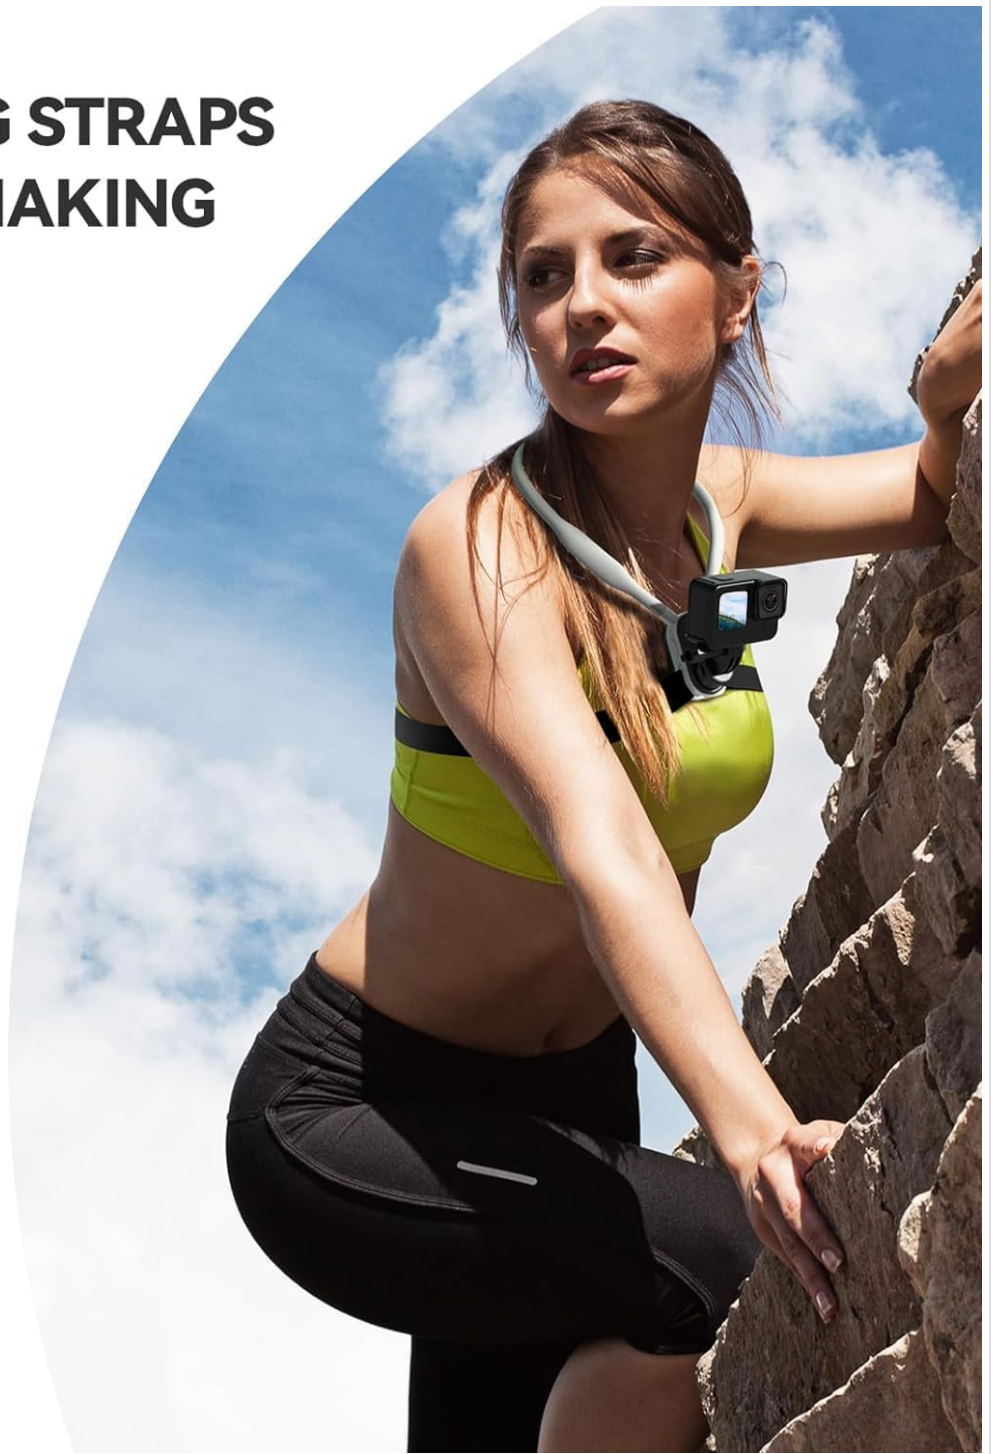


Image 4: A woman rock climbing while wearing the TELESIN S2 neck mount, illustrating how the stabilizing straps prevent wobbling and maintain camera position during motion.

6. OPERATING INSTRUCTIONS

6.1. Quick Release System

The TELESIN S2 features a one-step quick-release ecosystem. To detach your camera, simply press the quick-release button or lever on the mount adapter and lift the camera away. To reattach, align and press until it locks.

FULLY ADAPTED TO QUICK RELEASE FITTINGS

All-in-one adaptation
quick and easy



Image 5: An illustration of the TELESIN S2 quick release ecosystem, demonstrating its compatibility with various accessories such as backpack clips, chest straps, and clamp mounts.

6.2. Achieving Stable Shots

The design of the S2 mount, particularly the padded chest harness and the stabilizing strap for the neck mount, is engineered to minimize camera shake. For best results, ensure the mount is adjusted snugly to your body. During high-motion activities, the chest mount generally offers superior stability.

Enhanced Stability

No Shakes, Even During Movement
Stronger Camera Stability for Smooth Shots in Action.



Comparison:



With TELESIN Vest Chest Strap



Without TELESIN Chest Strap

Image 6: A comparison image illustrating the enhanced stability achieved when using the TELESIN S2 vest chest strap during a cycling activity, compared to not using it.

First-Person Perspective, Capture It All

The Vest Chest Strap for Hands-Free, Dynamic Shooting



Skateboarding & Parkour



Road Cycling



Freestyle Skiing

Image 7: A collage showcasing first-person perspective shots captured during activities such as skateboarding, road cycling, and freestyle skiing, demonstrating the versatility of the TELESIN S2 mount.

7. MAINTENANCE

7.1. Cleaning

Wipe the mount components with a damp cloth to remove dirt or sweat. For the silicone and polymer parts, a mild soap solution

can be used. Ensure all parts are completely dry before storage.

7.2. Storage

Store the mount in a cool, dry place away from direct sunlight and harsh chemicals. Avoid placing heavy objects on top of the mount to prevent deformation.

8. TROUBLESHOOTING

8.1. Camera Not Securing Properly

- Ensure the quick-release adapter is correctly aligned with the magnetic base.
- Apply firm, even pressure until you hear a click, indicating it is locked.
- Check for any obstructions or debris in the quick-release mechanism.

8.2. Excessive Camera Shake

- Tighten all straps and connections on the chest harness or neck mount.
- For the neck mount, ensure the additional chest strap is used and properly secured.
- Verify that your camera is securely attached to the quick-release adapter.

9. SPECIFICATIONS

Brand	TELESIN
Model Name	S2
Model Number	S2
Color	Black
Compatible Devices	Cameras, Smartphones (requires extra phone holder and 1/4 adapter, not included)
Mounting Type	Body-worn (Neck, Chest)
Special Feature	Quick Release Button
Material	Silicone, Lightweight Polymer

10. WARRANTY AND SUPPORT

TELESIN products are manufactured to high-quality standards. For warranty information or technical support, please refer to the official TELESIN website or contact your retailer. Please retain your proof of purchase for any warranty claims.