

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [KEYAYEYA](#) /

› KEYAYEYA ZONCN Variable Speed Drive Control Panel User Manual

KEYAYEYA DP2-F-O

KEYAYEYA ZONCN Variable Speed Drive Control Panel

Model: DP2-F-O

1. INTRODUCTION

This manual provides essential information for the safe and effective use of the KEYAYEYA ZONCN Variable Speed Drive Control Panel, specifically model DP2-F-O. This control panel is designed to be compatible with various ZONCN Variable Speed Drives, including models DP2-A-2, DP2-F-O, DP2-F-5, DP2-F-1, DP6-E-2, DP8-E-O, DP8-A-5, DP8-A-O, DP8-G-5, and DP3-B-1. Please read this manual thoroughly before installation and operation to ensure proper functionality and safety.

2. SAFETY INFORMATION

Always observe the following safety precautions to prevent injury or damage to the equipment:

- **Electrical Hazard:** This device operates with electrical components. Installation and maintenance should only be performed by qualified personnel.
- **Power Disconnection:** Always disconnect power to the Variable Speed Drive (VSD) before installing, removing, or servicing the control panel.
- **Proper Connections:** Ensure all connections are secure and correctly wired according to the VSD's main instruction manual. Incorrect wiring can lead to malfunction or damage.
- **Environmental Conditions:** Do not expose the control panel to excessive moisture, dust, or extreme temperatures.
- **Intended Use:** Use this control panel only for its intended purpose as an interface for compatible ZONCN Variable Speed Drives.

3. PRODUCT OVERVIEW

The DP2-F-O control panel provides an intuitive interface for managing your Variable Speed Drive. Key components include:

- **Rotary Knob:** Used for precise speed adjustment, typically ranging from 0 to 100% of the maximum set frequency.
- **Arrow Buttons (▲ / ▼):** Used for navigating menus, adjusting parameters, and incrementing/decrementing values.
- **PRG Button:** Enters or exits the programming mode for setting drive parameters.

- **ENTER/DISP Button:** Confirms selections, enters sub-menus, or toggles display modes (e.g., showing frequency, current, voltage).
- **RUN Button:** Initiates the operation of the connected Variable Speed Drive.
- **STOP Button:** Halts the operation of the connected Variable Speed Drive.



This image displays the front view of the KEYAYEYA ZONCN Variable Speed Drive Control Panel. It features a rotary knob for speed adjustment, arrow buttons for navigation, and dedicated buttons labeled 'PRG', 'ENTER/DISP', 'RUN', and 'STOP'.

4. SETUP

The DP2-F-O control panel is designed for easy integration with compatible ZONCN Variable Speed Drives. Follow these general steps for setup:

1. **Power Off:** Ensure the Variable Speed Drive and all associated equipment are completely powered off and de-energized before beginning installation.
2. **Mounting:** Mount the control panel securely in the desired location, ensuring it is easily accessible for operation. Refer to the VSD's main manual for specific connection port details.
3. **Connection:** Connect the control panel to the appropriate port on your ZONCN Variable Speed Drive using the provided cable or a compatible cable. Ensure the connection is firm and correct.
4. **Power On:** Once the control panel is securely connected, you may re-apply power to the Variable Speed Drive. The control panel display should illuminate.

Note: For detailed wiring diagrams and specific installation instructions, always refer to the comprehensive manual provided with your ZONCN Variable Speed Drive. Professional installation is recommended.

5. OPERATING INSTRUCTIONS

This section outlines the basic operation of the control panel. For advanced programming and specific drive functions, consult your VSD's main manual.

- **Starting the Drive:** Press the **RUN** button to start the motor connected to the VSD.
- **Stopping the Drive:** Press the **STOP** button to halt the motor.
- **Adjusting Speed:** Rotate the **Rotary Knob** clockwise to increase the motor speed and counter-clockwise to decrease it. The display may show the current speed or frequency.

- **Entering Programming Mode:** Press the **PRG** button to access the drive's parameter settings.
- **Navigating and Adjusting Parameters:** Use the **Arrow Buttons (▲ / ▼)** to scroll through parameters or adjust values.
- **Confirming Selections:** Press the **ENTER/DISP** button to confirm a parameter selection or enter a sub-menu.
- **Display Toggle:** In normal operation, pressing **ENTER/DISP** may cycle through different display values such as output frequency, current, or voltage.

6. MAINTENANCE

Regular maintenance ensures the longevity and reliable operation of your control panel.

- **Cleaning:** Periodically wipe the control panel surface with a soft, dry cloth. Do not use abrasive cleaners, solvents, or excessive moisture, as these can damage the display or buttons.
- **Inspection:** Regularly inspect the control panel and its connecting cable for any signs of physical damage, wear, or loose connections.
- **Environment:** Ensure the operating environment remains within specified conditions (temperature, humidity, dust levels) to prevent premature wear.

7. TROUBLESHOOTING

If you encounter issues with your control panel, consider the following common troubleshooting steps:

- **No Display/Power:** Check if the Variable Speed Drive is powered on. Verify that the control panel cable is securely connected to both the panel and the VSD.
- **Buttons Unresponsive:** Ensure the panel is properly connected. If the issue persists, power cycle the VSD.
- **Incorrect Operation:** Confirm that the control panel is compatible with your specific ZONCN VSD model. Refer to your VSD's main manual for correct parameter settings and operation modes.
- **Error Codes:** If the VSD displays an error code, consult the troubleshooting section of your ZONCN Variable Speed Drive's main manual for detailed explanations and solutions.

If the problem persists after attempting these steps, please contact the merchant for technical guidance.

8. SPECIFICATIONS

Feature	Specification
Model Number	DP2-F-O
Package Dimensions	1 x 1 x 1 inches
Item Weight	6.6 pounds
Batteries Required	No
Included Components	NEW (Control Panel)
Manufacturer	original manufacturer

9. WARRANTY AND SUPPORT

For specific warranty information regarding your KEYAYEYA ZONCN Variable Speed Drive Control Panel, please refer to the documentation provided at the time of purchase or contact the seller directly. Warranty terms may vary.

If you have any questions about the model, require technical guidance after receiving the goods, or need assistance with customs clearance for international shipments, please contact the merchant or seller from whom you purchased the product. They are best equipped to provide support for your specific purchase.